

INTERNATIONAL STANDARD

NORME INTERNATIONALE



**Field device integration (FDI®) –
Part 2: Client**

**Intégration des appareils de terrain (FDI®) –
Partie 2: Client**

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023



THIS PUBLICATION IS COPYRIGHT PROTECTED

Copyright © 2023 IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

Droits de reproduction réservés. Sauf indication contraire, aucune partie de cette publication ne peut être reproduite ni utilisée sous quelque forme que ce soit et par aucun procédé, électronique ou mécanique, y compris la photocopie et les microfilms, sans l'accord écrit de l'IEC ou du Comité national de l'IEC du pays du demandeur. Si vous avez des questions sur le copyright de l'IEC ou si vous désirez obtenir des droits supplémentaires sur cette publication, utilisez les coordonnées ci-après ou contactez le Comité national de l'IEC de votre pays de résidence.

IEC Secretariat
3, rue de Varembe
CH-1211 Geneva 20
Switzerland

Tel.: +41 22 919 02 11
info@iec.ch
www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigendum or an amendment might have been published.

IEC publications search - webstore.iec.ch/advsearchform

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee, ...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and once a month by email.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: sales@iec.ch.

IEC Products & Services Portal - products.iec.ch

Discover our powerful search engine and read freely all the publications previews. With a subscription you will always have access to up to date content tailored to your needs.

Electropedia - www.electropedia.org

The world's leading online dictionary on electrotechnology, containing more than 22 300 terminological entries in English and French, with equivalent terms in 19 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

A propos de l'IEC

La Commission Electrotechnique Internationale (IEC) est la première organisation mondiale qui élabore et publie des Normes internationales pour tout ce qui a trait à l'électricité, à l'électronique et aux technologies apparentées.

A propos des publications IEC

Le contenu technique des publications IEC est constamment revu. Veuillez vous assurer que vous possédez l'édition la plus récente, un corrigendum ou amendement peut avoir été publié.

Recherche de publications IEC -

webstore.iec.ch/advsearchform

La recherche avancée permet de trouver des publications IEC en utilisant différents critères (numéro de référence, texte, comité d'études, ...). Elle donne aussi des informations sur les projets et les publications remplacées ou retirées.

IEC Just Published - webstore.iec.ch/justpublished

Restez informé sur les nouvelles publications IEC. Just Published détaille les nouvelles publications parues. Disponible en ligne et une fois par mois par email.

Service Clients - webstore.iec.ch/csc

Si vous désirez nous donner des commentaires sur cette publication ou si vous avez des questions contactez-nous: sales@iec.ch.

IEC Products & Services Portal - products.iec.ch

Découvrez notre puissant moteur de recherche et consultez gratuitement tous les aperçus des publications. Avec un abonnement, vous aurez toujours accès à un contenu à jour adapté à vos besoins.

Electropedia - www.electropedia.org

Le premier dictionnaire d'électrotechnologie en ligne au monde, avec plus de 22 300 articles terminologiques en anglais et en français, ainsi que les termes équivalents dans 19 langues additionnelles. Egalement appelé Vocabulaire Electrotechnique International (IEV) en ligne.

INTERNATIONAL STANDARD

NORME INTERNATIONALE



**Field device integration (FDI®) –
Part 2: Client**

**Intégration des appareils de terrain (FDI®) –
Partie 2: Client**

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

COMMISSION
ELECTROTECHNIQUE
INTERNATIONALE

ICS 25.040.40; 35.100.05

ISBN 978-2-8322-6442-3

**Warning! Make sure that you obtained this publication from an authorized distributor.
Attention! Veuillez vous assurer que vous avez obtenu cette publication via un distributeur agréé.**

CONTENTS

FOREWORD.....	10
1 Scope.....	12
2 Normative references	12
3 Terms, definitions, abbreviated terms, acronyms and conventions.....	13
3.1 Terms and definitions.....	13
3.1.1 Terms used for Services	14
3.1.2 Terms used for Device Access Services	14
3.2 Abbreviated terms and acronyms	14
3.3 Conventions.....	15
4 Overview	15
5 FDI® Client	16
5.1 Device Access Services	16
5.1.1 General	16
5.1.2 Device Model.....	17
5.1.3 Node model	18
5.1.4 Services	24
5.1.5 Base Property Services	26
5.1.6 Device Model Services	27
5.1.7 Locking Services	40
5.1.8 Direct Access Services	42
5.1.9 Data types	45
5.2 Hosting Services	50
5.2.1 General	50
5.2.2 Services	50
5.2.3 Parameter type definitions	63
6 UIP.....	64
6.1 UIP Services	64
6.1.1 Services	64
6.1.2 Parameter type definitions	68
6.2 UIP instantiation rules.....	69
6.3 UIP state machine.....	70
6.3.1 States	70
6.3.2 State transitions	70
6.4 UIP permissions and restrictions.....	71
6.4.1 Overview	71
6.4.2 Access to local file system.....	71
6.4.3 Export / Import of files	71
6.4.4 Inter-Process Communication (IPC).....	72
6.4.5 Open files based on MIME Type	72
6.4.6 Access to ressources.....	72
6.5 UIP deployment	72
6.5.1 UIP downloads from FDI® Server	72
6.5.2 UIP management on FDI® Client.....	74
7 Actions	74
7.1 General.....	74
7.2 Sequence diagram	75

7.3	FDI® Action schema definition	77
7.4	Interactive transfer to device	78
8	User Interface Description (UID)	79
8.1	Overview	79
8.2	UID execution	82
Annex A	(normative) XML schema	85
A.1	General	85
A.2	AbortRequestT	85
A.3	AccessT	85
A.4	AcknowledgementRequestT	86
A.5	ActionListT	86
A.6	AbortingNotificationT	87
A.7	ActionRequestT	87
A.8	ActionResponseT	88
A.9	ActionT	89
A.10	AxisListT	90
A.11	AxisT	90
A.12	BitEnumerationItemListT	91
A.13	BitEnumerationItemT	92
A.14	ButtonListT	92
A.15	ChartT	92
A.16	ChartTypeT	93
A.17	ColorNameT	94
A.18	ColorT	95
A.19	ColorValueT	95
A.20	ColumnBreakT	95
A.21	DateTimeDataT	96
A.22	DelayMessageRequestT	96
A.23	DiagramLineT	97
A.24	EnumerationItemListT	98
A.25	EnumerationItemT	98
A.26	FormatSpecifierT	99
A.27	GraphT	99
A.28	GridT	100
A.29	HandlingT	100
A.30	ImageT	101
A.31	InfoRequestT	102
A.32	InputRequestT	102
A.33	InputResponseT	103
A.34	InputValueT	103
A.35	InputValueTypeT	104
A.36	LabelHelpT	104
A.37	LabelT	105
A.38	LineTypeT	105
A.39	ListOfActionArgumentsT	106
A.40	MenuT	107
A.41	MenuReferenceT	108
A.42	MenuStyleT	109
A.43	NumericDataT	109

A.44	NumericTemplateT	110
A.45	OptionListT	111
A.46	OrientationT	111
A.47	ParameterInputRequestT	111
A.48	ParameterListT	112
A.49	ParameterT	112
A.50	PluginT	114
A.51	RangeListT	115
A.52	RangeT	115
A.53	ResponseT	116
A.54	RowBreakT	116
A.55	ScalingT	116
A.56	SelectionRequestT	117
A.57	SelectionResponseT	117
A.58	SeparatorT	118
A.59	SizeT	118
A.60	ParameterClassT	118
A.61	ActionClassT	121
A.62	SourceListT	122
A.63	SourceT	123
A.64	StringDataT	123
A.65	StringTemplateT	124
A.66	StringOptionListT	124
A.67	StringOptionT	125
A.68	StringT	125
A.69	TimeScaleT	126
A.70	UidLayoutInformation	126
A.71	UidRequestT	127
A.72	UidResponseT	127
A.73	UiElementSizeableT	128
A.74	UiElementT	128
A.75	UiTemplateT	129
A.76	VariantT	130
A.77	VariantOptionListT	131
A.78	VariantOptionT	131
A.79	VectorListT	132
A.80	VectorT	132
A.81	WaveformListT	133
A.82	WaveformT	133
A.83	WaveformTypeT	134
A.84	WaveformTypeHorizontalT	134
A.85	WaveformTypeVerticalT	134
A.86	WaveformTypeYTT	135
A.87	WaveformTypeXYT	136
A.88	WaveformKeyPointListT	137
A.89	WaveformVectorT	137
A.90	WaveformVectorElementListT	138
A.91	WaveformVectorElementT	138
Annex B (informative)	Action example	140

Annex C (informative) Typical FDI® Client use cases	151
C.1 General.....	151
C.2 Bulk operations	151
C.3 Progress bar support	151
Bibliography.....	153
Figure 1 – FDI® architecture diagram	12
Figure 2 – Overall structure of a Device	17
Figure 3 – Structure of Blocks	18
Figure 4 – Device Model NodeClasses	18
Figure 5 – Example: Variable hierarchy representing a RECORD.....	22
Figure 6 – Variable hierarchy representing a VALUE_ARRAY of RECORDs.....	23
Figure 7 – UIP state machine.....	70
Figure 8 – FDI® Action sequence diagram.....	76
Figure 9 – Sequence diagram interactive transfer to device	79
Figure 10 – User Interface Descriptions	81
Figure 11 – User Interface Description sequence diagram	83
Figure B.1 – Action example (step 1)	145
Figure B.2 – Action example (step 2)	146
Figure B.3 – Action example (step 3)	147
Figure B.4 – Action example (step 4)	148
Figure B.5 – Action example (step 5)	149
Figure B.6 – Action example (step 6)	150
Figure C.1 – Progress bar support	152
Table 1 – BaseNodeClass Attributes	19
Table 2 – Object NodeClass Attributes.....	19
Table 3 – Variable NodeClass Attributes	20
Table 4 – Service Definition Table	24
Table 5 – Service result codes	26
Table 6 – GetDeviceAccessInterfaceVersion Service parameters.....	27
Table 7 – GetOnlineAccessAvailability Service parameters	27
Table 8 – Browse Service parameters.....	28
Table 9 – CancelBrowse Service parameters	29
Table 10 – Read Service parameters	30
Table 11 – Read Service result codes.....	30
Table 12 – Read operation result codes	31
Table 13 – CancelRead Service parameters	32
Table 14 – Write Service parameters	33
Table 15 – Write operation result codes	33
Table 16 – CancelWrite Service parameters	34
Table 17 – CreateSubscription Service parameters.....	35
Table 18 – CreateSubscription Service result codes	35

Table 19 – Subscribe Service parameters	36
Table 20 – Subscribe operation result codes.....	38
Table 21 – Unsubscribe Service Parameters.....	38
Table 22 – Unsubscribe operation result codes.....	38
Table 23 – DeleteSubscription Service parameters	39
Table 24 – DataChangeCallback Service parameters.....	40
Table 25 – DataChangeCallback result codes	40
Table 26 – InitLock Service parameters	41
Table 27 – InitLock Service result codes	41
Table 28 – ExitLock Service parameters	42
Table 29 – ExitLock Service result codes	42
Table 30 – InitDirectAccess Service parameters	43
Table 31 – InitDirectAccess Service result codes	43
Table 32 – ExitDirectAccess Service parameters	44
Table 33 – ExitDirectAccess Service result codes	44
Table 34 – Transfer Service parameters	44
Table 35 – Transfer Service result codes	45
Table 36 – Base data types	45
Table 37 – Identifiers assigned to Attributes	46
Table 38 – NodeSpecifier.....	46
Table 39 – DataValue	47
Table 40 – InnerErrorInfo	48
Table 41 – LocalizedText Definition	48
Table 42 – LocaleId Examples	49
Table 43 – Range Data Type Structure	49
Table 44 – EUInformation Data Type Structure	50
Table 45 – EnumValueType Definition	50
Table 46 – GetClientTechnologyVersion Service parameters	51
Table 47 – OpenUserInterface Service parameters	51
Table 48 – CloseUserInterface Service parameters.....	52
Table 49 – LogAuditTrailMessage Service parameters	52
Table 50 – SaveUserSettings Service parameters.....	53
Table 51 – LoadUserSettings Service parameters	53
Table 52 – Trace Service parameters	54
Table 53 – ShowMessageBox Service parameters	54
Table 54 – ShowProgressBar Service parameters	55
Table 55 – UpdateShowProgressBar Service parameters	55
Table 56 – EndShowProgressBar Service parameters	56
Table 57 – StandardUIActionItemsChange Service parameters.....	56
Table 58 – SpecificUIActionItemsChange Service parameters	57
Table 59 – InitExportFile Service parameters.....	57
Table 60 – WriteExportFile Service parameters	58
Table 61 – FinishExportFile Service parameters	58

Table 62 – InitImportFile Service parameters	59
Table 63 – ReadImportFile Service parameters.....	59
Table 64 – FinishImportFile Service parameters	60
Table 65 – InitOpenDefaultApplication Service parameters	60
Table 66 – WriteOpenDefaultApplication Service parameters.....	61
Table 67 – FinishOpenDefaultApplication Service parameters	61
Table 68 – GetHostingProperties Service parameters	62
Table 69 – GetHostingProperties Key Value Pairs	62
Table 70 – DefaultResult definition	63
Table 71 – ButtonSet definition	63
Table 72 – AcknStyle definition.....	63
Table 73 – Activate Service parameters.....	64
Table 74 – Deactivate Service parameters.....	65
Table 75 – SetSystemLabel Service parameters	66
Table 76 – SetTraceLevel Service parameters	66
Table 77 – GetStandardUIActionItems Service parameters	66
Table 78 – GetSpecificUIActionItems Service parameters.....	67
Table 79 – InvokeStandardUIAction Service parameters.....	67
Table 80 – InvokeSpecificUIAction Service parameters.....	68
Table 81 – TraceLevel definition	68
Table 82 – StandardUIAction definition	69
Table 83 – StandardUIActionItem definition.....	69
Table 84 – SpecificUIActionItem definition.....	69
Table 85 – UIP states	70
Table 86 – UIP state transitions.....	71
Table A.1 – Elements of AbortRequestT	85
Table A.2 – Enumerations of AccessT.....	86
Table A.3 – Elements of AcknowledgementRequestT.....	86
Table A.4 – Elements of ActionListT	86
Table A.5 – Elements of ActionRequestT	88
Table A.6 – Elements of ActionResponseT	89
Table A.7 – Elements of ActionT	90
Table A.8 – Elements of AxisListT	90
Table A.9 – Attributes of AxisT.....	91
Table A.10 – Elements of AxisT	91
Table A.11 – Elements of BitEnumerationItemListT.....	91
Table A.12 – Elements of BitEnumerationItemT	92
Table A.13 – Elements of ButtonListT	92
Table A.14 – Elements of ChartT	93
Table A.15 – Enumerations of ChartTypeT.....	94
Table A.16 – Enumerations of ColorNameT	95
Table A.17 – Enumerations of DateTimeDataT.....	96
Table A.18 – Elements of DelayMessageRequestT	97

Table A.19 – Attributes of DiagramLineT	97
Table A.20 – Elements of DiagramLineT	98
Table A.21 – Elements of EnumerationItemListT	98
Table A.22 – Elements of EnumerationItemT	99
Table A.23 – Elements of GraphT	100
Table A.24 – Elements of GridT	100
Table A.25 – Enumerations of HandlingT	101
Table A.26 – Attributes of ImageT	102
Table A.27 – Elements of ImageT	102
Table A.28 – Elements of InfoRequestT	102
Table A.29 – Elements of InputRequestT	103
Table A.30 – Elements of InputResponseT	103
Table A.31 – Elements of InputValueT	104
Table A.32 – Elements of InputValueTypeT	104
Table A.33 – Elements of LabelHelpT	105
Table A.34 – Elements of LabelT	105
Table A.35 – Enumerations of LineTypeT	106
Table A.36 – Attributes of MenuT	108
Table A.37 – Elements of MenuT	108
Table A.38 – Attributes of MenuReferenceT	108
Table A.39 – Elements of MenuReferenceT	109
Table A.40 – Enumerations of MenuStyleT	109
Table A.41 – Enumerations of NumericDataT	110
Table A.42 – Elements of NumericTemplateT	110
Table A.43 – Elements of OptionListT	111
Table A.44 – Enumerations of OrientationT	111
Table A.45 – Elements of ParameterInputRequestT	112
Table A.46 – Elements of ParameterListT	112
Table A.47 – Elements of ParameterT	114
Table A.48 – Elements of PluginT	115
Table A.49 – Elements of RangeListT	115
Table A.50 – Elements of RangeT	116
Table A.51 – Enumerations of ScalingT	117
Table A.52 – Elements of SelectionRequestT	117
Table A.53 – Elements of SelectionResponseT	118
Table A.54 – Enumerations of SizeT	118
Table A.55 – Enumerations of ParameterClassT	120
Table A.56 – Enumerations of ActionClassT	122
Table A.57 – Elements of SourceListT	123
Table A.58 – Elements of SourceT	123
Table A.59 – Enumerations of StringDataT	124
Table A.60 – Elements of StringTemplateT	124
Table A.61 – Elements of StringOptionListT	125

Table A.62 – Elements of StringOptionT	125
Table A.63 – Elements of StringT	126
Table A.64 – Enumerations of TimeScaleT	126
Table A.65 – Elements of UidLayoutInformation	127
Table A.66 – Elements of UidRequestT	127
Table A.67 – Elements of UidResponseT	128
Table A.68 – Attributes of UiElementSizeableT	128
Table A.69 – Elements of UiElementSizeableT	128
Table A.70 – Elements of UiElementT	129
Table A.71 – Elements of UiTemplateT	130
Table A.72 – Elements of VariantT	131
Table A.73 – Elements of VariantOptionListT	131
Table A.74 – Elements of VariantOptionT	132
Table A.75 – Elements of VectorListT	132
Table A.76 – Elements of VectorT	133
Table A.77 – Elements of WaveformListT	133
Table A.78 – Elements of WaveformT	134
Table A.79 – Elements of WaveformTypeHorizontalT	134
Table A.80 – Elements of WaveformTypeVerticalT	135
Table A.81 – Elements of WaveformTypeYTT	136
Table A.82 – Elements of WaveformTypeXYT	136
Table A.83 – Elements of WaveformKeyPointListT	137
Table A.84 – Attributes of WaveformVectorT	138
Table A.85 – Elements of WaveformVectorT	138
Table A.86 – Elements of WaveformVectorElementListT	138
Table A.87 – Elements of WaveformVectorElementT	139

INTERNATIONAL ELECTROTECHNICAL COMMISSION

FIELD DEVICE INTEGRATION (FDI®) –**Part 2: Client****FOREWORD**

- 1) The International Electrotechnical Commission (IEC) is a worldwide organization for standardization comprising all national electrotechnical committees (IEC National Committees). The object of IEC is to promote international co-operation on all questions concerning standardization in the electrical and electronic fields. To this end and in addition to other activities, IEC publishes International Standards, Technical Specifications, Technical Reports, Publicly Available Specifications (PAS) and Guides (hereafter referred to as “IEC Publication(s)”). Their preparation is entrusted to technical committees; any IEC National Committee interested in the subject dealt with may participate in this preparatory work. International, governmental and non-governmental organizations liaising with the IEC also participate in this preparation. IEC collaborates closely with the International Organization for Standardization (ISO) in accordance with conditions determined by agreement between the two organizations.
- 2) The formal decisions or agreements of IEC on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC National Committees.
- 3) IEC Publications have the form of recommendations for international use and are accepted by IEC National Committees in that sense. While all reasonable efforts are made to ensure that the technical content of IEC Publications is accurate, IEC cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 4) In order to promote international uniformity, IEC National Committees undertake to apply IEC Publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any IEC Publication and the corresponding national or regional publication shall be clearly indicated in the latter.
- 5) IEC itself does not provide any attestation of conformity. Independent certification bodies provide conformity assessment services and, in some areas, access to IEC marks of conformity. IEC is not responsible for any services carried out by independent certification bodies.
- 6) All users should ensure that they have the latest edition of this publication.
- 7) No liability shall attach to IEC or its directors, employees, servants or agents including individual experts and members of its technical committees and IEC National Committees for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication, use of, or reliance upon, this IEC Publication or any other IEC Publications.
- 8) Attention is drawn to the Normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 9) Attention is drawn to the possibility that some of the elements of this IEC Publication may be the subject of patent rights. IEC shall not be held responsible for identifying any or all such patent rights.

IEC 62769-2 has been prepared by subcommittee 65E: Devices and integration in enterprise systems, of IEC technical committee 65: Industrial-process measurement, control and automation. It is an International Standard.

This third edition cancels and replaces the second edition published in 2021. This edition constitutes a technical revision.

This edition includes the following significant technical changes with respect to the previous edition:

- a) added interactive transfer to device;
- b) corrected ListOfInputArguments.

The text of this International Standard is based on the following documents:

Draft	Report on voting
65E/855/CDV	65E/912/RVC

Full information on the voting for its approval can be found in the report on voting indicated in the above table.

The language used for the development of this International Standard is English.

This document was drafted in accordance with ISO/IEC Directives, Part 2, and developed in accordance with ISO/IEC Directives, Part 1 and ISO/IEC Directives, IEC Supplement, available at www.iec.ch/members_experts/refdocs. The main document types developed by IEC are described in greater detail at www.iec.ch/standardsdev/publications.

A list of all parts in the IEC 62769 series, published under the general title *Field device integration (FDI®)*, can be found on the IEC website.

The committee has decided that the contents of this document will remain unchanged until the stability date indicated on the IEC website under "<http://webstore.iec.ch>" in the data related to the specific document. At this date, the document will be

- reconfirmed,
- withdrawn,
- replaced by a revised edition, or
- amended.

IMPORTANT – The "colour inside" logo on the cover page of this document indicates that it contains colours which are considered to be useful for the correct understanding of its contents. Users should therefore print this document using a colour printer.

FIELD DEVICE INTEGRATION (FDI®) –

Part 2: Client

1 Scope

This part of IEC 62769 specifies the FDI^{®1} Client. See Annex C for some typical FDI[®] Client use cases. The overall FDI[®] architecture is illustrated in Figure 1. The architectural components that are within the scope of this document have been highlighted in this figure.

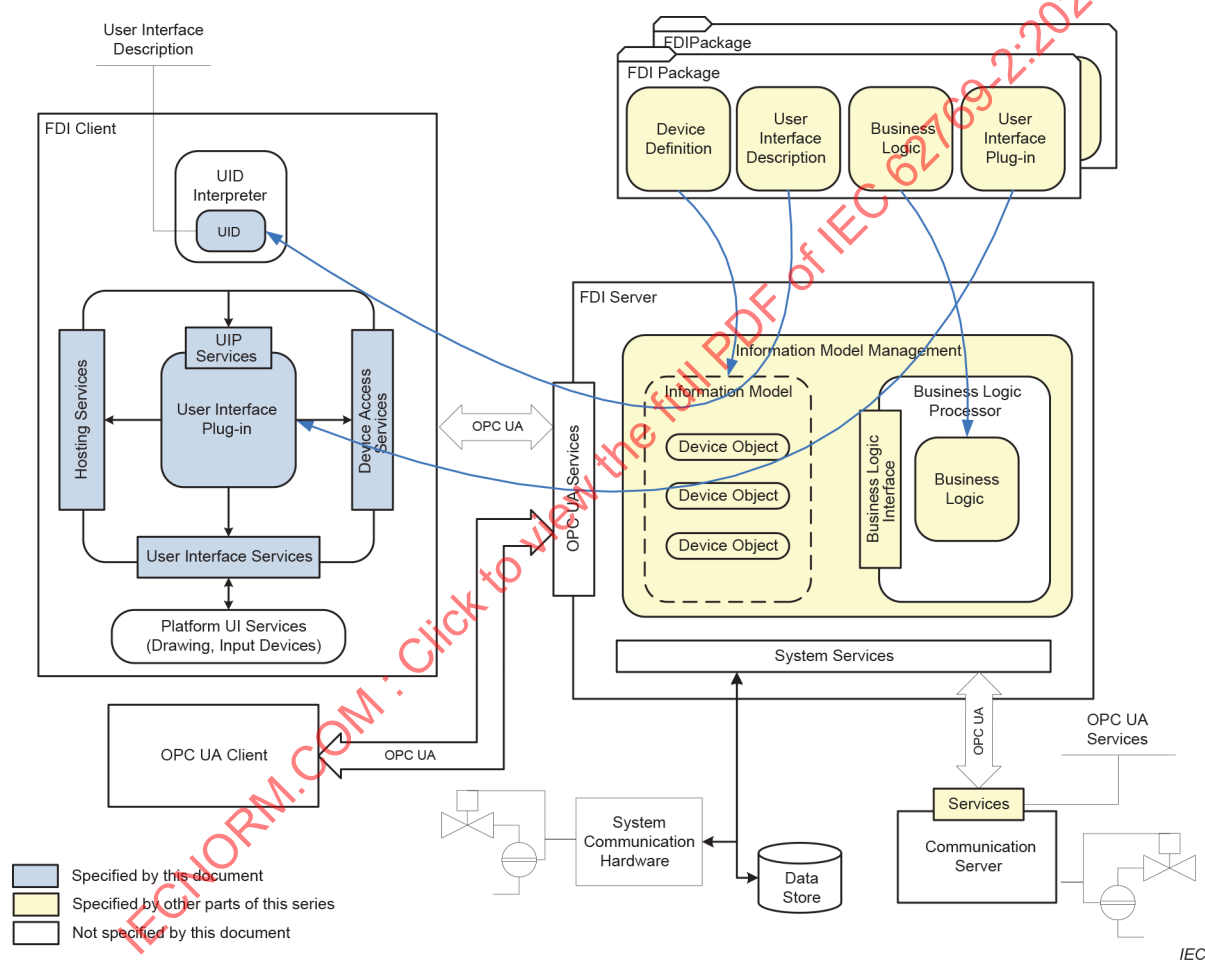


Figure 1 – FDI[®] architecture diagram

2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies.

¹ FDI[®] is a registered trademark of the non-profit organization Fieldbus Foundation, Inc. This information is given for the convenience of users of this document and does not constitute an endorsement by IEC of the trademark holder or any of its products. Compliance does not require use of the trade name. Use of the trade name requires permission of the trade name holder.

For undated references, the latest edition of the referenced document (including any amendments) applies.

IEC 61804-3, *Devices and integration in enterprise systems – Function blocks (FB) for process control and electronic device description language (EDDL) – Part 3: EDDL syntax and semantics*

IEC 61804-4, *Devices and integration in enterprise systems – Function blocks (FB) for process control and electronic device description language (EDDL) – Part 4: EDD interpretation*

IEC 62443-3-3, *Industrial communication networks – Network and system security – Part 3-3: System security requirements and security levels*

IEC 62541-3, *OPC Unified Architecture – Part 3: Address Space Model*

IEC 62541-4, *OPC Unified Architecture – Part 4: Services*

IEC 62769-1, *Field Device Integration (FDI®) – Part 1: Overview*

IEC 62769-3, *Field Device Integration (FDI®) – Part 3: Server*

IEC 62769-4, *Field Device Integration (FDI®) – Part 4: FDI® Packages*

IEC 62769-5, *Field Device Integration (FDI®) – Part 5: FDI® Information Model*

IEC 62769-6 (all parts), *Field Device Integration (FDI®) – Part 6: FDI® Technology Mappings*

ISO/IEC 10918-1, *Information technology – Digital compression and coding of continuous-tone still images: Requirements and guidelines*

ISO/IEC 15948, *Information technology – Computer graphics and image processing – Portable Network Graphics (PNG): Functional specification*

ISO 639, *Language codes*

ISO 3166, *Country codes*

IEEE Std 754, *IEEE Standard for Floating-Point Arithmetic*

IETF RFC 2083, *PNG (Portable Network Graphics) Specification Version 1.0*

IETF RFC 3066, *Tags for the Identification of Languages*

3 Terms, definitions, abbreviated terms, acronyms and conventions

3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in IEC 62769-1 and the following apply.

ISO and IEC maintain terminology databases for use in standardization at the following addresses:

- IEC Electropedia: available at <https://www.electropedia.org/>
- ISO Online browsing platform: available at <https://www.iso.org/obp>

3.1.1 Terms used for Services

3.1.1.1

Locking Services

set of Services through which access to a Device is controlled

3.1.1.2

Device Model Services

sub-set of the Device Access Services through which a UIP can access the information of a Device

3.1.1.3

Direct Access Services

sub-set of the Device Access Services through which a UIP can directly access a Device

3.1.2 Terms used for Device Access Services

3.1.2.1

Attribute

information element of a Node

Note 1 to entry: Some Attributes exist for all NodeClasses and some are specific to a given NodeClass.

Note 2 to entry: Supersedes the definition given in IEC 62769-1.

3.1.2.2

Device Model

hierarchy of Nodes that represents an existing Device

3.1.2.3

Node

element in the Device Model that can be addressed via the Device Access Services

Note 1 to entry: Supersedes the definition given in IEC 62769-1.

3.1.2.4

NodeClass

either an Object or a Variable

Note 1 to entry: Supersedes the definition given in IEC 62769-1.

3.1.2.5

Object

instance of the Object NodeClass

Note 1 to entry: Supersedes the definition given in IEC 62769-1.

3.1.2.6

Variable

instance of the Variable NodeClass

Note 1 to entry: Supersedes the definition given in IEC 62769-1.

3.2 Abbreviated terms and acronyms

For the purposes of this document, the abbreviated terms and acronyms given in IEC 62769-1 and the following apply.

UTC	Coordinated Universal Time
XML	Extended mark-up language

3.3 Conventions

Conventions for service definitions are identical to IEC 62541-4.

Basic data types used are defined in IEC 62541-3.

"Parameter" is always an Information Model Parameter. "parameter" is the general use of the word. If ambiguous, additional context is given.

Capitalization of the first letter of words is used in the IEC 62769 series to emphasize an FDI® defined term.

4 Overview

An FDI® Package provides the necessary information for a Device Type to allow managing the Device within the system. It is provided by a device vendor and deployed in an FDI® Server. It can contain two types of user interface components that are available to the FDI® Client for display to a user. An FDI® Package can contain only one type or both types. The two types are referred to as User Interface Plug-ins and User Interface Descriptions.

A User Interface Plug-in (UIP) is an executable element. A UIP is provided by an FDI® Package and transferred to the FDI® Client by the FDI® Server. A UIP provides a set of UIP Services that the FDI® Client uses to initialize and interact with the UIP.

NOTE 1 IEC 62769-6 series defines application programming interfaces for the services described in this document.

User Interface Descriptions (UIDs) are defined using EDDL. A UID is provided to the FDI® Client by the FDI® Server. The FDI® Client uses the UID Interpreter to interpret and execute the UID. A UID can make use of other UID and UIP components as subcomponents in order to provide a modular approach and make the best use of both descriptive and executable user interface elements.

NOTE 2 UIPs can make use of other UIPs but not of other UIDs.

The FDI® Server makes UIDs and UIPs available to the FDI® Client via the Information Model. The Information Model organizes the UIDs and UIPs by Device Type.

The FDI® Client provides the execution environment for UIPs. The FDI® Client loads the UIP from the FDI® Server.

The FDI® Client's UIP execution environment consists of the following sets of services that are made available to the UIP:

- Device Access Services;
- Hosting Services;
- User Interface Services;
- Printing Services (if available in the hosting environment).

NOTE 3 It is implementation specific whether different UIPs get the same or different interface instances to access these services. The only requirement is that there is no side-effect if two UIPs use the same instance of an interface.

Similar to the FDI® Client, each UIP shall also provide a set of services (UIP Services) by which the FDI® Client activates, controls and shuts down UIPs (see 6.1).

The Device Access Services enable interaction between the UIP and the FDI® Server-maintained Information Model. The FDI® Client takes care of the interaction with the FDI® Server freeing the UIP to focus on the application level only.

UIP access to the Information Model (IM) via the Device Access Services is restricted to the Device and its sub-devices.

The Hosting Services are provided by the FDI® Client for use by the UIP. The Hosting Services include services related to the FDI® Client allowing the UIP to acquire information about the environment.

The User Interface Services provide the means by which the UIP accesses the user interface services of the underlying operating system. These services provide access to the screen, keyboard, mouse, and other operating system resources. The User Interface Services are defined by the chosen implementation technology and therefore no additional definitions are included in this document (see IEC 62769-6 series for the individual technologies). UIPs shall use the Hosting Services to display message boxes or progress bars and shall never use comparable services provided by the underlying operating system.

There are no printing services provided by the Client. If a UIP needs to generate a printout, it accesses the printing services of the underlying operating system. No additional definitions are included in this document.

The FDI® Client uses the culture setting of the currently signed-in user for the execution environment of the UIP. It uses the culture when creating OPC UA Sessions and it sets the culture for each thread it creates. UIPs shall take care for culture setting in all threads that they create.

The FDI® Client provides a UID Interpreter that is used to interpret and execute UIDs. The UID XML Schema is defined in this document (see Annex A).

Business Logic is executed in the FDI® Server. Some Business Logic can be exposed to the FDI® Client as Actions (see Clause 7) and can be triggered by FDI® Clients.

5 FDI® Client

5.1 Device Access Services

5.1.1 General

The Device Access Services provide access to both the online and offline information of a Device or its components as defined by the FDI® Package, in particular for

- browsing the Device Model,
- reading / writing of data and subscribing to data changes,
- controlling access to the Device, and
- directly communicating with the Device.

The scope for the Device Access Services will be a Device, Block, or Communication Server to which the UIP is assigned. The FDI® Client is expected to map the Device Access Services to OPC UA services provided by the FDI® Server.

The main Services are the Device Model Services to view and access Parameters. The Locking Services are used to control simultaneous access to a Device. The Direct Access Services allow a UIP to communicate with the Device.

Whether and how the different services are mapped to real interfaces is defined in the IEC 62769-6 series for the individual technologies. IEC 62769-6 series also specifies how interfaces are obtained.

5.1.2 Device Model

The Device Model defines the structure of all data that are available to a UIP. It is confined to a single device instance. The entities in the structure (Parameters, Images, and Documents) are built from FDI® Package information. User interface elements, like Menus, Graphs, Waveforms, are not part of the UIP Device Model.

All Device elements are organized as a defined hierarchy. The root of the hierarchy can be either a Device or a Block subject to where (by which MENU) the UIP is referenced in the User Interface Description of the FDI® Package (see IEC 62769-4). The Nodes in the hierarchy are either Objects or Variables, where the main difference is that Variables provide a Value. Figure 2 illustrates the overall structure of a Device. Figure 3 shows the structure of a block in more detail. The elements that will really be available depend on the contents of the respective FDI® Package. Regular rectangles represent Object Nodes while the ones with rounded corners represent Variable Nodes. These NodeClasses are defined in 5.1.3. The top left Node is the root Node. The single hashed lines define the parent-child relationship in the hierarchy. As an example, the children of Device1 in Figure 2 are ParameterSet, ImageSet, Documentation, Blocks and SubDevices. The children of /SubDevices/Device_1b/ImageSet are Image_1 and Image_2.

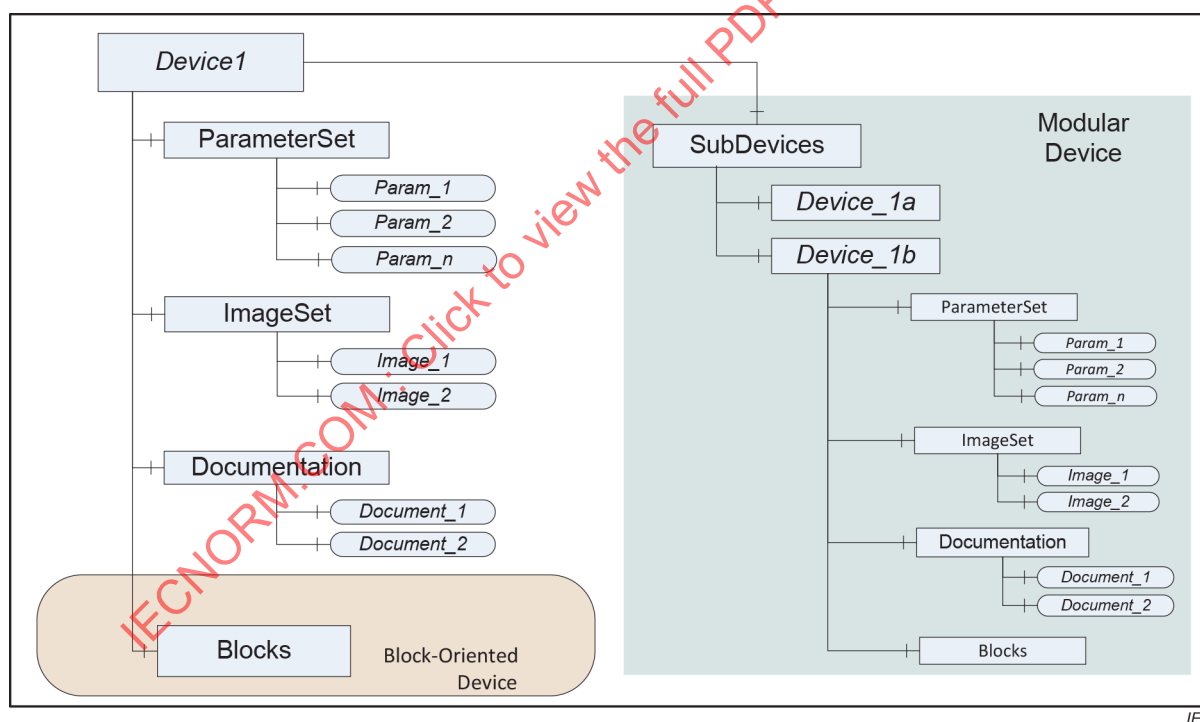


Figure 2 – Overall structure of a Device

Names that are in normal font are defined by the Device Access Services; names in italics are just place-holders for the real names as defined in the FDI® Package.

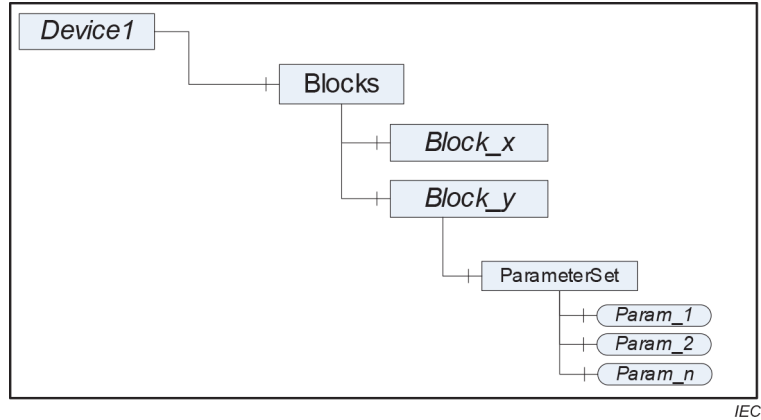


Figure 3 – Structure of Blocks

Each Node in the hierarchy is uniquely qualified with its pathname. This pathname is a concatenation of the individual Node Name Attributes. The separator is "/".

EXAMPLE The following examples illustrate qualified pathnames:

```

/
    -- the root Node (here "Device1")

/ParameterSet/Param_2
    -- a Variable Node

/SubDevices/Device_1b/ImageSet/Image_1
    -- a picture
    
```

Certain Variables in the FDI® Package may be tagged as "private" meaning they are non-browsable. Though they are non-browsable, they exist in the Device Model and can be addressed with their pathname.

5.1.3 Node model

5.1.3.1 General

The information of a Device is organised as a hierarchy of Nodes. Each Node is either an Object or a Variable. Both Object and Variable are derived from the BaseNodeClass, as illustrated in Figure 4.

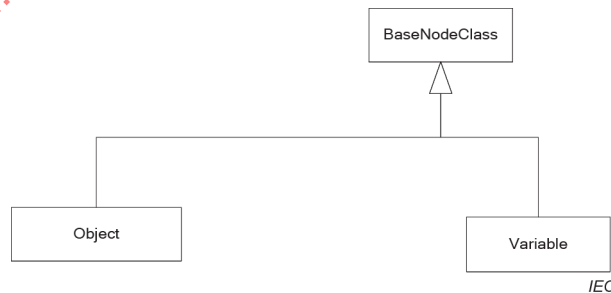


Figure 4 – Device Model NodeClasses

5.1.3.2 BaseNodeClass

This is the abstract parent NodeClass for Object and Variable Nodes. The BaseNodeClass Attributes are shown in Table 1. The Attributes of this NodeClass are available in both Object and Variable NodeClasses.

Table 1 – BaseNodeClass Attributes

Attribute	Datatype	Description
NodePath	String	Qualified path of the Node in the Device Model. This Attribute is returned by the Browse Service and cannot be read or written.
Name	String	Name of Node according to device specific documentation.
Label	LocalizedText	Human readable label of the Node.
Description (optional)	LocalizedText	Human readable help string describing the Node.

Additional Attributes will be available for derived NodeClasses. For example, a Variable will have Attributes that define the DataType and the AccessRights.

5.1.3.3 Object NodeClass

Table 2 contains the list of Attributes for Objects beyond those inherited from the Base NodeClass:

Table 2 – Object NodeClass Attributes

Attribute	Datatype	Description
LockedStatus	Boolean	This Attribute when "true" indicates that this Object is currently locked. The service result code Bad_AttributeInvalid defines that locking is not supported for this Object at all.

5.1.3.4 Variable NodeClass

5.1.3.4.1 General

Variables are used to represent Parameters, images and documents. When reading Variables that represent images or documents the system will provide them as a ByteString. For documents, the Name Attribute will consist of the filename including the extension that can be used to identify the document type. FDI® supports ".pdf" and ".txt". For the representation of images, see 5.1.3.4.2.

Table 3 contains the list of Attributes for Variables beyond those inherited from the BaseNodeClass.

Table 3 – Variable NodeClass Attributes

Attribute	Datatype	Description
Value	Variant	The value of the Variable as returned from the device (i.e. without applying the ScalingFactor). The Variant is specified in 5.1.9.4.
DataType	UInt32	The DataType Attribute specifies the data type of the Value Attribute. One of the data types specified in 5.1.9. IEC 62769-6 series specifies the assignment of unique identifiers to each type.
ValueRank	Int32	Indicates whether the Value Attribute is an array. It may have the following values: >1 (MoreDimensions) – the value is an array with the specified number of dimensions. 1 (OneDimension) – the value is an array with one dimension. 0 (OneOrMoreDimensions) – the value is an array with one or more dimensions. -1 (Scalar) – the value is not an array. -2 (Any) – the value can be a scalar or an array with any number of dimensions. -3 (ScalarOrOneDimension) – the value can be a scalar or a one dimensional array.
ArrayDimensions (optional)	UInt32[]	Specifies the length of each dimension for an array value. The Attribute is intended to describe the capability of the Variable, not the current size. The number of elements shall be equal to the value of the ValueRank Attribute. Shall be null if ValueRank <= 0. A value of 0 for an individual dimension indicates that the dimension has a Variable length. For example, if a Variable is defined by the following C array: Int32 myArray[346]; then this Variable's DataType would point to an Int32, the Variable's ValueRank has the value 1 and the ArrayDimensions is an array with one entry having the value 346.
AccessRights	Byte	The access rights for the Value. An enumeration with one of the following values: NONE_0 The Variable value cannot be accessed READ_1 The value of the Variable may be read WRITE_2 The value of the Variable may be written READORWRITE_3 The value of the Variable may be read or written
UserAccessRights	Byte	This Attribute specifies the access rights to the Value for the currently authenticated user. They may be less than the potential access rights. The same enumeration as for AccessRights is used.
ScalingFactor (optional)	Double	This Attribute specifies a suggested scaling factor. Note that the Value Attribute contains the raw value returned from the device. It is assumed, that the (raw) value is multiplied by this factor before being displayed.
EngineeringUnits (optional)	EUInformation	EngineeringUnits specifies the units for the value (e.g., degree Celsius, hertz, seconds). See 5.1.9.3.8 for the definition of the EUInformation data type.

Attribute	Datatype	Description
Attributes for analog Variables (Variables that represent continuously-variable physical quantities (e.g., pressure, temperature)).		
EURange (optional)	Range[]	Defines one or more value ranges likely to be obtained in normal operation. They are intended for such use as automatically scaling a bar graph display. Sensor or instrument failure or deactivation can result in a returned item value that is actually outside this range. UIP software shall be prepared to deal with this. See 5.1.9.3.7 for the definition of the Range data type. Ranges may change during operation, for example by changing the operation mode of an instrument. Like the Value itself, Ranges are always unscaled (i.e. without applying the ScalingFactor).
Attributes for discrete (enumerated) Variables (for data that may take on only a certain number of possible values (e.g., OPENING, OPEN, CLOSING, CLOSED)).		
CurrentLabel	String	Enumerated Variables expose the current numeric state in their Value Attribute. The CurrentLabel Attribute provides the name of the current enumeration value.
EnumValues	EnumValuesType[]	EnumValues is an array of {StateValue, Enumeration Name, and Help Information}. See 5.1.9.3.9 for the definition of this type. FDI® Clients/UIPs can read this Attribute in advance and store it for lookup of name or help when they receive the numeric representation.
Attributes for bit-enumerated Variables (for data that represent a bit mask).		
OptionNames	String[]	Bit-enumerated Variables transmit a bit mask encoded in an unsigned integer of a length that is sufficient to represent all bits. The OptionNames Attribute provides a human-readable representation for each valid bit of the bit mask. The order of the bits of the bit mask points to a position of the array of Strings in the OptionNames Attribute, i.e., the first bit points to the first entry in the array, and so on. The array contains an empty String for each bit that has no specific meaning.

5.1.3.4.2 Representation of images

All images have the DataType and are transferred as a ByteString. FDI® supports three image formats. To identify the format of the image provided in the ByteString, the initial bytes have to be parsed as shown below.

Image type	Description																		
GIF	Defines an image in GIF (Graphics Interchange Format). GIF is specified in http://www.w3.org/Graphics/GIF/spec-gif89a.txt . The first bytes of a GIF image are as follows: <table><tr><td>Byte</td><td>1</td><td>2</td><td>3</td></tr><tr><td>Hex</td><td>47</td><td>49</td><td>46</td></tr></table>	Byte	1	2	3	Hex	47	49	46										
Byte	1	2	3																
Hex	47	49	46																
JPG	Defines an image in JPG (Joint Photographic Experts Group File Interchange Format). JPG is defined in ISO/IEC 10918-1. The first bytes of a JPG image are as follows: <table><tr><td>Byte</td><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>Hex</td><td>FF</td><td>D8</td><td>FF</td><td>E0</td></tr></table>	Byte	1	2	3	4	Hex	FF	D8	FF	E0								
Byte	1	2	3	4															
Hex	FF	D8	FF	E0															
PNG	Defines an image in PNG (Portable Network Graphics format). PNG is defined in IETF RFC 2083 and ISO/IEC 15948. The first bytes of a PNG image are as follows: <table><tr><td>Byte</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr><tr><td>Hex</td><td>89</td><td>50</td><td>4E</td><td>47</td><td>0D</td><td>0A</td><td>1A</td><td>0A</td></tr></table>	Byte	1	2	3	4	5	6	7	8	Hex	89	50	4E	47	0D	0A	1A	0A
Byte	1	2	3	4	5	6	7	8											
Hex	89	50	4E	47	0D	0A	1A	0A											

5.1.3.4.3 Representation of records

A Variable hierarchy is used to represent EDDL RECORD Parameters. The root Variable represents the record itself. It will have component Variables that represent the EDDL RECORD MEMBERS (the MEMBERS of an EDDL RECORD are defined in EDDL by means of a reference to an EDDL VARIABLE.).

An example of how a record is represented in the Device Model is shown in Figure 5.

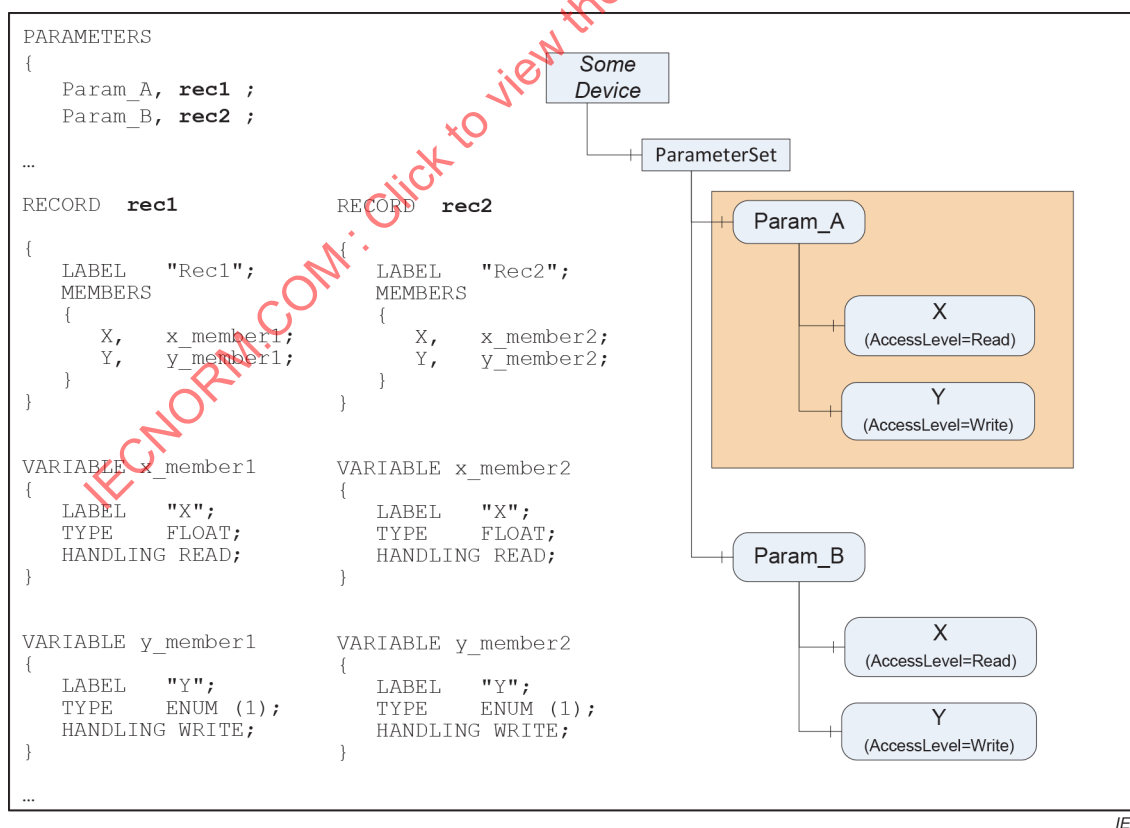


Figure 5 – Example: Variable hierarchy representing a RECORD

The Name and Label Attributes of the root Variable are set to the name of the RECORD and the LABEL Attribute, respectively. The DataType Attribute of the "root" Variable is Variant. The ValueRank Attribute is used to specify that the Value contains an array. The Value Attribute represents the values of all members in the order as defined for the RECORD. According to the example in Figure 5, the first variant will be a FLOAT and the second will be an ENUM.

For each component Variable that represents an EDDL RECORD MEMBER,

- the Name Attribute is set to the identifier of the corresponding EDDL VARIABLE,
- the Label is the LABEL Attribute of the corresponding EDDL VARIABLE,
- the Description is the HELP Attribute of the corresponding EDDL VARIABLE, and
- the AccessRights Attribute is derived from the EDDL HANDLING Attribute.

Each member of the record can be accessed with its pathname as specified above. Browsing can also be used.

EXAMPLE Example of a pathname: /ParameterSet/Param_A/X.

5.1.3.4.4 Representation of arrays, and lists of members with simple data types

A single Variable will represent an EDDL VALUE_ARRAY or LIST item when the data type of the referenced array element has a simple data type.

The DataType Attribute is set to one of the base data types (see 5.1.9.2).

The ValueRank Attribute is used to specify that the Value contains an array. In case of an EDDL VALUE_ARRAY, the number of elements is exposed via the ArrayDimensions Attribute. In the case of an EDDL LIST, the number of elements is unspecified since the size can change dynamically.

5.1.3.4.5 Representation of arrays, and lists of RECORDs

Value arrays or lists of non-simple EDDL Parameters will be represented as an array of Variable hierarchies. Figure 6 shows the EDDL sample code of a VALUE_ARRAY of RECORDs and the corresponding Variable hierarchy.

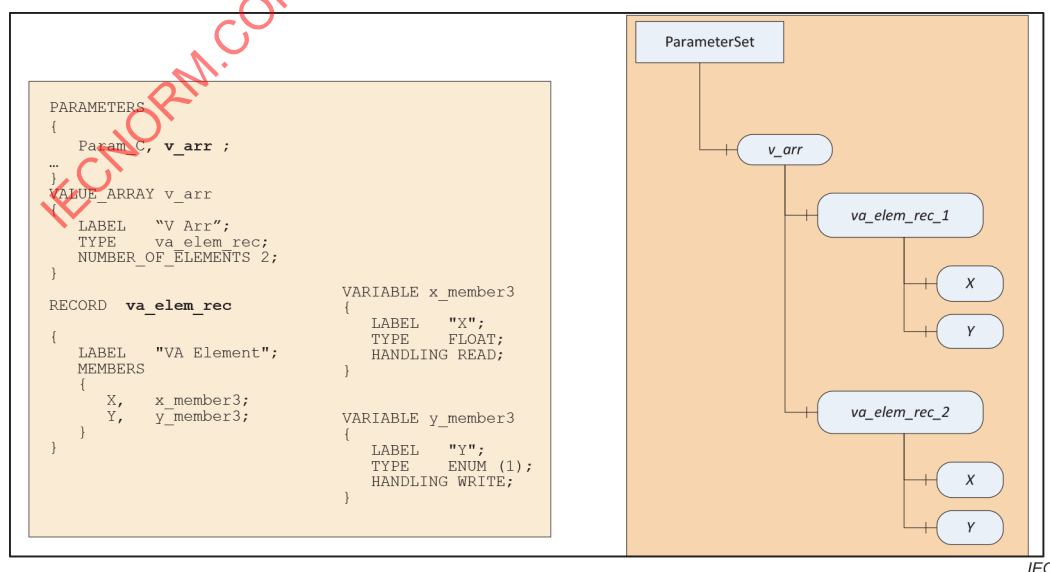


Figure 6 – Variable hierarchy representing a VALUE_ARRAY of RECORDs

The Name and Label Attributes of the root Variable are set to the name of the ARRAY and the LABEL Attribute, respectively. The DataType Attribute of the "root" DataVariable is Variant. The ValueRank Attribute is used to specify that the Value contains an array. The Value Attribute represents all VALUE_ARRAY entries. The first Variant corresponds to the first array entry and so on. Each Variant in turn contains an array. This may either be an array of simple types or an array of Variants. A RECORD is always represented as an array of Variant.

The VALUE_ARRAY element, which is in fact a RECORD, is represented as a component Variable hierarchy. The Name and Label Attributes of each root Variable representing a RECORD are set to the name of the RECORD and the LABEL Attribute, respectively. The array index (_1, _2) is appended to allow unique identification. Note that the index always begins with '1'.

The RECORD MEMBERS are also represented as component Variables as specified in 5.1.3.4.3.

Members of each record can be accessed with a pathname. Browsing can also be used.

EXAMPLE Example of a pathname: /ParameterSet/v_arr/va_elem_rec_2/Y.

5.1.4 Services

5.1.4.1 General

All Services specified in this part of IEC 62769 rely on the conventions defined in 5.1.4.2. They are specified in an abstract manner with request and response parameters in a single table.

Programmatic access to the services may be synchronous or asynchronous (see IEC 62769-6 series for the individual technologies). However, asynchronicity exists to maintain responsiveness of the User Interface. Service execution shall always be assumed to be sequential.

5.1.4.2 Conventions for service definitions

The service specifications use tables to describe service parameters, as shown in Table 4. Parameters are organised in this table into request parameters and response parameters.

Table 4 – Service Definition Table

Name	Type	Description
Request		Defines the request parameters of the service
simple Parameter Name	simple data type	Description of this parameter
constructed Parameter Name	structure	Description of the constructed parameter
component Parameter Name	structure or simple data type	Description of the component parameter
Response		Defines the response parameters of the service

The Name, Type and Description columns contain the name, data type and description of each parameter. All parameters are mandatory, although some may be unused under certain circumstances. The description column specifies the value to be supplied when a parameter is unused. Parameter names always begin with a lower case character. This allows differentiating if name and type are the same, for example, name = "nodeId", type = "NodeId".

Two types of parameters are defined in these tables, simple and constructed. Simple parameters have a simple data type, such as Boolean or String.

Constructed parameters are composed of two or more component parameters, which can be simple or constructed. Component parameter names are indented below the constructed parameter name.

The data types used in these tables may be base types or service-specific types. Base data types are listed in 5.1.9. Data types that are service-specific are defined in the parameter table of the service.

5.1.4.3 Auditing

Auditing is a requirement in many systems. It provides a means for tracking activities that occur as part of normal operation of the system. It also provides a means for tracking abnormal behaviour. It is also a requirement from a security standpoint.

When an audit trail is maintained by the system, audit trail records for the Write Service invoked by the UIP will be implicitly created by the system.

In addition, UIPs have means for providing additional audit context information for things that the system cannot know:

- They can call the LogAuditTrailMessage service (see 5.2.2.5). This shall be executed in particular when the DirectAccess Services are used. The UIP shall include sufficient information in the message for precise description of the activity performed.
- They can provide a context text when using the Locking Services (see 5.1.7) or the Direct Access Services (see 5.1.8).

5.1.4.4 Result codes for services and operations

Several of the Device Model Services (e.g. Read and Write) allow specifying an array of elements that shall be processed. The processing of each individual element is called an "operation". This is an important differentiation for error handling as a service execution is considered successful even if individual operations fail. The following list explains the differences between the service result code and operation result codes.

- Service result code
If a service succeeds, the service result code is "Good" and the response parameters are valid. If it fails, the result code is any of the "Bad_..." service failure codes defined in Table 5. In such a case, an InnerErrorInfo (see 5.1.9.3.4) may be provided as well. Programmatic access to service failure codes is specific to the technology and may be based on exceptions (see IEC 62769-6 series).
- Operation result code
The result code for each operation is returned as part of the service-specific response parameters. The status codes for all operation level results are specified in IEC 62769-5. Each service which returns operation level status codes defines its applicable subset.

Operations can return an InnerErrorInfo with each result code other than "Good" if returnInnerErrorInfo="true" in the service request.

The general structure of the StatusCode used for service results and operational results is specified in IEC 62769-5.

Table 5 defines result codes for the services. The column Service in Table 5 lists which code may be returned by which service. Result codes that are specific to an individual service are also specified with the service.

Table 5 – Service result codes

Symbolic id	Description	Service
Bad_AlreadyLocked	The Node is already locked by another FDI® Client.	InitLock
Bad_LockRequired	The passed Node is not yet locked.	Write, DirectAccess
Bad_MaxAgeInvalid	The max age parameter is invalid.	Read
Bad_NodeInvalid	The identifier does not refer to a valid Node in the Device Model. This result code is used both as service- and as operation-level result code.	Browse, InitLock, ExitLock
Bad_NothingToDo	There was nothing to do because the caller passed an empty list of operations.	Read, Write, Subscribe, Unsubscribe
Bad_NotSupported	The Service is not supported for the specified Node or for the Device/Block in general.	Locking, DirectAccess
Bad_RequestCancelled	The request was cancelled by Client / UIP.	All
Bad_SubscriptionIdInvalid	The subscription id is not valid.	Subscribe, Unsubscribe, DeleteSubscription
Bad_Timeout	The operation timed out.	All
Bad_TooManySubscriptions	The FDI® Server has reached its maximum number of subscriptions.	CreateSubscription
Bad_InvalidState	The specified Node is in a state that does not permit this operation.	Services for Locking
Bad_TooManyOperations	The request could not be processed because it specified too many operations.	Read, Write, Subscribe
Bad_UnexpectedError	An unexpected error occurred.	All

UIPs shall always check the StatusCode associated with a result before using it. Results that have an uncertain/warning status associated with them shall be used with care since these results might not be valid in all situations. Results with a bad/failed status shall never be used.

5.1.5 Base Property Services

5.1.5.1 Overview

The Base Property Services provide access to basic Device Access properties.

5.1.5.2 GetDeviceAccessInterfaceVersion

5.1.5.2.1 Description

This service returns the version of the interface that the UIP is using.

5.1.5.2.2 Parameters

Table 6 defines the parameters for the service.

Table 6 – GetDeviceAccessInterfaceVersion Service parameters

Name	Type	Description
Request		
Response		
version	String	FDI® Technology Version of the DeviceAccess interface. The format of the value is xx.yy.zz as defined in IEC 62769-4.

5.1.5.2.3 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.1.5.3 GetOnlineAccessAvailability**5.1.5.3.1 Description**

This service returns a hint as to whether online access is available in principle. This is general information. It does not clarify whether online access to a specific device is possible.

5.1.5.3.2 Parameters

Table 7 defines the parameters for the service.

Table 7 – GetOnlineAccessAvailability Service parameters

Name	Type	Description
Request		
Response		
onlineAccess	Boolean	This value when "false" specifies that online access is not available. "true" indicates basic availability.

5.1.5.3.3 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.1.6 Device Model Services**5.1.6.1 Overview**

The Device Model Services include:

- Browse,
- Read,
- Write,
- Subscription
 - CreateSubscription,
 - Subscribe,
 - Unsubscribe,
 - DeleteSubscription.

The services provide access to the offline representation and the online representation of the Device. The online Nodes for a Device are always present. However, access to data that require communication may be rejected with proper status codes such as Bad_NotConnected.

NOTE The online model does not contain SubDevices. If the UIP uses a path that includes SubDevices to access an online Node, this path will be evaluated in the offline hierarchy.

Cancel services are available for Browse, Read, and Write. The exact definition and mechanics depend on the technology used for the implementation of these services.

5.1.6.2 Browse

5.1.6.2.1 Description

Browses a single level in the hierarchy in the Device Model and returns Attributes for all children of the specified Node.

5.1.6.2.2 Parameters

Table 8 defines the parameters for the service.

Table 8 – Browse Service parameters

Name	Type	Description
Request		
nodeToBrowse	NodeSpecifier	The identifier of the Node to be browsed. See 5.1.9.3.2 for the definition of the NodeSpecifier type.
Response		
browseResult[]	structure	List of Nodes that are on the next level down in the hierarchy. For each Node the following Attributes will be returned.
nodePath	String	See BaseNodeClass in 5.1.3.2.
name	String	See BaseNodeClass in 5.1.3.2.
label	LocalizedText	See BaseNodeClass in 5.1.3.2.

5.1.6.2.3 Service results

No specific Service result codes are defined for Browse. Common StatusCodes are defined in 5.1.4.4.

5.1.6.3 CancelBrowse

5.1.6.3.1 Description

Calling CancelBrowse indicates that the UIP has no further interest in the results of this service. Execution will be stopped when possible.

Cancel is a suggestion to the system. Due to asynchronous execution, the service can already be fully or partially completed.

5.1.6.3.2 Parameters

Table 9 defines the parameters for the service.

Table 9 – CancelBrowse Service parameters

Name	Type	Description
Request		
serviceld	<technology dependent>	The identifier of the service to cancel.
Response		

5.1.6.3.3 Service results

No specific Service result codes are defined for CancelBrowse. Successfully cancelled Browse requests shall respond with Bad_RequestCancelled. Common StatusCodes are defined in 5.1.4.4.

5.1.6.4 Read

5.1.6.4.1 Description

This service is used to read Attributes of Object or Variable Nodes. UIs that need to monitor Variable Attributes for changes shall use the Subscription services instead of Read.

5.1.6.4.2 Parameters

Table 10 defines the parameters for the service.

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

Table 10 – Read Service parameters

Name	Type	Description
Request		
returnInnerErrorInfo	Boolean	A value of "true" requests error information from calls to an underlying system to be returned when available. "false" defines that this information shall not be returned.
attributesToRead[]	Structure	The Attributes to read.
node	NodeSpecifier	The identifier of the Node that contains the Attribute to read. See 5.1.9.3.2 for the definition of the NodeSpecifier type.
attributeId	AttributeId	Numeric identifier of the Attribute to Read. See 5.1.9.3.3.
indexRange	NumericRange	This parameter is used to identify a single element of an array, or a single range of indexes for arrays. If a range of elements is specified, the values are returned as a composite. The first element is identified by index 0 (zero). This parameter is ignored if the specified Attribute is not an array or a structure. However, if the specified Attribute is an array or a structure, and this parameter is null, then all elements are to be included in the range. See 5.1.9.3.6 for a detailed definition.
maxAge	UInt32	Maximum age of the value to be read in milliseconds. If the FDI [®] Server has a cached value no older than maxAge, it will return the cached value rather than requesting a new value from the device. If maxAge is set to 0, the FDI [®] Server shall read a new value from the data source. Values greater than $2^{31} - 1$ (0x7fff ffff) are invalid for maxAge.
Response		
readResult []	DataValue	The StatusCode, Value and timestamps for each Node Attribute that was read. The order of this list matches the order of the attributesToRead request parameter. The DataValue is defined in 5.1.9.3.3.
innerErrorInfos []	InnerErrorInfo	List of error information from calls to an underlying system. See 5.1.9.3.4. Matches the size and order of the attributesToRead request parameter. This list is empty if inner error information was not requested or if no information was encountered in the processing of the request.

5.1.6.4.3 Service results

Table 11 defines values for the Service result code. Other common StatusCodes are defined in 5.1.4.4.

Table 11 – Read Service result codes

Result code	Description
Bad_MaxAgeInvalid	The max age parameter is invalid.

5.1.6.4.4 Operation result codes

Table 12 defines values for the operation status code contained in the DataValue of each readResult element. All operational status codes with their description are in IEC 62769-5.

Table 12 – Read operation result codes

Result code
Good
Good_LocalOverride
Good_PostActionFailed
Good_DependentValueChanged
Uncertain
Uncertain_NoCommunicationLastValue
Uncertain_LastUsableValue
Uncertain_SubstituteValue
Uncertain_InitialValue
Uncertain_SensorNotAccurate
Uncertain_EngineeringUnitsExceeded
Uncertain_SubNormal
Uncertain_DominantValueChanged
Bad
Bad_UserAccessDenied
Bad_ConfigurationError
Bad_NotConnected
Bad_DeviceFailure
Bad_SensorFailure
Bad_OutOfRange
Bad_OutOfService
Bad_NodeInvalid
Bad_AttributeInvalid
Bad_IndexRangeInvalid
Bad_NotReadable

5.1.6.5 CancelRead**5.1.6.5.1 Description**

Calling CancelRead indicates that the UIP has no further interest in the results of this service. Execution will be stopped when possible.

Cancel is a suggestion to the system. Due to asynchronous execution, the service can already be fully or partially completed.

5.1.6.5.2 Parameters

Table 13 defines the parameters for the service.

Table 13 – CancelRead Service parameters

Name	Type	Description
Request		
serviceId	<technology dependent>	The identifier of the service to cancel.
Response		

5.1.6.5.3 Service results

No specific Service result codes are defined for CancelRead. Successfully cancelled Read requests shall respond with Bad_RequestCancelled. Common StatusCodes are defined in 5.1.4.4.

5.1.6.6 Write

5.1.6.6.1 Description

This service is used to write values to one or more Variables. For array values, this service allows writing the entire array, writing individual elements or writing ranges of elements.

Explicit locking is required (see 5.1.7). If the Node is not locked, the request will be rejected with Bad_LockRequired.

The service response is not returned until the write operation has been executed by the system. Rollback is the responsibility of the FDI® Client/UIP.

The values shall have the correct data type.

NOTE No automatic data type translation takes place (see Bad_TypeMismatch operation result code).

5.1.6.6.2 Parameters

Table 14 defines the parameters for the service.

Table 14 – Write Service parameters

Name	Type	Description
Request		
returnInnerErrorInfo	Boolean	A value of "true" requests error information from calls to an underlying system to be returned when available. "false" defines that this information shall not be returned.
variablesToWrite[]	structure	List of Variables to write to. No assumptions should be made about the order of processing this list. If the order matters, separate service requests shall be used.
node	NodeSpecifier	The identifier of the Node that contains the Attribute to write. See 5.1.9.3.2 for the definition of the NodeSpecifier type.
indexRange	NumericRange	See 5.1.9.3.6 for a detailed definition.
value	Variant	Value to write.
Response		
writeResult[]	UInt32	Status codes for operation results as defined in Table 15. The order of this list matches the order of the variablesToWrite request parameter.
innerErrorInfos []	InnerErrorInfo	List of error information from calls to an underlying system. See 5.1.9.3.4. Matches the size and order of the variablesToWrite request parameter. This list is empty if inner error information was not requested or if no information was encountered in processing of the request.

5.1.6.6.3 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.1.6.6.4 Operation result codes

Table 15 defines values for the operation status code contained in the writeResult elements. All operational status codes with their description are in IEC 62769-5.

Table 15 – Write operation result codes

Result code
Good
Good_PostActionFailed
Bad
Bad_UserAccessDenied
Bad_NodeInvalid
Bad_IndexRangeInvalid
Bad_TypeMismatch
Bad_OutOfRange
Bad_NotWritable

5.1.6.7 CancelWrite

5.1.6.7.1 Description

Calling CancelWrite indicates that the UIP has no further interest in the results of this service. Execution will be stopped when possible.

Cancel is a suggestion to the system. Due to asynchronous execution, the service can already be fully or partially completed.

5.1.6.7.2 Parameters

Table 16 defines the parameters for the service.

Table 16 – CancelWrite Service parameters

Name	Type	Description
Request		
serviceld	<technology dependent>	The identifier of the service to cancel.
Response		

5.1.6.7.3 Service results

No specific Service result codes are defined for CancelWrite. Successfully cancelled Write requests shall respond with Bad_RequestCancelled. Common StatusCodes are defined in 5.1.4.4.

5.1.6.8 Subscriptions

5.1.6.8.1 Subscription mechanism

Subscriptions allow the UIP to receive unsolicited callbacks from the FDI® Client when the subscribed Node Attributes change. Subscriptions are a more efficient way to get periodic updates of data than by issuing repeated calls to the Read service, i.e., polling. The UIP creates a subscription by calling the CreateSubscription service (see 5.1.6.8.2). When the CreateSubscription service is called the UIP shall supply a callback parameter with the UIP-specific DataChangeCallback service (see 5.1.6.8.6). After receiving the subscription identifier in the CreateSubscription response, the UIP shall add Node Attributes of interest to the Subscription by calling the Subscribe service.

Once the initial values have been reported, the DataChangeCallback service is only called when Node Attributes change and only the Node Attributes that have changed are reported to the callback. The UIP controls the maximum frequency at which the callback should be invoked by specifying a rate in milliseconds.

After Node Attributes have been subscribed, their values cannot be immediately available and can become available at different times. As such, the initial callback may not include all of the subscribed Node Attributes. Furthermore, it is possible that the initial update for a subscribed Node Attribute will return a Bad or Uncertain StatusCode.

Furthermore, the time span between when a change happens and when the callback is invoked depends on where the information to be changed is maintained. Some values are maintained by the system, which allows immediate notification; others are located in the physical device so that communication is required to access it.

5.1.6.8.2 CreateSubscription Service

5.1.6.8.2.1 Description

This service is used to create a subscription.

5.1.6.8.2.2 Parameters

Table 17 defines the parameters for the service.

Table 17 – CreateSubscription Service parameters

Name	Type	Description
Request		
requestedUpdateRate	UInt32	The fastest rate, in milliseconds, at which the UIP requests to be called back with data changes, specified by the minimum milliseconds to elapse between updates. Regardless of the requested rate, a callback only occurs if data has changed. A rate of "0" indicates that the caller wants to be notified of changes as soon as possible. The service will return the fastest possible rate as revisedUpdateRate.
dataChangeCallback	DataChangeCallback	Callback for sending data change updates to the UIP. See 5.1.6.8.6. The DataChangeCallback is a service implemented and provided by the UIP.
Response		
revisedUpdateRate	UInt32	The actual rate that the FDI® Server will use, expressed as the minimum milliseconds to elapse between updates (if data has changed since the previous update).
subscriptionId	SubscriptionId	The callee-assigned identifier for the subscription. The SubscriptionId type is technology dependent.

5.1.6.8.2.3 Service results

Table 18 defines values for the service result. Common results are defined in 5.1.4.4.

Table 18 – CreateSubscription Service result codes

Result code	Description
Bad_TooManySubscriptions	The FDI® Server has reached its maximum number of subscriptions.

5.1.6.8.3 Subscribe Service

5.1.6.8.3.1 Description

This service is used to add one or more Node Attributes to an existing subscription.

Subscribing is permitted for all Node Attributes.

5.1.6.8.3.2 Parameters

Table 19 defines the parameters for the service.

Table 19 – Subscribe Service parameters

Name	Type	Description
Request		
subscriptionId	SubscriptionId	The identifier for an existing subscription that was returned by the CreateSubscription service.
returnInnerErrorInfo	Boolean	A value of "true" requests error information from calls to an underlying system to be passed in DataChangeCallbacks, when available. "false" defines that this information shall not be returned.
monitoredItemsToAdd[]	structure	The Attributes to add to the subscription.
node	NodeSpecifier	The identifier of the Node that contains the Attribute to subscribe. See 5.1.9.3.2 for the definition of the NodeSpecifier type.
attributeId	AttributeId	Numeric identifier of the Attribute to subscribe. See 5.1.9.3.3.
indexRange	NumericRange	This parameter is used to identify a single element of an array, or a single range of indexes for arrays. If a range of elements is specified, the values are returned as a composite. The first element is identified by index 0 (zero). This parameter is ignored if the specified Attribute is not an array or a structure. However, if the specified Attribute is an array or a structure, and this parameter is null, then all elements are to be included in the range. See 5.1.9.3.6 for a detailed definition.
samplingInterval	Int32	The interval that defines the fastest rate at which the Attribute should be accessed and evaluated. This interval is defined in milliseconds. The value 0 indicates that the FDI® Server should use the fastest practical rate. The value -1 indicates that the default sampling interval defined by the UpdateRate of the Subscription is used. See 5.1.6.8.3.3 for further details on the sampling interval.
uiPHandle	UInt32	A handle (an identifier) provided by the UIP for the subscribed Node Attribute. This handle will be passed together with the data in the DataChangeCallback service so that the UIP can easily associate each changed value with the subscribed Node Attribute. The uiPHandle is likely an index into a table somewhere. It does not have to be unique (there could be multiple subscribed items pointing to the same table entry).
Response		
subscribeResult []	structure	List of results for the subscribed Attributes. The size and order of the list matches the size and order of the attributesToSubscribe request parameter.
statusCode	UInt32	Status code for the respective Attribute to subscribe as defined in Table 20.
monitoredItemId	UInt32	FDI® Server-assigned id for the subscribed Attribute. This id is unique within the Subscription and shall be used when calling Unsubscribe. This parameter is present only if the statusCode indicates that the Attribute was successfully subscribed.
revisedSamplingInterval	Int32	The actual sampling interval that will be used. This value is based on a number of factors, including the capabilities of the underlying system.

Subscribing will succeed even if the current user is not authorized to access the Node Attribute. If this is the case, the initial callback will return the operation result "Bad_UserAccessDenied". Once this denial is cleared away (for instance, after a more powerful user identity is provided), the UIP will receive data changes for this Node Attribute.

It is possible to subscribe to any Attribute – not just the Value. While it may not make sense for all Attributes, monitoring of some Attributes provides additional possibilities. Some examples include:

- monitoring the LockedStatus to determine when the lock by some other client is removed;
- monitoring the CurrentLabel of Enumerations to receive a displayable name rather than a numeric value.

5.1.6.8.3.3 Sampling interval

Each subscribed item is assigned a sampling interval that is either inherited from the updateRate of the Subscription or that is defined specifically to override that rate. The sampling interval indicates the fastest rate at which the value should be sampled in the device for data changes.

The assigned sampling interval defines a "best effort" cyclic rate that is used to sample the item from its source. "Best effort" in this context means that the system does its best to sample at this rate. Sampling at rates faster than this rate is acceptable, but not necessary to meet the needs of the UIP. How the system deals with the sampling rate and how often it actually polls its data source internally is a system implementation detail. However, the time between values returned to the UIP shall be greater than or equal to the sampling interval.

The FDI® Client may also specify 0 for the sampling interval, which indicates that the system should use the fastest practical rate. It is expected that systems will support only a limited set of sampling intervals to optimize their operation. If the exact interval requested by the UIP is not supported, then the most appropriate interval as determined by the system will be assigned and returned to the UIP.

Data may be collected based on a sampling model or generated based on an exception-based model. The fastest supported sampling interval may be equal to 0, which indicates that the data item is exception-based rather than being sampled at some period. When it is exception-based the underlying system does not require sampling.

In many cases, the system has no knowledge of the data update logic. In this case, even though the system samples at the negotiated rate, the data might be updated by the underlying system at a much slower rate. In this case, changes can only be detected at this slower rate.

UIPs should also be aware that the sampling by the system and the update cycle of the device are usually not synchronized, which can lead to additional delays.

5.1.6.8.3.4 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.1.6.8.3.5 Operation result codes

Table 20 defines values for the operation statusCode contained in the results. All operational status codes with their description are in IEC 62769-5.

Table 20 – Subscribe operation result codes

Result code
Good
Bad
Bad_NodeInvalid
Bad_AttributeInvalid
Bad_NotReadable
Bad_UserAccessDenied

5.1.6.8.4 Unsubscribe Service

5.1.6.8.4.1 Description

This service is used to unsubscribe to one or more Node Attributes.

5.1.6.8.4.2 Parameters

Table 21 defines the parameters for the service.

Table 21 – Unsubscribe Service Parameters

Name	Type	Description
Request		
subscriptionId	SubscriptionId	The identifier for an existing subscription that was returned by the CreateSubscription service.
monitoredItemIds[]	UInt32	Identifiers for subscribed Attributes that were returned by the Subscribe service.
Response		
unsubscribeResult[]	UInt32	Status codes for operation results as defined in Table 22. The order of this list matches the order of the monitoredItemIds request parameter.

5.1.6.8.4.3 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.1.6.8.4.4 Operation result codes

Table 22 defines values for the operation status code contained in unsubscribeResult. All operational status codes with their description are in IEC 62769-5.

Table 22 – Unsubscribe operation result codes

Result code
Good
Bad
Bad_UIPHandleInvalid

5.1.6.8.5 DeleteSubscription Service

5.1.6.8.5.1 Description

This service is used to delete a subscription. Due to the asynchronous nature of the callbacks, the UIP can receive additional callbacks for a subscription after the subscription is deleted

5.1.6.8.5.2 Parameters

Table 23 defines the parameters for the service.

Table 23 – DeleteSubscription Service parameters

Name	Type	Description
Request		
subscriptionId	SubscriptionId	The identifier for an existing subscription that was returned by the CreateSubscription service.
Response		

5.1.6.8.5.3 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.1.6.8.6 DataChangeCallback Service

5.1.6.8.6.1 Description

This service is used for sending data change updates to the UIP. This service is implemented and provided by the UIP when calling the CreateSubscription service.

Due to the asynchronous nature of the callbacks, the UIP can receive additional callbacks for a subscription after the subscription is deleted.

5.1.6.8.6.2 Parameters

Table 24 defines the parameters for the service.

Table 24 – DataChangeCallback Service parameters

Name	Type	Description
Request		
subscriptionId	SubscriptionId	Identifier that was returned by the CreateSubscription service
dataChangeData[]	structure	Data that has changed. No specific order of array elements is ensured.
uiPHandle	UInt32	The handle provided by the UIP in the Subscribe service
value	DataValue	The StatusCode, Value and timestamps of the subscribed Node Attribute. The DataValue is defined in 5.1.9.3.3.
innerErrorInfos []	InnerErrorInfo	List of error information from calls to an underlying system. See 5.1.9.3.4. Matches the size and order of the dataChangeData parameter. This list is empty if inner error information was not requested or if no information was encountered in the processing of the request.
Response		

5.1.6.8.6.3 Operation result codes

Table 25 defines values for the operation status code contained in the DataChangeData structure of each values element. In addition, all Read operation status codes apply also (see Table 12). All operational status codes with their description are in IEC 62769-5.

Table 25 – DataChangeCallback result codes

Result code
Bad_WaitingForInitialData

5.1.7 Locking Services

5.1.7.1 Overview

Locking is the means to avoid concurrent modifications to a Device or a Block and its Parameters. UIPs shall use the Locking Services before making changes (for example, write operations and Direct Access Services).

The lock always applies to both the online and the offline version.

When locking a Modular Device, the lock applies to the complete device (including all modules). Equally, when locking a Block Device, the lock applies to the complete Device (including all Blocks).

If no lock is applied to the top-level Device (for Modular Device or for Block Device), the Sub-Devices or Blocks, respectively, can be locked independently.

While locked, requests from other FDI® Clients to write to Parameters, or to perform Direct Access, will be rejected.

The lock is removed when ExitLock is called.

5.1.7.2 InitLock service

5.1.7.2.1 Description

InitLock reserves the specified Device or Block. During a lock, other FDI® Clients will not be able to write to the Parameters of this element. A lock for an element that is already locked by another FDI® Client will be rejected. A UIP can subscribe to the LockedStatus Attribute in order to be informed when the lock is removed by the other Client.

FDI® Clients shall allow "nested" InitLock calls from the same UIP. The FDI® Client expects the same number of ExitLock calls before it actually removes the lock.

FDI® Clients are responsible for preventing simultaneous locks to a Device or Block by independent components that this Client hosts. Such components include the Client itself, independent UIPs or the UID Interpreter.

5.1.7.2.2 Parameters

Table 26 defines the parameters for the service.

Table 26 – InitLock Service parameters

Name	Type	Description
Request		
node	NodeSpecifier	The identifier of the Node (representing a device or block) to be locked. See 5.1.9.3.2 for the definition of the NodeSpecifier type.
context	String	Used to provide context information about the current activity going on in the UIP. This will be used to enhance the Audit Trail.
Response		

5.1.7.2.3 Service results

Table 27 defines values for the Service result code. Other common StatusCodes are defined in 5.1.4.4.

Table 27 – InitLock Service result codes

Result code	Description
Bad_NotSupported	The Node does not support locking.
Bad_AlreadyLocked	The Node is already locked by another FDI® Client or another independent component within the FDI® Client.

5.1.7.3 ExitLock service

5.1.7.3.1 Description

ExitLock removes the lock.

5.1.7.3.2 Parameters

Table 28 defines the parameters for the service.

Table 28 – ExitLock Service parameters

Name	Type	Description
Request		
node	NodeSpecifier	The identifier of the Node (representing a device or block) to be unlocked. See 5.1.9.3.2 for the definition of the NodeSpecifier type.
Response		

5.1.7.3.3 Service results

Table 29 defines values for the Service result code. Other common StatusCodes are defined in 5.1.4.4.

Table 29 – ExitLock Service result codes

Result code	Description
Bad_InvalidState	The Node is not locked.

5.1.8 Direct Access Services

5.1.8.1 Overview

Direct Access Services provide direct communication with a Device. This can be used for operations that cannot or at least not easily be performed through the Device Model Services. Use cases include the transmission of large data buckets from or to the Device, for example, historical data or firmware. The Direct Access Services should not influence the structure and the data integrity of the Device Model. Support of Direct Access Services is mandatory for FDI® Hosts. However, Host Systems shall provide means to disable/enable Direct Access Services on demand. Commissioning engineers or plant operators can then disallow the use of Direct Access in specific scenarios. This can be temporary or even permanent and might apply to the complete or specific parts of the plant. Therefore, UIPs shall not depend on the availability of Direct Access for the initial setup of a Device (e.g. needed for commissioning).

The following behaviour applies when using Direct Access.

- Only one FDI® Client/UIP can use DirectAccess at a given time. While in Direct Access mode, other FDI® Clients or OPC UA Clients, or other UIPs or the UID will not be able to access this Device (not even for Reading).
- The Device shall have been locked prior to entering this mode.
- If Variable Attributes can have changed due to DirectAccess, the UIP shall set the InvalidateCache in the EndDirectAccess argument to "true".

The Direct Access Services include:

- InitDirectAccess,
- Transfer,
- ExitDirectAccess.

Guideline:

These services are not to be used as alternative to Information Model access. Instead, DirectAccess is used for the transfer of data that are not reflected in the Information Model.

5.1.8.2 InitDirectAccess

5.1.8.2.1 Description

This Service initializes the Device for the use of DirectAccess.

5.1.8.2.2 Parameters

Table 30 defines the parameters for the Service.

Table 30 – InitDirectAccess Service parameters

Name	Type	Description
Request		
context	String	Used to provide context information about the current activity going on in the UIP. This will be used to enhance the Audit Trail.
Response		

5.1.8.2.3 Service results

Table 31 defines values for the Service result code. Other common StatusCodes are defined in 5.1.4.4.

Table 31 – InitDirectAccess Service result codes

Result code	Description
Bad_NotSupported	DirectAccess is (currently) not supported.
Bad_LockRequired	The Node has not been locked.
Bad_InvalidState	DirectAccess is already initialized.

5.1.8.3 ExitDirectAccess

5.1.8.3.1 Description

This Service ends the use of DirectAccess.

5.1.8.3.2 Parameters

Table 32 defines the parameters for the Service.

Table 32 – ExitDirectAccess Service parameters

Name	Type	Description
Request		
invalidateCache	Boolean	If "true", any cached values for Device Parameters will be invalidated. This means that these Parameters will be re-read from the Device the next time they are used again.
Response		

5.1.8.3.3 Service results

Table 33 defines values for the Service result code. Other common StatusCodes are defined in 5.1.4.4.

Table 33 – ExitDirectAccess Service result codes

Result code	Description
Bad_InvalidState	The device is not in DirectAccess mode.

5.1.8.4 Transfer

5.1.8.4.1 Description

This service is used to transfer data to and from the Device. The format of send or receive data is protocol specific.

Direct Access by its nature does not allow automatic generation of Audit Trail information that complies with the various regulations. Therefore, UIPs shall invoke the LogAuditTrailMessage Service (see 5.2.2.5) to provide explicit information about what is being transferred.

For other service calls that affect the Device indirectly via the Device Model (Write), the service parameters provide sufficient information.

5.1.8.4.2 Parameters

Table 34 defines the parameters for the service.

Table 34 – Transfer Service parameters

Name	Type	Description
Request		
sendData	String	XML document based on the TransferSendDataT as specified in the communication profile-specific XML schema.
Response		
receiveData	String	XML document based on the TransferResultDataT as specified in the communication profile-specific XML schema.

5.1.8.4.3 Service results

Table 35 defines values for the Service result code. Other common StatusCodes are defined in 5.1.4.4.

Table 35 – Transfer Service result codes

Result code	Description
Bad_InvalidState	The device is not in DirectAccess mode.

5.1.9 Data types

5.1.9.1 General

Subclause 5.1.9 specifies the data types used for Service parameters, Variable values, and the values of other Node Attributes. They may occur either scalar or as an array.

5.1.9.2 Base data types

Table 36 lists base data types, i.e., types that are typically supported native by programming languages.

Table 36 – Base data types

Data Type	Description
Boolean	Defines a value that is either "true" or "false".
String	Represents text as a series of Unicode characters. The actual string representation depends on the technology mapping. See IEC 62769-6 series.
ByteString	A value that is a sequence of Byte values preceded by a 32-bit length.
UtcTime	A DateTime used to define Coordinated Universal Time (UTC) values. All time values are UTC values. FDI® Clients shall provide any conversions between UTC and local time. UtcTime is a 64-bit signed integer that represents the number of 100 nanosecond intervals since January 1, 1601. It corresponds to the Windows FILETIME.
Int8	A signed integer between -128 and 127 inclusive.
Int16	A signed integer between -32 768 and 32 767 inclusive.
Int32	A signed integer between -2 147 483 648 and 2 147 483 647 inclusive.
Int64	A signed integer between -9 223 372 036 854 775 808 and 9 223 372 036 854 775 807 inclusive.
Byte	A value in the range of 0 to 255.
UInt16	An unsigned integer between 0 and 65 535 inclusive.
UInt32	An unsigned integer between 0 and 4 294 967 295 inclusive.
UInt64	An unsigned integer between 0 and 18 446 744 073 709 551 615 inclusive.
Float	Defines a value that shall be according to the IEEE Std 754 single precision data type definition.
Double	Defines a value that shall be according to the IEEE Std 754 double precision data type definition.
Duration	Same representation as Double.

5.1.9.3 Special types

5.1.9.3.1 AttributeIds

AttributeIds are represented as UInt32. Table 37 lists the Attributes and their identifiers.

Table 37 – Identifiers assigned to Attributes

Attribute	Identifier
Name	10
Label	11
Description	12
	...
LockedStatus	30
	...
Value	100
DataType	101
ValueRank	102
ArrayDimensions	103
AccessRights	105
UserAccessRights	106
ScalingFactor	107
	...
EURange	111
EngineeringUnits	112
	...
EnumValues	120
CurrentLabel	121
OptionNames	122
ÖpmgLabel	123

5.1.9.3.2 NodeSpecifier

Each Node in the Device Model (see 5.1.2) is uniquely addressable with its path name qualified by an online/offline specifier. When online is specified, the service shall operate in the online version of the Device Model. When offline is specified, it shall operate in the offline model.

The path name follows the hierarchy of the Device Model as illustrated in 5.1.2. It is a concatenation of the individual names, separated by slash ('/') characters. See 5.1.2 for example path names. All parameters are identified via "/ParameterSet/<ParamName>" , all images via "/ImageSet/<ImageName>", and so on.

Subclauses 5.1.3.4.3 and 5.1.3.4.5 specify the representation of parameters that hold record values or arrays of record values. A pathname for record elements is built by extending the path to the Parameter. See examples in the referenced subclauses. The components of this parameter are defined in Table 38.

Table 38 – NodeSpecifier

Name	Type	Description
NodeSpecifier	structure	Specifies a Node in the Device Model.
nodePath	String	The path description that enables finding a Node in the Information Model.
useOnline	Boolean	If "true" the path addresses a Node in the online model; with "false" a Node in the offline model is referenced.

An empty path name identifies the Root.

5.1.9.3.3 DataValue

This type describes the value of a Node Attribute in the response of a Read and in the DataChangeCallback. The components of this parameter are defined in Table 39.

Table 39 – DataValue

Name	Type	Description
DataValue	structure	The value and associated information.
value	Variant	The Node Attribute value. For the definition of Variant, see 5.1.9.4.
statusCode	UInt32	The StatusCode that defines the ability to access/provide the value. The StatusCode type is defined in IEC 62541-4.
sourceTimestamp	UtcTime	The source timestamp for the value.
serverTimestamp	UtcTime	The server timestamp for the value.

The statusCode is used to indicate the conditions under which a Node Attribute value was generated, and thereby can be used as an indicator of the usability of the value.

It is required to check the StatusCode (as a minimum the Severity) of all results before accessing and using the value.

The sourceTimestamp reflects the timestamp that was applied by the data source. The sourceTimestamp is only returned with the Value Attribute of Variable Nodes. For all other Attributes, the returned sourceTimestamp is set to null.

In the case of a bad or uncertain status, sourceTimestamp is used to reflect the time that the source recognized the non-good status or the time the FDI® Server last tried to recover from the bad or uncertain status.

The serverTimestamp is used to reflect the time that the FDI® Server received a Variable value or knew it to be accurate. In the case of a bad or uncertain status, serverTimestamp is used to reflect the time that the FDI® Server received the status or that the FDI® Server last tried to recover from the bad or uncertain status.

The serverTimestamp is updated each time a new value is received.

5.1.9.3.4 InnerErrorInfo

The Services described in 5.1 return StatusCodes on the service level and on the operation level. These StatusCodes are protocol- independent and device-independent. In cases where a StatusCode results from a call to the underlying system (e.g., communication system, device), the status of the underlying system can be reported via InnerErrorInfo.

The components of this parameter are defined in Table 40.

Table 40 – InnerErrorInfo

Name	Type	Description
InnerErrorInfo	structure	Communication- or Device-specific information.
symbolicId	String	This string shall be used to identify the result of some internal operation. The maximum length of this string is 32 characters. Systems wishing to return a numeric return code should convert the return code into a string and use this string as symbolicId (e.g., "0xC0040007" or "-4").
errorText	LocalizedText	A textual representation of the symbolic id. The maximum length of this text string is 256 characters.

5.1.9.3.5 LocalizedText

This data type defines a structure containing a String in a locale-specific translation specified in the identifier for the locale. Its elements are defined in Table 41.

Table 41 – LocalizedText Definition

Name	Type	Description
LocalizedText	structure	—
text	String	The localized text.
locale	String	The identifier for the locale (e.g. "en-US").

The element locale shall be a string composed of a language component and a country/region component according to IETF RFC 3066. The <country/region> component is always preceded by a hyphen. The format of the LocaleId string is shown below:

<language>[-<country/region>], where
 <language> shall be a two-letter code for a language according to ISO 639 ,
 <country/region> shall be a two-letter code for the country/region according to ISO 3166.

The rules for constructing LocaleIds shall be according to IETF RFC 3066 and shall be restricted as follows:

- This specification permits only zero or one <country/region> component to follow the <language> component.
- This specification also permits the "-CHS" and "-CHT" three-letter <country/region> codes for "Simplified" and "Traditional" Chinese locales.
- This specification also allows the use of other <country/region> codes as deemed necessary by the FDI® Client or the FDI® Server.

Table 42 shows examples of locale ids.

Table 42 – LocaleId Examples

Locale	OPC UA LocaleId
English	en
English (US)	en-US
German	de
German (Germany)	de-DE
German (Austrian)	de-AT

An empty or NULL string indicates that the locale is unknown.

5.1.9.3.6 Numeric Range

Numeric Range is represented as a String. The syntax for the String contains one of the following two constructs. The first construct is the String representation of an individual integer. For example, "6" is valid, but "6,0" and "3,2" are not. The minimum and maximum values that can be expressed are defined by the use of this parameter and not by this parameter type definition. The second construct is a range represented by two integers separated by the colon (":") character. The first integer shall always have a lower value than the second. For example, "5:7" is valid, while "7:5" and "5:5" are not. No other characters, including white-space characters, are permitted.

All indexes start with 0. The maximum index is one less than the length of the array.

When reading with a numeric range outside the bounds of the array, the FDI® Server shall return a partial result if some elements exist within the range. The FDI® Server shall return a Bad_OutOfRange if no elements exist within the range.

When writing a value, the numeric range shall be within the array.

A numeric range can also be used to specify substrings for ByteString and String values.

5.1.9.3.7 Range

This structure defines the range structure needed for the EURange Attribute. It is defined in Table 43.

Table 43 – Range Data Type Structure

Name	Type	Description
Range	structure	"low" and "high" can contain any data type that is appropriate for the data type of the Variable Value Attribute.
low	Variant	Lowest value in the range.
high	Variant	Highest value in the range.

5.1.9.3.8 EUInformation

This structure contains information about the EngineeringUnits. Its elements are defined in Table 44.

Table 44 – EUInformation Data Type Structure

Name	Type	Description
EUInformation	structure	—
unitId	UInt32	Identifier for programmatic evaluation. 0 is used if a unitId is not available.
displayName	LocalizedText	The displayName of the engineering unit is typically the abbreviation of the engineering unit, e.g. "h" for hour or "m/s" for meter per second.
description	LocalizedText	Contains the full name of the engineering unit such as hour or meter per second. An empty text field indicates that no description is available.

5.1.9.3.9 EnumValueType

This Structured DataType is used to represent a human-readable representation of an Enumeration. Its elements are described in Table 45. When this type is used in an array representing human-readable representations of an enumeration, each value of an IntegerRepresentation will be unique in that array.

Table 45 – EnumValueType Definition

Name	Type	Description
EnumValueType	structure	—
value	Int64	The Integer representation of an Enumeration.
displayName	LocalizedText	A human-readable representation of the integer representation of the Enumeration.
description	LocalizedText	A localized description of the enumeration value. This field can contain an empty String if no description is available.

5.1.9.4 Variant

A Variant is a union of all data types. Variants can also contain arrays of any of these types.

Variants can be empty. An empty Variant is described as having a Null value. A Null value in a Variant is not the same as a Null String.

Variants can contain arrays of Variants but they cannot directly contain another Variant.

5.2 Hosting Services**5.2.1 General**

The Hosting Services are provided by the FDI® Client for use by the UIP. The Hosting Services include services related to the FDI® Client environment allowing the UIP to acquire information about the environment. The Hosting Services also include services to launch other UIs as well as showing feedback.

5.2.2 Services**5.2.2.1 General**

Programmatic access to the services may be synchronous or asynchronous.

5.2.2.2 GetClientTechnologyVersion

5.2.2.2.1 Description

This service returns the technology version of the FDI® Client that hosts the UIP.

5.2.2.2.2 Parameters

Table 46 defines the parameters for the service.

Table 46 – GetClientTechnologyVersion Service parameters

Name	Type	Description
Request		
Response		
version	String	FDI® Technology Version that is supported by the FDI® Client. The format of the value is xx.yy.zz as defined in IEC 62769-4.

5.2.2.3 OpenUserInterface Service

5.2.2.3.1 Description

This service is used by a UIP to request the FDI® Client to open another UIP. The UIP is opened in either a modal or a non-modal window as follows:

- UIPs are always invoked in a modal window, if the calling UIP runs in a modal window or if their style is dialog.
- UIPs are invoked non-modal if their style = window and the calling UIP runs in non-modal mode also.

NOTE A technology mapping might provide the capability to explicitly start a UIP modal even if the style is defined differently.

If the UIP is already opened, this service shall bring the respective window into the foreground.

5.2.2.3.2 Parameters

Table 47 defines the parameters for the service.

Table 47 – OpenUserInterface Service parameters

Name	Type	Description
Request		
uiplD	String	Identification of the UIP to be opened. This string is a UUID that defines a Node in the Information Model. The value of this UUID is defined in the FDI® Package corresponding to the UIP to be opened (see IEC 62769-4).
Response		
uipHandle	UInt32	FDI® Client assigned id for the UIP opened. In case of a modal UIP opened, the value is null.

5.2.2.3.3 Service results

There are no service results other than the common codes specified in 5.1.4.4.

5.2.2.4 CloseUserInterface Service

5.2.2.4.1 Description

This service is used by a UIP to close itself or close other UIPs. The called UIP shall finish all pending or running functions that are still open.

5.2.2.4.2 Parameters

Table 48 defines the parameters for the service.

Table 48 – CloseUserInterface Service parameters

Name	Type	Description
Request		
uipHandle	String	Identification of the UIP to be closed. The uipHandle is returned by the OpenUserInterface service. This parameter can be null, if the UIP wants to close itself.
Response		

5.2.2.4.3 Service results

There are no service results other than the common codes specified in 5.1.4.4. If the UIP refuses the Close request, Bad_RequestCancelled should be returned.

5.2.2.5 LogAuditTrailMessage Service

5.2.2.5.1 Description

This service is used by a UIP to log an audit trail message.

5.2.2.5.2 Parameters

Table 49 defines the parameters for the service.

Table 49 – LogAuditTrailMessage Service parameters

Name	Type	Description
Request		
message	String	The message to be logged in the audit trail.
Response		
		None.

5.2.2.6 SaveUserSettings Service

5.2.2.6.1 Description

This service is used by a UIP to instruct the FDI® Client to save the supplied user settings. The settings are stored per UIP type in a persistent store under the control of the FDI® Client. All previously saved user settings of this UIP type are replaced. The FDI® Client shall not alter the user settings requested of the storage.

Typically, user settings include layout information or other user preferences. They are not designed to be used for instance-specific data.

There is no support for partial modifications of the user settings. A UIP shall load all settings, update them and save the complete set.

The structure and content of the user setting strings is UIP type specific. For example, a UIP could use name-value pairs. Versioning issues of this data are under the responsibility of the UIP. Different UIPs of the same type can overwrite each other's settings.

Data structure is completely under control of the UIP. Therefore, also versioning issues with respect to different UIP versions are under the responsibility of the UIP.

5.2.2.6.2 Parameters

Table 50 defines the parameters for the service.

Table 50 – SaveUserSettings Service parameters

Name	Type	Description
Request		
userSetting[]	String	List of user settings. The content of the strings is UIP-type specific.
Response		

5.2.2.7 LoadUserSettings Service

5.2.2.7.1 Description

This service is used by a UIP to instruct the FDI® Client to retrieve the previously saved user settings.

5.2.2.7.2 Parameters

Table 51 defines the parameters for the service.

Table 51 – LoadUserSettings Service parameters

Name	Type	Description
Request		
Response		
userSetting[]	String	List of user settings. The content of the strings is UIP-specific.

5.2.2.8 Trace Service

5.2.2.8.1 Description

This service shall be used by the UIP to provide the FDI® Client with information about internal events in the UIP. The trace messages are typically used for trouble shooting. The UIP shall call this service according to the trace level settings specified in the UIP Service SetTraceLevel (see 6.1.1.4).

5.2.2.8.2 Parameters

Table 52 defines the parameters for the service.

Table 52 – Trace Service parameters

Name	Type	Description
Request		
eventType	TraceLevel	Severity of the trace message. One of the values that specifies the severity of the trace data (see 6.1.2).
classification	String	UIP-specific classification of the trace message.
message	String	Trace message. The trace message language shall be English. Embedded text might be localized.
Response		

5.2.2.9 ShowMessageBox Service

5.2.2.9.1 Description

This service opens a message box and waits until the user presses one of the given buttons. An open message box shall block any activity for the related device instance. It is recommended that simultaneous interactions with other Device instances are not affected.

5.2.2.9.2 Parameters

Table 53 defines the parameters for the service.

Table 53 – ShowMessageBox Service parameters

Name	Type	Description
Request		
acknStyle	AcknStyle	See Table 72.
message	String	Message to be shown to the user.
caption	String	Title bar caption to display.
buttonSet	ButtonSet	See Table 71.
defaultResult	Integer	Id of the default button; see Table 70.
Response		
buttonSelected	Integer	Id of the selected button; see Table 70.

5.2.2.10 ShowProgressBar Service

5.2.2.10.1 Description

This service opens a progress bar. The progress bar remains on the user interface after the service returns. The information shown can be updated with the UpdateShowProgressBar service (see 5.2.2.11). The progress bar can be closed with the EndShowProgressBar service (see 5.2.2.12).

Only one progress bar per UIP can be shown at a time.

5.2.2.10.2 Parameters

Table 54 defines the parameters for the service.

Table 54 – ShowProgressBar Service parameters

Name	Type	Description
Request		
message	String	Message to be shown to the user.
callback	CancelCallback	Service called by the Client to inform the UIP that the user has cancelled the operation. See 5.2.2.13. The CancelCallback service is implemented and provided by the UIP.
Response		

5.2.2.11 UpdateShowProgressBar Service

5.2.2.11.1 Description

This service updates an already open progress bar.

5.2.2.11.2 Parameters

Table 55 defines the parameters for the service.

NOTE A call of this service is rejected without a preceding ShowProgressBar service call.

Table 55 – UpdateShowProgressBar Service parameters

Name	Type	Description
Request		
message	String	Updated message to be shown to the user.
percentage	Integer	Updated percentage of progress to be shown to the user.
Response		

5.2.2.12 EndShowProgressBar Service

5.2.2.12.1 Description

This service closes an open progress bar. The service will wait until the user has pressed a button or will immediately return with the result if the user has previously pressed the button.

5.2.2.12.2 Parameters

Table 56 defines the parameters for the service.

Table 56 – EndShowProgressBar Service parameters

Name	Type	Description
Request		
message	String	Updated message to be shown to the user.
percentage	Integer	Updated percentage of progress to be shown to the user.
Response		

5.2.2.13 CancelCallback Service

5.2.2.13.1 Description

With this service the Client informs the UIP that the User requested to cancel the operation. This service is implemented and provided by the UIP when calling the ShowProgressBar service. The UIP is responsible for closing the ProgressBar.

Due to the asynchronous nature of callbacks, the CancelCallback might be called even after the UIP has called the EndShowProgressBar service.

5.2.2.13.2 Parameters

There are no specific parameters for the service.

5.2.2.14 StandardUIActionItemsChangeCallback Service

5.2.2.14.1 Description

This service is used by the UIP to notify the FDI® Client about the change in the standard UI action items' state (enabled/disabled). See 6.1.2.2 for standard UI action items.

5.2.2.14.2 Parameters

Table 57 defines the parameters for the service.

Table 57 – StandardUIActionItemsChange Service parameters

Name	Type	Description
Request		
Response		
StandardUIActionItems[]	StandardUIActionItem	Updated list of Standard Actions provided by the UIP.

5.2.2.15 SpecificUIActionItemsChangeCallback Service

5.2.2.15.1 Description

This service is used by the UIP to notify FDI® Client about the change in the UI action items that are specific to this UIP. The UIP shall use this callback whenever there is addition or removal of action items or whenever there is a change in the state of an action item (i.e. enabled/disabled). See 6.1.2.4 for specific UI actions.

5.2.2.15.2 Parameters

Table 58 defines the parameters for the service.

Table 58 – SpecificUIActionItemsChange Service parameters

Name	Type	Description
Request		
Response		
SpecificUIActionItems[]	SpecificUIActionItem	Updated list of UI action Items specific to the UIP.

5.2.2.16 InitExportFile Service

5.2.2.16.1 Description

This service is used by the UIP to save a file with access rights of the FDI® Client. A file dialog is opened by the FDI® Client to enter path and filename. The selected path and filename as well as a handle are returned. The handle shall be used in the WriteExportFile and FinishExportFile services to transfer the content of the file to the FDI® Client and finish or cancel the operation.

5.2.2.16.2 Parameters

Table 59 defines the parameters for the service.

Table 59 – InitExportFile Service parameters

Name	Type	Description
Request		
SuggestedFileName	String	The name of the file to be saved. Can be changed by the user. The SuggestedFileName is not fully qualified, and the host manages the default directory where the file should be stored. The user can change the name and path. This is returned as FullyQualifiedFileName.
Filter	String	Filter contains a list of possible file extensions and file types. The user can select one of the options during export. The selected filter is returned in SelectedFilterIndex. For each file extension and file type, the filter string contains a description, followed by the vertical bar () and the filter pattern. The strings for different filtering options are separated by the vertical bar. For example: "Word document (*.docx) *.docx PDF (*.pdf) *.pdf"
SuggestedFilterIndex	Integer	Index into the filter that is selected as default value.
Response		
FullyQualifiedFileName	String	Fully qualified file name where the file was stored.
SelectedFilterIndex	Integer	The selected filter
FileHandle	<technology dependent>	Handle that is used in WriteExportFile and FinishExportFile to identify the overall operation.

5.2.2.17 WriteExportFile Service

5.2.2.17.1 Description

This service is used to transfer data to the file to be exported. UIPs will typically call this service several times to provide the full content of the file.

5.2.2.17.2 Parameters

Table 60 defines the parameters for the service.

Table 60 – WriteExportFile Service parameters

Name	Type	Description
Request		
FileHandle	<technology dependent>	Handle of the file returned in the InitExportFile service.
Data	Byte[]	An array of bytes containing data to be written to the file. The file created with InitExportFile is empty and the first WriteExportFile call for the file starts filling the file from the beginning, all additional calls add the data to the end of the file. Writing an empty array of Bytes returns a Good result code without any effect on the file.
Response		

5.2.2.18 FinishExportFile Service

5.2.2.18.1 Description

This service finalizes the export file operation. It either cancels or finalizes the export of the file.

5.2.2.18.2 Parameters

Table 61 defines the parameters for the service.

Table 61 – FinishExportFile Service parameters

Name	Type	Description
Request		
FileHandle	<technology dependent>	Handle of the file returned in the InitExportFile service. After the call of this service the FileHandle becomes invalid and shall not be used anymore.
DoSave	Boolean	Defines whether the file export should be finalized and the file is stored on disk by the FDI® Client or the export should be aborted.
Response		

5.2.2.19 InitImportFile Service

5.2.2.19.1 Description

This service is used by the UIP to load a file with access rights of the FDI® Client. A file dialog is opened by the FDI® Client to select path and filename. The selected path and filename as well as a handle are returned. The handle shall be used in the ReadImportFile and FinishImportFile to transfer the content of the file to the UIP and finish or cancel the operation.

5.2.2.19.2 Parameters

Table 62 defines the parameters for the service.

Table 62 – InitImportFile Service parameters

Name	Type	Description
Request		
SuggestedFileName	String	The name of the file to be loaded. Can be changed by the user. The SuggestedFileName is not fully qualified, and the host manages the default directory where the file should be loaded. The user can change the name and path. This is returned as FullyQualifiedFileName.
Filter	String	Filter contains a list of possible file extensions and file types. The user can select one of the options during export. The selected filter is returned in SelectedFilterIndex. For each file extension and file type, the filter string contains a description, followed by the vertical bar () and the filter pattern. The strings for different filtering options are separated by the vertical bar. For example: "Word document (*.docx) *.docx PDF (*.pdf) *.pdf"
SuggestedFilterIndex	Integer	Index into the filter that is selected as default value.
Response		
FullyQualifiedFileName	String	Fully qualified file name where the file was loaded from.
SelectedFilterIndex	Integer	The selected filter.
FileHandle	<technology dependent>	Handle that is used in WriteExportFile and FinishExportFile to identify the overall operation.

5.2.2.20 ReadImportFile Service

5.2.2.20.1 Description

This service is used to transfer data from the file to be imported. UIPs typically need to call this service several times to get the full content of the file.

5.2.2.20.2 Parameters

Table 63 defines the parameters for the service.

Table 63 – ReadImportFile Service parameters

Name	Type	Description
Request		
FileHandle	<technology dependent>	Handle of the file returned in the InitExportFile service.
MaxLength	Integer	Defines the length in bytes that should be returned in Data. If the end of file is reached, all data until the end of the file is returned. The FDI® Client is allowed to return less data than specified length. Only positive values are allowed.
Response		
Data	Byte[]	Contains the returned data of the file. If the Byte array is empty, it indicates that the end of the file is reached.

5.2.2.21 FinishImportFile Service

5.2.2.21.1 Description

This service finalizes the import file operation. UIPs can call this service before the end of the file is reached to cancel the import operation.

5.2.2.21.2 Parameters

Table 64 defines the parameters for the service.

Table 64 – FinishImportFile Service parameters

Name	Type	Description
Request		
FileHandle	<technology dependent>	Handle of the file returned in the InitImportFile service. After the call of this service, the FileHandle becomes invalid and shall not be used anymore.
Response		

5.2.2.22 InitOpenDefaultApplication Service

5.2.2.22.1 Description

This service is used by the UIP to advice the FDI® Client to open a file with its registered default application (e.g. PDF, Excel). The FDI® Client may restrict which applications are allowed to use. The operation is split into three services. First, the UIP needs to call InitOpenDefaultApplication, then it needs to call WriteOpenDefaultApplication potentially several times to transfer the data of the file to the FDI® Client and finally FinishOpenDefaultApplication to either cancel the operation or indicate the complete file has been transferred and the FDI® Client shall open the default application for it. How the FDI® Client manages the file is host specific, for example in a temporary folder. UIPs shall not expect that the transferred file is stored persistently by the FDI® Client.

5.2.2.22.2 Parameters

Table 65 defines the parameters for the service.

Table 65 – InitOpenDefaultApplication Service parameters

Name	Type	Description
Request		
SuggestedFileName	String	The name of the file to be saved. Can be changed by the FDI® Client. The SuggestedFileName is not fully qualified, and the FDI® Client is responsible to manage the file.
Response		
FileHandle	<technology dependent>	Handle that is used in WriteOpenDefaultApplication and FinishOpenDefaultApplication to identify the overall operation.

5.2.2.23 WriteOpenDefaultApplication Service

5.2.2.23.1 Description

This service is used to transfer data to the file to be opened by the default applications. UIPs will typically call this service several times to provide the full content of the file.

5.2.2.23.2 Parameters

Table 66 defines the parameters for the service.

Table 66 – WriteOpenDefaultApplication Service parameters

Name	Type	Description
Request		
FileHandle	<technology dependent>	Handle of the file returned in the InitOpenDefaultApplication service.
Data	Byte[]	An array of bytes containing data to be written to the file. The file created with InitOpenDefaultApplication is empty and the first WriteOpenDefaultApplication call for the file starts filling the file from the beginning. All additional calls add the data to the end of the file. Writing an empty array of Bytes returns a Good result code without any effect on the file.
Response		

5.2.2.24 FinishOpenDefaultApplication Service**5.2.2.24.1 Description**

This service finalizes the open default application operation. It either cancels or finalizes the operation when the content of the file to be opened is fully written using the WriteOpenDefaultApplication service.

5.2.2.24.2 Parameters

Table 67 defines the parameters for the service.

Table 67 – FinishOpenDefaultApplication Service parameters

Name	Type	Description
Request		
FileHandle	<technology dependent>	Handle of the file returned in the InitOpenDefaultApplication service. After the call of this service, the FileHandle becomes invalid and shall not be used anymore.
DoOpen	Boolean	Defines whether the default application shall be opened by the FDI® Client or the operation should be aborted.
Response		

5.2.2.25 GetHostingProperties Service**5.2.2.25.1 Description**

This service is used by the UIP to get hosting environment properties as a list of key/value pairs. The content of this list shall be constant during lifecycle of the UIP. For a mandatory property, its key shall exist at any time. A non-mandatory property might be missing completely (no key at all). For any existing key there is always a valid value that shall be able to be used as defined in the description.

5.2.2.25.2 Parameters

Table 68 defines the parameters for the service.

Table 68 – GetHostingProperties Service parameters

Name	Type	Description
Request		
Response		
PropertyList	<technology dependent>	A list of pairs of strings (key, value)

5.2.2.25.3 Key Value Pairs

Table 69 defines the parameters for the service.

Table 69 – GetHostingProperties Key Value Pairs

Key	Value	Mandatory	Description
LocalClientDataPath	<Fully qualified folder path>	No	The FDI® Client provides a fully qualified path to a folder where the UIP has the permission to directly: • open files from; • save files to; • add subfolders to; • delete subfolders from. The folder shall be persistent and shall be accessible by the UIP. All UIPs shall get the same LocalClientDataPath from the FDI® Client, allowing different UIPs or different UIP instances to share data. UIP developers need to be aware of this. A file might be blocked by means of the operating system because it is opened by another UIP and other UIPs might create, manipulate, or delete files and folders under the LocalClientDataPath. It is recommended to create a subfolder for a UIP and manage all UIP data in this subfolder. Host installations might choose a network folder shared by all FDI® Clients to manage the persistent data. However, the LocalClientDataPath might also be a local folder of the FDI® Client. Therefore, the stored data might only be accessible on a specific FDI® Client and different for another FDI® Client of the same FDI® host. It is recommended to store device specific data in the information model of the device, where it is synchronized between FDI® Clients. User settings shall be managed with the LoadUserSettings and SaveUserSettings services and not in the file system in order to provide the same settings between different FDI® Clients of the same FDI® host. This information may only be available for some UIP technology mappings.
Context	{Online, Offline}	Yes	Defines the context (online or offline) from which the UIP is invoked.
currentCountry	<technology dependent>	Yes	Information describing the current country that shall be considered by the UIP for internal globalization purposes. The data type of the value is technology dependent.
currentCulture	<technology dependent>	Yes	Information describing the current culture that shall be considered by the UIP for internal localization purposes. The data type of the value is technology dependent.

5.2.3 Parameter type definitions

5.2.3.1 DefaultResult Definition

The components of this parameter are defined in Table 70.

Table 70 – DefaultResult definition

Name	Type	Description
DefaultResult	Integer	Definition of a button on a message box. Used to specify the default button and the button selected by the user. This value is an enumeration with one of the following values: BUTTONNONE_0 BUTTONOK_1 BUTTONCANCEL_2 BUTTONYES_3 BUTTONNO_4

5.2.3.2 ButtonSet

The components of this parameter are defined in Table 71.

Table 71 – ButtonSet definition

Name	Type	Description
ButtonSet	Integer	Definition of the buttons on a message box or progress bar shown to the user. This value is an enumeration with one of the following values: BUTTONSETOK_0 Only ok button is shown. BUTTONSETOKCANCEL_1 Ok and cancel buttons are shown. BUTTONSETYESNOCANCEL_2 Yes, no, and cancel buttons are shown. BUTTONSETYESNO_3 Yes and no buttons are shown.

5.2.3.3 AcknStyle

The components of this parameter are defined in Table 72.

Table 72 – AcknStyle definition

Name	Type	Description
AcknStyle	Integer	The style of the message box or progress bar shown to the user. For example, this parameter may influence the icon of the message box. This value is an enumeration with one of the following values: ACKNSTYLEINFO_0 Information style ACKNSTYLEWARNING_1 Warning style ACKNSTYLEERROR_2 Error style

6 UIP

6.1 UIP Services

6.1.1 Services

6.1.1.1 Activate Service

6.1.1.1.1 Description

This service is used by the FDI® Client to initialize a UIP (see 6.1.2). The FDI® Client shall call this service after the creation of an instance of a UIP. The following rules define the window type:

- A modal window is used, if the UIP style = dialog, or the invoking parent (UID or UIP) is modal.
- A non-modal window is used if the UIP style = window and the invoking parent runs in non-modal mode also.

6.1.1.1.2 Parameters

Table 73 defines the parameters for the service.

Table 73 – Activate Service parameters

Name	Type	Description
Request		
hostingInterface	Interface	FDI® Client hosting interface to be used by the UIP (see 5.2).
deviceAccessInterface	Interface	FDI® Client device access interface to be used by the UIP (see 5.1).
context	UInteger	Specifies in which context the UIP is activated: 0_ONLINE 1_OFFLINE The Client shall derive the context from the FunctionalGroup where this UIP has been retrieved from; i.e., whether the FunctionalGroup is part of the Offline device representation or the online device representation. If a UIP is invoked from another UIP with the OpenUserInterface service, the context is inherited.
localeSetting	<technology dependent>	The locale description consists of at least a language identifier and country. The format of the property value is technology dependent.
Response		

The localeSetting shall not depend on the operating system settings. The operating system settings can be used by default but shall be alterable by the user.

The language identifier shall indicate the language for localized textual information.

Parameter country shall be used to apply country-specific regulations such as allowed engineering units. To do this, the UIP will modify the EngineeringUnit Attribute of correlated Variable Nodes to match the specified country. The FDI® Server is then responsible to reformat the values accordingly.

6.1.1.2 Deactivate Service

6.1.1.2.1 Description

This service is used by the FDI® Client to deactivate a UIP. The UIP shall release all references to other components and finish all pending or running functions including UIPs that it opened that are still open.

The UIP may indicate that it is not ready to be deactivated. This shall be used if cancelling pending or running functions would have severe side-effects.

6.1.1.2.2 Parameters

Table 74 defines the parameters for the service.

Table 74 – Deactivate Service parameters

Name	Type	Description
Request		
Response		
deactivateCancelled	Boolean	Indication whether the UIP refused the Deactivate request. deactivateCancelled = "true" denotes that the UIP refused the Deactivate request. deactivateCancelled = "false" denotes that the UIP accepted the Deactivate request.

6.1.1.3 SetSystemLabel Service

6.1.1.3.1 Description

This service is used by the FDI® Client to specify a human identifier of the UIP instance in the context of the FDI® Client.

The label shall be used for user interface elements displayed and managed by the UIP (e.g. a message box) and will assure that the user can uniquely identify to which Device the user interface element is directed. The UIP can extend this label with specific information when appropriate.

The FDI® Client shall call this service before the Activate service (see 6.1.1.1). If it has not been called, the UIP shall use the text portion of the Label Attribute of the Device by default (see 5.1.3.2).

6.1.1.3.2 Parameters

Table 75 defines the parameters for the service.

Table 75 – SetSystemLabel Service parameters

Name	Type	Description
Request		
systemLabel	String	Human readable label that identifies the UIP within the FDI® Client.
Response		None.

6.1.1.4 SetTraceLevel Service**6.1.1.4.1 Description**

This service is used by the FDI® Client to notify the UIP of the types of Trace messages that should be logged via the Trace service (see 5.2.2.8). Multiple types can be set (for instance: Critical, Error, and Warning).

6.1.1.4.2 Parameters

Table 76 defines the parameters for the service.

Table 76 – SetTraceLevel Service parameters

Name	Type	Description
Request		
traceLevel	TraceLevel	Trace level that shall control the type of information (see Table 81).
Response		

6.1.1.5 GetStandardUIActionItems Service**6.1.1.5.1 Description**

This service is used by the FDI® Client to get the available standard UI actions in the UIP (for instance: Close, Apply, Help). The FDI® Client provides consistent representation of these standard UI actions, in the FDI® Client UI area.

6.1.1.5.2 Parameters

Table 77 defines the parameters for the service.

Table 77 – GetStandardUIActionItems Service parameters

Name	Type	Description
Request		
Response		
StandardUIActionItems[]	StandardUIActionItem	List of Standard Actions provided by the UIP.

6.1.1.6 GetSpecificUIActionItems Service

6.1.1.6.1 Description

This service is used by the FDI® Client to get the available UI actions that are specific for the UIP. The FDI® Client provides consistent representation of these UI actions, in the FDI® Client UI area.

6.1.1.6.2 Parameters

Table 78 defines the parameters for the service.

Table 78 – GetSpecificUIActionItems Service parameters

Name	Type	Description
Request		
Response		
SpecificUIActionItems[]	SpecificUIActionItem	List of UI actions specific for the UIP.

6.1.1.7 InvokeStandardUIAction Service

6.1.1.7.1 Description

This service is used by the FDI® Client to notify the UIP to perform a standard action (for instance: Close, Apply, Help). The FDI® Client passes the type of standard action to be performed in this service.

6.1.1.7.2 Parameters

Table 79 defines the parameters for the service.

Table 79 – InvokeStandardUIAction Service parameters

Name	Type	Description
Request		
actionId	StandardUIAction	One of the values defined in 6.1.2.2.
Response		

6.1.1.8 InvokeSpecificUIAction Service

6.1.1.8.1 Description

This service is used by the FDI® Client to notify the UIP to perform a UI action that is specific to this UIP. The FDI® Client passes the identifier of the action to be performed in this service.

6.1.1.8.2 Parameters

Table 80 defines the parameters for the service.

Table 80 – InvokeSpecificUIAction Service parameters

Name	Type	Description
Request		
actionId	UInteger	This is the identifier of the specific UI action to be performed.
Response		

6.1.2 Parameter type definitions

6.1.2.1 TraceLevel

TraceLevel is defined in Table 81.

Table 81 – TraceLevel definition

Name	Type	Description												
TraceLevel	UInteger	Severity level that controls the type of information that is passed to the Trace service (see 5.2.2.8). This value is a bit enumeration with one of the following values: <table><tr><td>NONE_0</td><td>Completely switch off tracing</td></tr><tr><td>CRITICAL_1</td><td>Fatal error or application crash</td></tr><tr><td>ERROR_2</td><td>Recoverable error</td></tr><tr><td>WARNING_4</td><td>Noncritical error</td></tr><tr><td>INFO_8</td><td>Informational message</td></tr><tr><td>VERBOSE_16</td><td>Debugging trace</td></tr></table>	NONE_0	Completely switch off tracing	CRITICAL_1	Fatal error or application crash	ERROR_2	Recoverable error	WARNING_4	Noncritical error	INFO_8	Informational message	VERBOSE_16	Debugging trace
NONE_0	Completely switch off tracing													
CRITICAL_1	Fatal error or application crash													
ERROR_2	Recoverable error													
WARNING_4	Noncritical error													
INFO_8	Informational message													
VERBOSE_16	Debugging trace													

6.1.2.2 StandardUIAction

Standard actions are defined to allow consistency in appearance and processing. They will be requested by the hosting Client. These actions are not expected to be mapped 1:1 to user interface buttons. Rather, the Client will display OK, CANCEL, and APPLY.

Clicking OK, CANCEL or APPLY by the User causes the following actions to be called.

- OK will cause a call to the Apply action followed by a call to the Close action.
- APPLY will cause a call to the Apply action.
- CANCEL will cause a call to the Close action. If changes are still outstanding, the UIP shall open a dialog asking the user to confirm.

The StandardUIAction enumeration is defined in Table 82.

Table 82 – StandardUIAction definition

Name	Type	Description
StandardUIAction	UInteger	Identifier for the standard UI action item with one of the following values: APPLY_0 Apply Standard UI Action - With this action the Client requests that parameter changes in the user interface will be applied to the source. CLOSE_1 Close Standard UI Action - With this action the Client requests that the UIP be closed. If changes to the parameters have not been applied, the UIP shall open a dialog asking the user to confirm. HELP_2 Help Standard UI Action - Requests to display online help describing the UIP functionality (a help document). It is no substitute for context-sensitive help which will typically be provided via tooltips.

6.1.2.3 StandardUIActionItem

The components of this parameter are defined in Table 83.

Table 83 – StandardUIActionItem definition

Name	Type	Description
StandardUIActionItem	Structure	
actionId	StandardUIAction	Identifier for the standard UI action item.
enabled	Boolean	Indicates the state of the action item. "true" indicates the item is enabled. "false" indicates the item is disabled.

6.1.2.4 SpecificUIActionItem

The components of this parameter are defined in Table 84.

Table 84 – SpecificUIActionItem definition

Name	Type	Description
SpecificUIActionItem	structure	
actionId	UInteger	Identifier for the action item that is specific to the UIP.
descriptor	String	A human readable string which provides information about the action.
enabled	Boolean	Indicates the state of the Action Item. "true" indicates the item is enabled. "false" indicates the item is disabled.
label	String	Label of the action item.


6.2 UIP instantiation rules

For each device instance, there may be a maximum of two instances of the same UIP type, one for the offline version and one for the online version.

6.3 UIP state machine

6.3.1 States

Figure 7 shows the UIP state machine. If the UIP Services (see 6.1) trigger state changes, they are mentioned on the state machine edges.

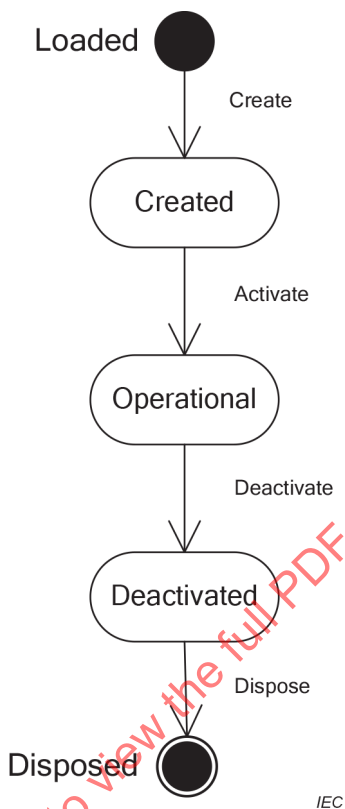

NOTE Create and Dispose are technology dependent services described in the IEC 62769-6 series. Create uses the StartElementName Property (see IEC 62769-5) of the UIP to create the appropriate UIP.

Figure 7 – UIP state machine

The UIP states are specified in Table 85.

Table 85 – UIP states

State	Description
Created	The initial state after the UIP instance is created by the FDI® Client.
Operational	The normal execution state.
Deactivated	The final state before a UIP is disposed.

6.3.2 State transitions

The UIP state transitions are defined in Table 86.

Table 86 – UIP state transitions

Source state	Event	Destination state
Loaded	The FDI® Client created the UIP instance.	Created
Created	Activate service has been called on UIP instance.	Operational
Operational	Deactivate service has been successfully called on UIP instance.	Deactivated
Deactivated	The FDI® Client disposed the UIP instance.	Disposed

6.4 UIP permissions and restrictions

6.4.1 Overview

The permissions a FDI® Client shall grant to a UIP are specified in this subclause.

Mandatory permissions shall be granted by the FDI® Client to the UIP as they are granted by the operating system. This does not mean that a UIP has unrestricted access to the complete file system. The permissions for accessing the file system and printers are defined by the system configuration.

NOTE The setting of permissions for operation system resources in a system configuration is outside the scope of this document.

Optional permissions can be restricted compared to the permissions given by the system configuration. The means by which an FDI® Client can restrict permissions are specified in the IEC 62769-6 series.

UIPs shall never block the Client, for instance by issuing synchronous calls to potentially block operating system resources. Worker threads are a common means for avoiding blocking situations. A UIP shall not implement role based access permission constraints.

6.4.2 Access to local file system

A UIP shall have read and write access to a specific directory on the client machine. This UIP directory is shared by all UIPs. The UIP uses the hosting service `GetHostingProperties` to query the information (path) of the directory from the FDI® Client. The UIP directory shall be persistent, i.e. the host nor the hosting environment shall not delete any files within the UIP directory.

The UIP can create / delete subdirectories within the UIP directory and shall organize the data in the directory according to its own responsibility.

Data stored in the UIP directory is accessible to other UIPs and potentially other users. Thus if there is data of sensitive nature, UIPs shall implement additional protection mechanisms (see IEC 62443-3-3, SR 4.1 Information Confidentiality). Data read from the UIP directory should be subject to input validation and possibly be authenticated. Furthermore, data stored in the UIP directory should be purged on closing the UIP (see IEC 62443-3-3 SR 4.2). File system permissions may be used to restrict access to the files to the UIP user.

6.4.3 Export / Import of files

Using the hosting services `ImportFile` / `ExportFile`, the UIP can save data to a user selectable location within the file system of the FDI® Client, respectively it can import files from a user selectable location within the file system of the FDI® Client.

UIPs shall perform a validation of the imported file to assure the file is as expected.

NOTE The security of the local file system and possibly mapped network drives is beyond the scope of this document. It is assumed that the administrator of the machine the FDI® Client is executed on manages this.

6.4.4 Inter-Process Communication (IPC)

A UIP process may use IPC to communicate with other processes executed on the same machine. The UIP process is not allowed to communicate with processes on other machines, i.e. the UIP shall not have any network access. The UIP is not allowed to start new processes. Instead, the UIP can interact with a running process that provides services. How the process is managed is not in the scope of this document.

The UIP should not assume any authentication of the other process to be done by the FDI® Client. Thus, the UIP IPC usage shall authenticate peer processes where appropriate.

A UIP should perform sanity checks for actions requested by other processes to be performed by the UIP.

A UIP shall not expose services to other services.

NOTE The trustworthiness of external applications is beyond the scope of this document. Mechanisms such as application whitelisting, code signing, access control can be applied to reduce the risk of malicious external applications (see IEC 62443-3-3 SR 3.4).

6.4.5 Open files based on MIME Type

Using the hosting service InitOpenDefaultApplication, a UIP may open a file in the registered application for this MIME type. The application is started by the FDI® Client and the file is opened. The FDI® Client may limit the MIME types which UIPs can work with.

NOTE The trustworthiness of external applications is beyond the scope of this specification. It is the user's responsibility to register the appropriate external application to handle the MIME file types (see IEC 62443-3-3 SR 3.4).

6.4.6 Access to ressources

The UIP shall have access to the printers, which are available in the hosting environment. A UIP executable shall not perform internet access.

A UIP executable shall not perform local area network (LAN) access.

6.5 UIP deployment

6.5.1 UIP downloads from FDI® Server

The following scenarios require an FDI® Client to retrieve a UIP.

- The UID specifies a UIP in its XML element Plugin (see Annex A).
- The UIP opens another UIP with the OpenUserInterface service (see 5.2.2.3).

In all scenarios, the FDI® Client gets a UipId as identification for the UIP. A UipId is a UUID (universally unique identifier). A UIP may have several UIP Variants that differ in their platform and runtime support (see IEC 62769-4).

NOTE A UipId does not contain version information. Resolving a UipId to the appropriate version of the UIP is done by the FDI® Server based on FDI® Package information.

The same UipId may be resolved to different UIP versions for different Devices. At different points in time, even for the same Device the same UipId may be resolved differently if a UIP update happened in the FDI® Server in between.

With the `UipId`, the FDI® Client can retrieve the following information about all corresponding UIP Variants (see IEC 62769-5) from the FDI® Server.

- `RuntimeId` and `PlatformId`
- `UIPVariantVersion`
- `FDITechnologyVersion`

For this, the FDI® Client calls the OPC UA service `TranslateBrowsePathToNodeIds` with the following list of relative names:

```
"UIPSet/<UipId>"
"UIPSet/<UipId >/RuntimeId"
"UIPSet/<UipId >/PlatformId"
"UIPSet/<UipId >/FDITechnologyVersion"
"UIPSet/<UipId >/Style"
"UIPSet/<UipId >/StartElementName"
"UIPSet/<UipId >/UIPVariantVersion"
```

The FDI® Server returns arrays of `NodeIds` for each relative name. The number of entries in each array matches the number of UIP Variants for the `UipId`. Next, the FDI® Client can read the property values.

If multiple UIP Variants are available, the FDI® Client chooses the most appropriate UIP Variant based on `FDITechnologyVersion`, `RuntimeId`, and `PlatformId`.

The FDI® Client may maintain a cache of UIP Variants already downloaded from the FDI® Server. If `UipId`, `RuntimeId`, `PlatformId`, `FDITechnologyVersion` and `UIPVariantVersion` of the chosen UIP Variant match with a UIP Variant in its UIP Variant cache, this UIP Variant can be used and no download from the FDI® Server is required.

If no cache is maintained or no matching UIP Variant is found in the cache, the FDI® Client shall read the `FDITechnologyVersion` (see IEC 62769-5) of the chosen UIP Variant. The parameter `FDITechnologyVersion` helps the FDI® Client to determine whether it can support the execution of the UIP. The FDI® Client shall execute a UIP of the same major version independently from the minor version or revision.

Finally, the FDI® Client can download the selected UIP from the FDI® Server by reading the value of the UIP variant.

An FDI® Client may implement another sequence than the one described here. For example, it can check the `FDITechnologyVersion` first to determine whether it can run the UIP at all. The `FDITechnologyVersion` is the same for all UIP Variants of a specific version of a UIP.

The FDI® Client may implement optimization strategies. For example, it may cache UIP versions (in addition to UIP Variant versions). If the version of the UIP is identical to the cached UIP version, there is no need to read the UIP Variant versions because they are required to be the same for an identical UIP version (see IEC 62769-4).

6.5.2 UIP management on FDI® Client

The UIP installation is done per file copy only. The UIP is installed within a folder structure, which is called the UIP folder structure. The FDI® Client shall manage the UIP folder structure. The UIP folder structure shall separate the UIP Variants from each other in order to avoid file name conflicts. UIP executables shall be installed to a path that allows browse and read access. Since the FDI® Client manages the folder structure, the UIP shall not perform any access to an absolute path. Any file access shall be done relative to the installation root of the UIP. Reference data bases and help files (UIP supplementary data) shall be provided with UIP and stored within in the UIP installation folder on the FDI® Client. The access permission to this folder is read-only.

According to the version management described in IEC 62769-4, the coexistence of major version changes of UIP of the same type shall be supported. This shall be done by installing a newer UIP into a separate folder.

7 Actions

7.1 General

The EDD contained in the FDI® Package as defined in IEC 62769-4 may have EDD methods. Some EDD methods may be exposed to the FDI® Client as Actions and can be triggered by FDI® Clients.

NOTE These Actions have no relationship to the EDD ACTION construct.

Actions are executed in the FDI® Server. The Action state machine is defined in IEC 62769-3.

An FDI® Client can invoke an Action by calling the OPC UA InvokeAction method (see IEC 62769-5). State changes of the corresponding Action state machine are sent to the FDI® Client via the subscription mechanism (see IEC 62541-4). Additional data that can come with a state change are transferred as an XML document.

An Action can involve user interaction. The result of a user interaction is sent to the FDI® Server with the RespondAction service (see IEC 62769-5). Data that are sent with this service are transferred as an XML document.

An Action can be aborted either by the Client or by the Server.

If the Server aborts an Action, it first sends an AbortingNotification. The Client shall reply with an AbortNotificationConfirmation but still continue processing ActionRequests. Once the AbortNotification was received, the Client shall disable the CancelButton. When the abort process is finished, the Server will send an AbortRequest to the Client. The Client replies with an AbortResponse and closes the ActionWindow.

An FDI® Client may abort an Action as follows:

- 1) Call the AbortAction service (see IEC 62769-5)
- 2) Reply to an existing ActionRequest by sending a valid ActionResponse.
- 3) Continue processing of ActionRequests.
- 4) The Server sends an AbortingNotification once it has started the abort process. The Client shall reply with an AbortNotificationConfirmation but still continue processing ActionRequests. Once the AbortNotification was received, the Client shall disable the CancelButton.
- 5) The Action is aborted after an AbortingRequest is received from the Server. The Client shall reply with an AbortResponse and closes the ActionWindow.

Annex B contains an example of an EDD method being executed by an FDI® Server and the resulting interaction with an FDI® Client. It includes state diagrams and exchanged messages (XML snippets).

7.2 Sequence diagram

The sequence diagram shown in Figure 8 shows the client/server interaction of an Action call. This diagram assumes as a pre-condition that the Action can be started from a user interface shown by the FDI® Client.

NOTE 1 The diagram shows UIDInterpreter, ActionWindow and AcknowledgeWindow as subsystems of the FDI® Client. It also shows EDDMethodExecution as a subsystem of the FDI® Server. This is for explanatory reasons only.


The Action is initiated from the user interface. If not already locked, InitLock has to be called first. The FDI® Client then calls the OPC UA InvokeAction method (see IEC 62769-5). The name of the Action to be invoked, as well as any Action arguments needed, is given as OPC UA method arguments.

The FDI® Server responds to the InvokeAction call by creating an Action execution state machine and responds to the FDI® Client by returning an ActionNodeId that represents the state machine in the Information Model.

The FDI® Server is responsible for running the state machine (as defined in IEC 62769-3) and updating its state in the Information Model using the provided ActionNodeId. The ActionNodeId is also used by the FDI® Client to establish subscriptions with the FDI® Server in order to monitor the Action execution. As the Action execution proceeds, the FDI® Server updates the state machine and the corresponding Node in the Information Model. If there are any existing subscriptions for the ActionNodeId, the FDI® Server will process these changes and advise the FDI® Client of the changes.

During the Action execution, operations such as notifications, read and write (also to other Nodes than the Node with the ActionNodeId) are not blocked.

The FDI® Server begins an Action by first setting the state to Running and then starts to execute the EDD method. The FDI® Client uses the OPC UA AddMonitoredItem service (see IEC 62541-4) to establish a subscription using the provided ActionNodeId. The FDI® Server responds to the newly created subscription by advising the FDI® Client of the current state of the Action state machine. In this sequence diagram, the subscription was established before the Action execution reaches any notable state such as the TimeDelay state. Therefore, the first notice to the FDI® Client would indicate "Running". If the Action had reached the TimeDelay state before the subscription was established, the first notice to the FDI® Client would indicate "TimeDelay" since this would be the current state.

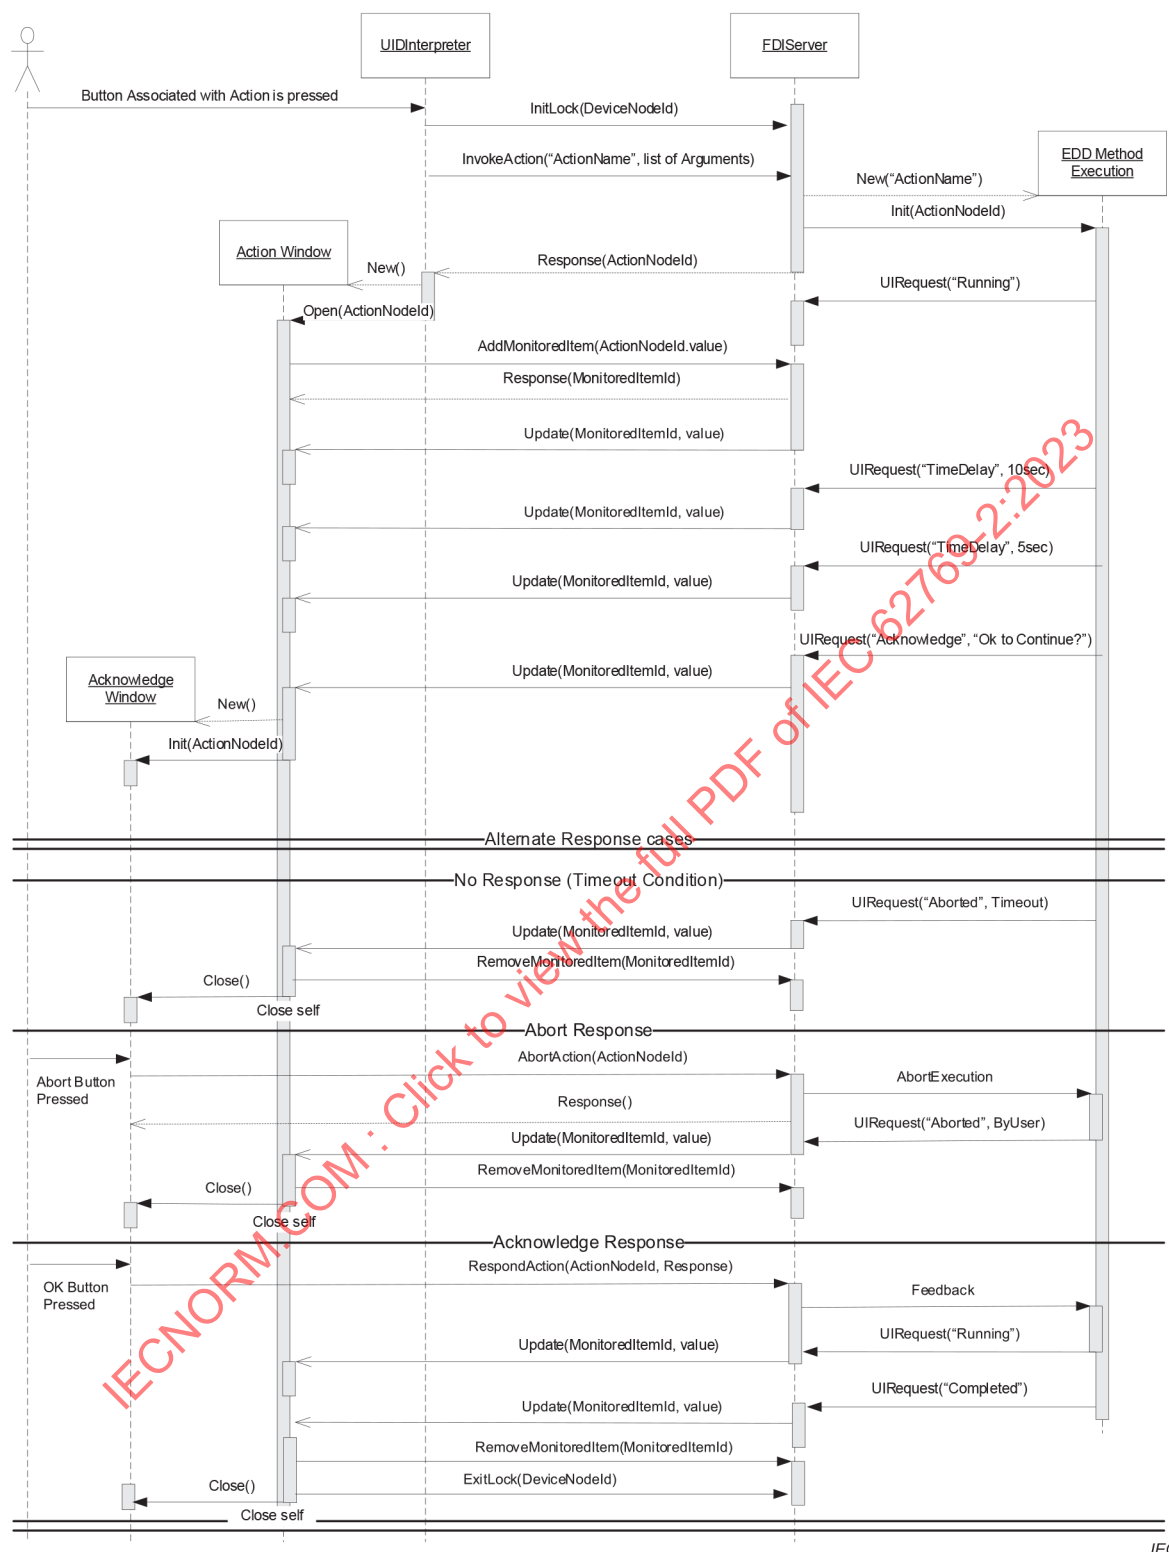

IEC

Figure 8 – FDI® Action sequence diagram

The FDI® Client shall not maintain an Action state machine.

NOTE 2 The information sent to the FDI® Client combines state information and the last UI request. Therefore, there is no race condition with respect to when the FDI® Client adds the state Node as a monitored item. Even if the Action state machine has gone through several state transitions, the FDI® Client need not know this. The standard OPC UA behaviour is that the current information is sent when a Node is added as monitored item.

When the FDI® Server enters the TimeDelay state, the ActionNodeId is updated at the beginning of the delay and at the end of the delay. There may also be intermediate updates regarding the length of the delay. The actual frequency of the intermediate updates is determined by the design of the FDI® Server, typically every few seconds. All updates of the ActionNodeId will be submitted to the FDI® Client via the subscription mechanism.

In example 1 in Figure 8, the FDI® Server has entered a time delay of 10 seconds and sends updates every 5 seconds. When the FDI® Server enters the WaitingForFeedback state, the Information Model is updated including the user prompt. The state machine pauses the execution of the Action until a response from the user is provided or a timeout expires. The state machine change results in the FDI® Client being provided a notification. The FDI® Client detecting that the new state is WaitingForFeedback opens a message dialog presenting the prompt provided in the state information as well as a means to provide feedback.

In example 2 in Figure 8, the FDI® Client shows the buttons to "OK" the method or "Abort" the method.

Response case "Timeout": If the user fails to respond to the prompt before the server timeout expires, the FDI® Server will abort the Action execution. The state in the Information Model is set to Aborted with an indication that the cause was a timeout condition. The Action execution terminates at this point but the FDI® Server maintains the state Node and the final state until the subscriptions are terminated either by the FDI® Client removing the monitored item or a general timeout of the FDI® Client session with the FDI® Server.

Response case "Abort": If the user responds to the FDI® Server with an abort response, the method execution is aborted. The state in the Information Model is set to Aborted with an indication that the cause was a user action. The FDI® Server maintains the state Node and the final state until the subscriptions are terminated either by the FDI® Client removing the monitored item or a general timeout of the FDI® Client session with the FDI® Server. The state Node is also preserved if the Completed or Aborted state of the Action state machine is reached before the FDI® Client established a subscription and added the state Node as a monitored item.

Response case "Positive feedback": If the user responds to the FDI® Server with positive feedback, the Action execution sets the state in the Information Model back to Running and continues the normal execution of the Action.

In example 3 in Figure 8, no further state changes occur before the end of the Action and therefore the next state change is to the final Completed state. The state machine terminates after the final state is set. The FDI® Server maintains the state Node and the final state until the subscriptions are terminated either by the FDI® Client removing the monitored item or a general timeout of the FDI® Client session with the FDI® Server.

NOTE 3 No separate KeepAlive method is needed. The supervision of the session tells the FDI® Server that the FDI® Client is alive.

After the Action execution ended and the monitored item has been removed, the lock can be removed.

7.3 FDI® Action schema definition

The XML schema for the XML sent between the FDI® Client and FDI® Server is defined in Annex A.

NOTE The XML schema in Annex A also includes the definitions for UIDs.

ActionRequest is the root element of the XML documents that are exchanged from the FDI® Server to the FDI® Client during Action execution. These XML documents are sent to the FDI® Client with the Update service (see IEC 62541-4). The mandatory part of these documents is the ActionState that specifies the current state of the corresponding Action state machine (see IEC 62769-3). Additional data is specified if the FDI® Client has to show a user interface on behalf of the Action. The user interface style as well as content is specified in this additional data.

ActionResponse is the root element of the XML documents that are exchanged from FDI® Client to FDI® Server. These documents are used when the user provides feedback for a UI request. The Action state machine (as defined in IEC 62769-3) shall be in state WaitingForFeedback or WaitingForFeedbackA. The FDI® Server sets the state back to Running or Aborting after receiving the user feedback. These XML documents are sent with the RespondAction service (as defined in IEC 62769-5).

Arguments for Actions are also specified by XML documents. The arguments are specified with the ListOfActionArguments type as name-value pairs.

7.4 Interactive transfer to device

The EDD contained in the FDI® Package as defined in IEC 61804-4 may have an interactive_download_to_device_root_menu. The whole functionality for the interactive transfer to device is exposed to the FDI® Client as INTERACTIVE_TRANSFER_TO_DEVICE_ACTION. This action can be triggered by FDI® Clients. The action is executed in the FDI® Server. The INTERACTIVE_TRANSFER_TO_DEVICE_ACTION uses the action state machine defined in IEC 62769-3.

As defined in IEC 61804-4, an INIT_ACTION on the interactive_transfer_to_device_root_menu shall be used to implement any kind of user interaction before the download of parameters to the device is started. User interactions after completion of the download shall be implemented using an EXIT_ACTION on the interactive_download_to_device_root_menu.

The sequence diagram shown in Figure 9 shows the client/server interaction for the interactive transfer to device.

The FDI® Client starts the interactive transfer to device by the invocation of the INTERACTIVE_TRANSFER_TO_DEVICE_ACTION using the InvokeAction service. The INIT/EXIT_ACTION are executed by the FDI® Server as part of the execution of the INTERACTIVE_TRANSFER_TO_DEVICE_ACTION. After the INIT_ACTION is completed, the FDI® Server shall check if the dataset to be downloaded is consistent according to IEC 61804-4. If it is consistent, the FDI® Server executes the transfer to device. If the dataset is not consistent, the FDI® Server can initiate a dialog to ask the user if the download shall be aborted or executed.

In case of an abort of the INIT_ACTION, the interactive transfer to device procedure is aborted, i.e. the FDI® Server shall not execute the transfer to device.

The FDI® Client can collect execution status and execution results during the execution of the INTERACTIVE_TRANSFER_TO_DEVICE_ACTION action by monitoring the ActionNodeId.

After completion of the InteractiveTransferToDevice method, the FDI® Server executes the EXIT_ACTION.

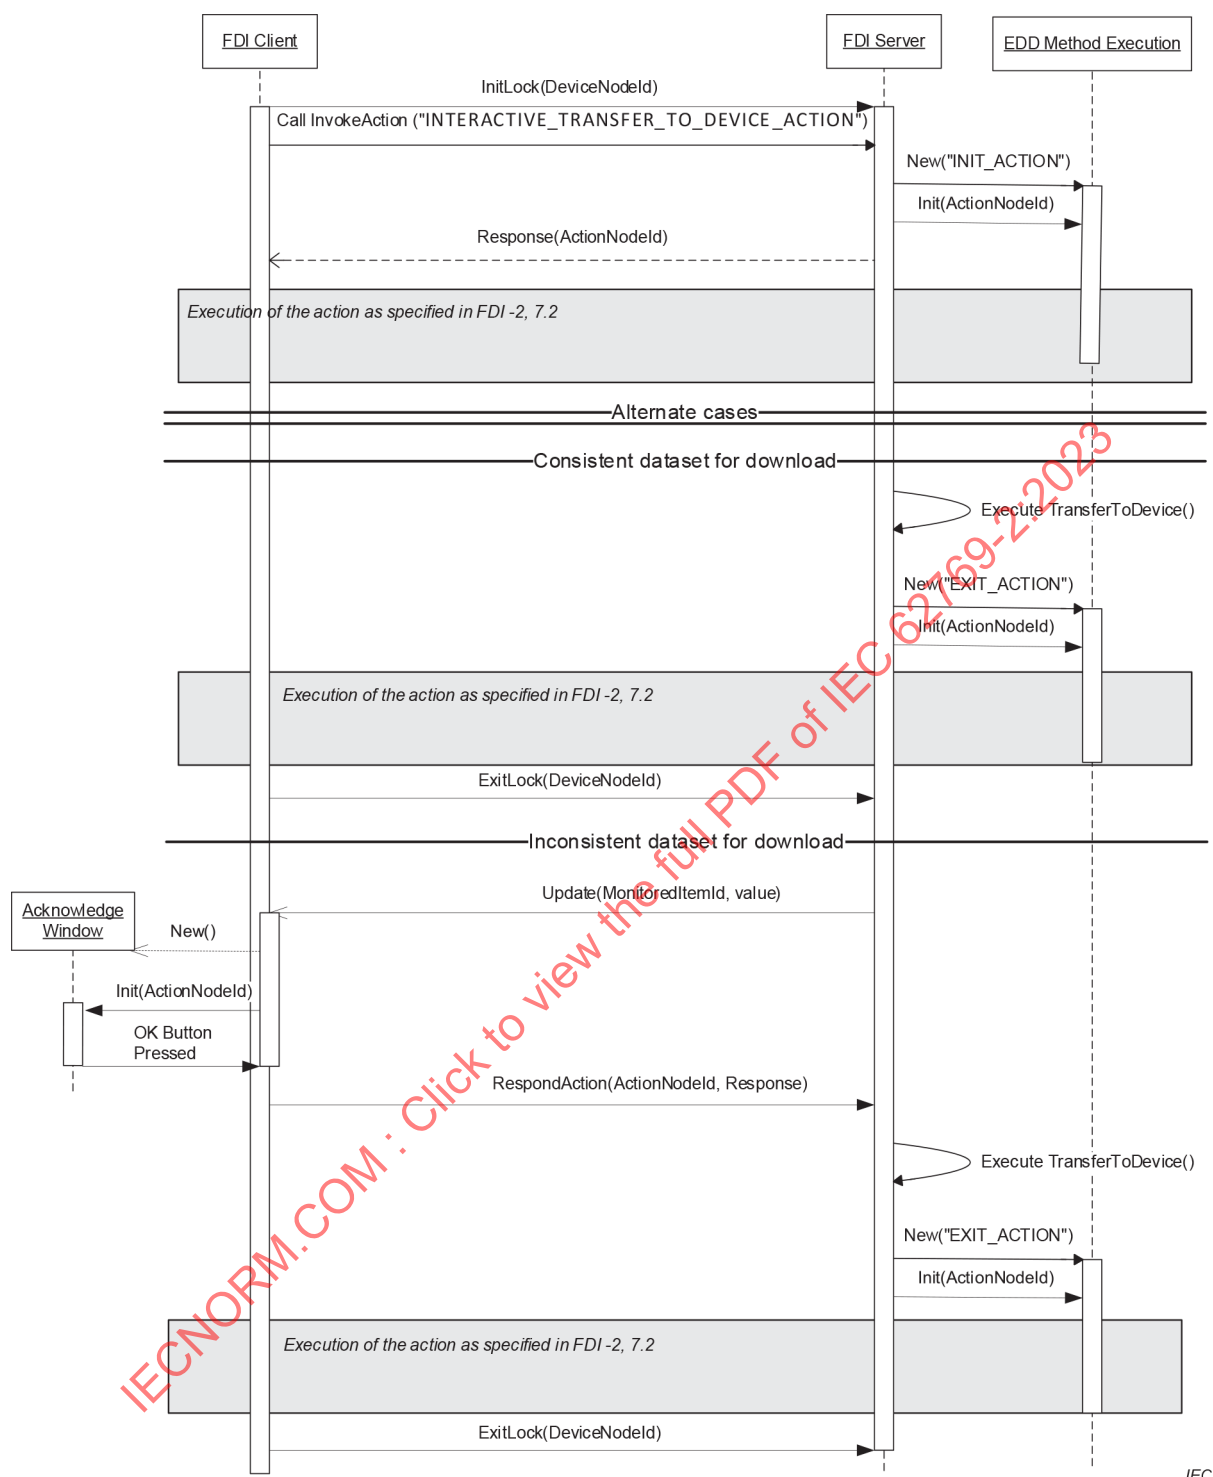


Figure 9 – Sequence diagram interactive transfer to device

8 User Interface Description (UID)

8.1 Overview

As defined in IEC 62769-5, top-level FunctionalGroup in the Information Model may contain a UIDescription (UID) Node or a set of UIPlugin (UIP) Nodes. The Value Attribute of a UID Node is a string, and the UID XML Schema defines the contents of that string. The XML schema is defined in Annex A.

NOTE 1 The XML schema in Annex A also includes the definitions for FDI® Actions.


In addition to the UID Nodes exposed in the Information Model via FunctionalGroups, there may be non-browseable UID Nodes. As shown in Figure 10, non-browseable UID Nodes are linked to a parent UID Node via the NodePath attribute. The parent UID Node may be either a browseable or non-browseable Node.

The root element of the Value Attribute of a FunctionalGroup's UID Node shall be a Window, Dialog, Menu, or Table element. The root element of the Value Attribute of a non-browseable UID Node shall be a Window, Dialog, Page, Menu, or Table element.

The Value Attribute of a FunctionalGroup's UID Node shall contain enough information to allow the FDI® Client to render the visible parts of the view. The FDI® Server may omit those parts of the view that are not visible. In place of the omitted information, the FDI® Server shall provide a reference (via the NodePath attribute) to a non-browseable UID Node that contains the missing information. The FDI® Client may use the specified NodePath to obtain the missing information from the FDI® Server as it deems necessary.

NOTE 2 An example of a non-visible part of a window would be the second page of a tabbed dialog. The label of the second page is visible, but the content of the second page is not.

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

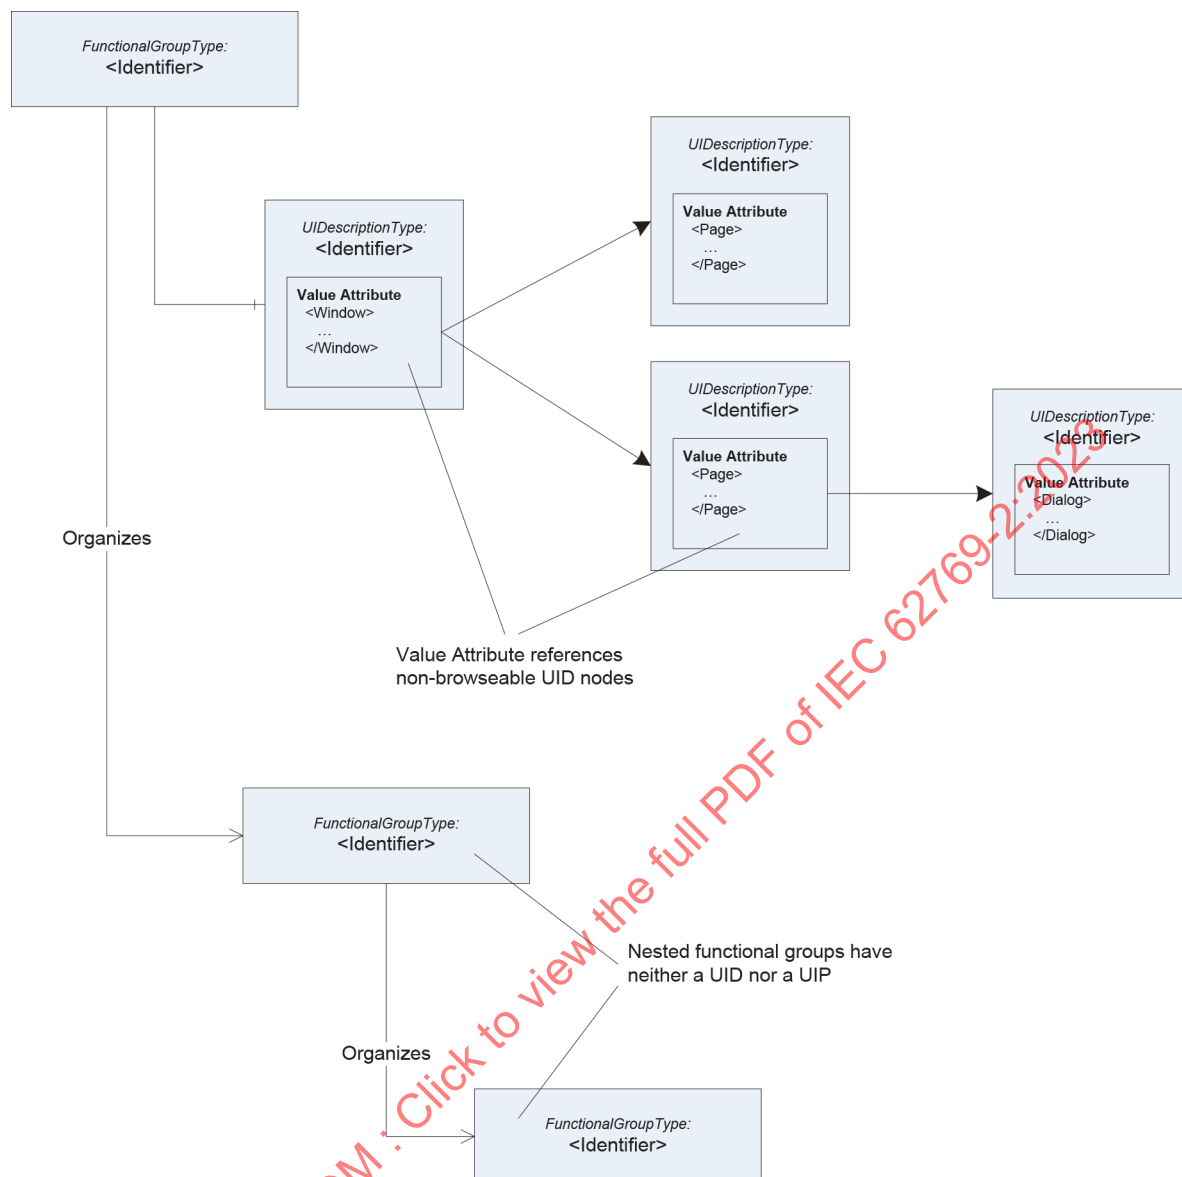

IEC

Figure 10 – User Interface Descriptions

The XML returned to the FDI® Client from an FDI® Server contains layout elements and content elements. Layout elements define the visual organization, positioning, and structure of the user interface. Content elements are the basic building blocks of the user interface.

NOTE 3 The XML only includes "valid" elements. New XML documents will be returned if validity changes.

The layout elements are

- ColumnBreak
- Dialog
- EditDisplay
- Group
- Menu
- Page
- RowBreak
- Table

- Window

The content elements are

- Action
- Chart
- Graph
- Grid
- Image
- Parameter
- Plugin
- Text

The algorithm for rendering these elements onto a computer screen is specified in IEC 61804-4.

NOTE 4 The definition of UIDs is heavily influenced by IEC 61804-3 and IEC 61804-4.

8.2 UID execution

Figure 11 illustrates an example of the sequence of steps used by an FDI® Client to call up and execute a UIDescription (UID). This example assumes as a pre-condition that the FDI® Client has established a session with the FDI® Server, the user has navigated to a Device using some form of Information Model browsing or lookup, and the FDI® Client is presenting the user with a list of FunctionalGroups. The example includes a sub UID that is referenced in the XML of the UID and that contains conditional content. The example illustrates the modification of a Parameter used by the sub UID to calculate the conditional content.

NOTE 1 The diagram shows UIDWindow, UIDInterpreter and Device Browser Window as subsystems of the FDI® Client. It also shows UIDExecution as subsystem of the FDI® Server. This is for explanatory reasons only.

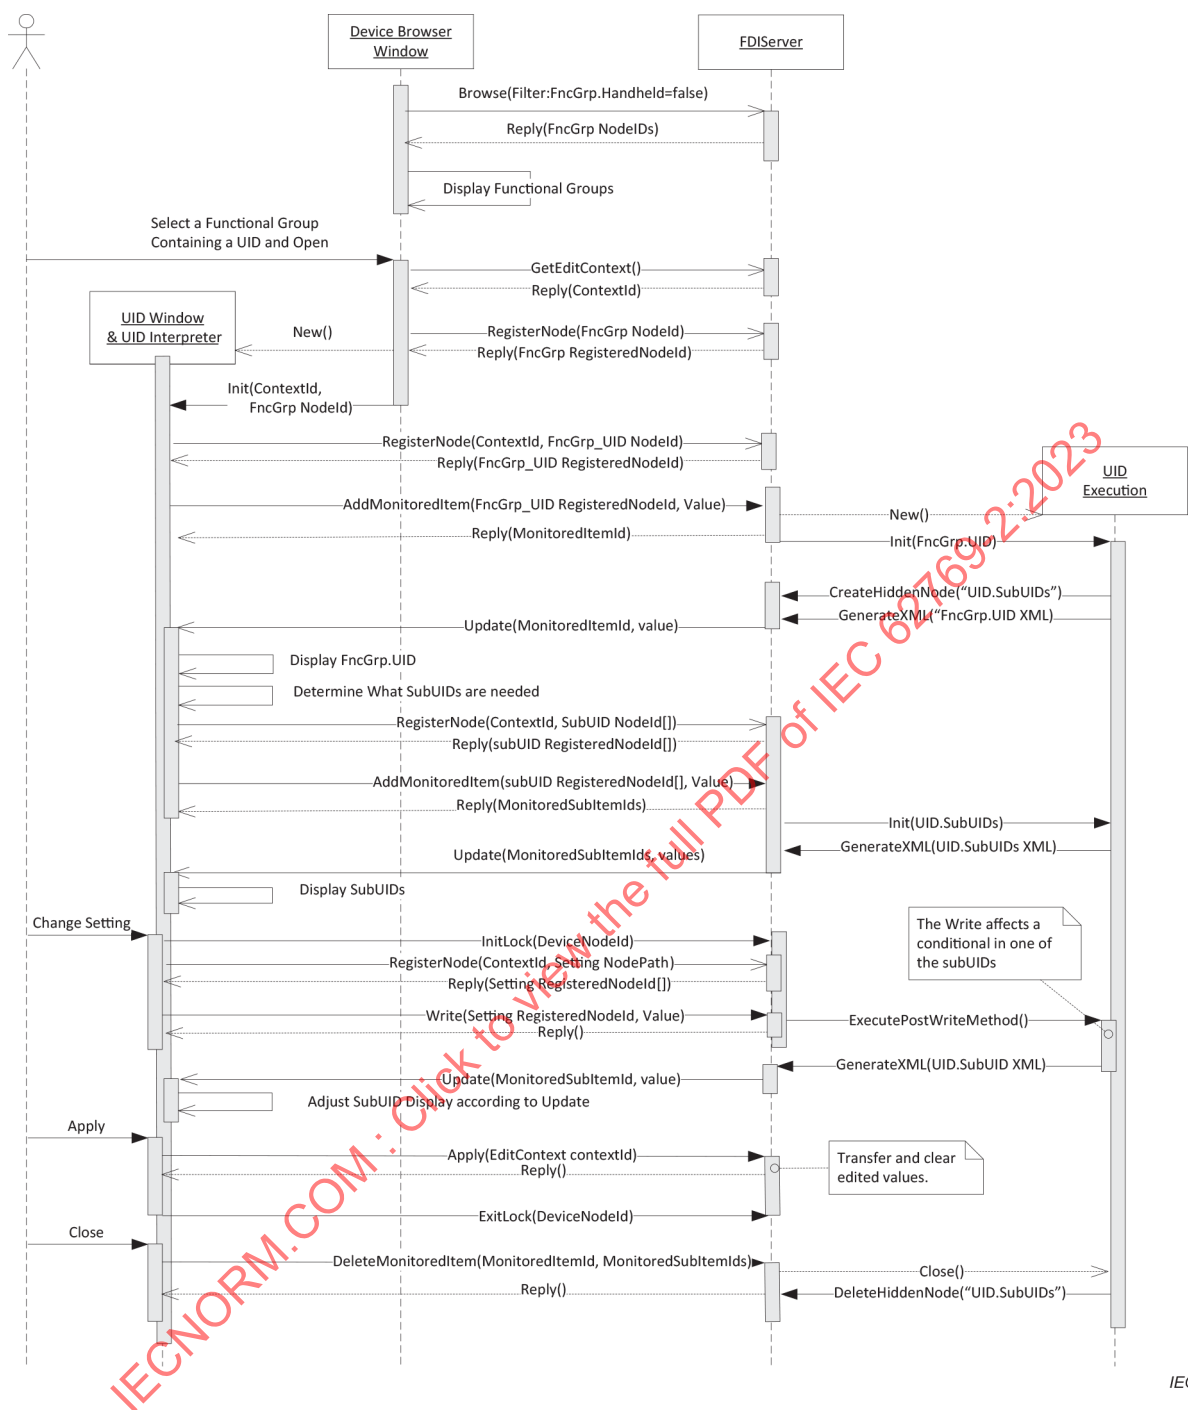


Figure 11 – User Interface Description sequence diagram

The sequence in Figure 11 begins with the user selecting one of the FunctionalGroups to open. The Device Browser Window initiates the opening of the UID associated with the selected FunctionalGroup by acquiring an EditContext and creating a new UID Window and UID Interpreter that will be used to present the UID to the user. The newly created UID Window is initialized by providing it with the EditContext and the NodeId of the selected FunctionalGroup in the EditContext. To retrieve this NodeId, the RegisterNodesByRelativePath Method is called passing the BrowsePath of the FunctionalGroup and the EditContext as input.

Locking is required for the Write Service.

NOTE 2 The example therefore includes calls to lock (InitLock) and unlock (ExitLock) the Device.

The UID Window begins by establishing a subscription to the value of the UID contained in the referenced FunctionalGroup using the OPC UA AddMonitoredItem service in order to obtain the content (i.e., the XML representation) of the UID. The FDI® Server responds to the subscription request by creating a UID Execution machine and initializing it by passing an internal identifier of the selected UID. The UID Execution machine interprets the UID definition, creates the referenced non-browseable sub UID Nodes in the Information Model and generates the XML representation of the top level UID. The generated XML representation is maintained in the Information Model to support the UID Window's subscribe. The NodePaths of the sub UIDs are included in the XML of the parent UIDs. Using the RegisterNodesByRelativePath Method, the NodeSpecifiers are translated into NodeIds. The UID Window can use those NodeIds to create subsequent subscriptions. The FDI® Server provides the content of the top level UID that was subscribed to by the UID Window.

The UID Window interprets the XML content of the updated UID value provided by the subscription and renders the user interface. It also collects the references to the sub UIDs and issues a second OPC UA AddMonitoredItem service request to include the sub UIDs in the subscription. The FDI® Server responds to the AddMonitoredItem by initializing the sub UIDs Nodes resulting in the generation of XML representations of the sub UID content. The FDI® Server updates the UID Window with the generated value of each of the sub UIDs included in the OPC UA AddMonitoredItem request.

NOTE 3 The example uses multiple sub UIDs (but is unspecific about how many). For example, AddMonitoredItem(UID.SubUIDs.value) adds the Nodes of all SubUIDs to the subscription.

The UID Window responds to the subscription updates by rendering the sub UIDs in the user interface. In addition to the sub UIDs, UIDs also contain NodePaths referencing parameters and actions. Using the RegisterNodesByRelativePath those NodePaths are translated to NodeIds and the UID Window uses the AddMonitoredItem service to subscribe to the values of the parameters. The FDI® Server provides the values to the UID Window. The UID is now fully displayed and ready.

When the user starts making a change to a value, the UID Window requests a lock using the InitLock Method.

There are different strategies when to acquire a lock. At the latest it needs to be acquired before any pre-edit actions are executed or the value is written to the FDI® server.

If a pre-edit action is defined on the changed parameter the UID Window calls that action.

When the user finishes changing the value, the value is written to the EditContext using the Write service. If a post-edit action is defined on the changed parameter, the UID Window calls that action.

The UID Execution determines that the value change results in the change of a conditional contained in one of the sub UIDs. The XML value of the sub UID that is affected is regenerated and the Information Model is updated. The FDI® Server reacts to the Information Model update by notifying the UID Window of the change.

The UID Window processes the value change of the sub UID and makes the necessary adjustments to the user interface to reflect the change.

The user completes the example sequence by clicking on an apply button that instructs the UID Window to shut down. The UID Window calls the Apply Method for its EditContext and the changes are applied to the device. Any pre- and post-write actions are executed. The UID Window removes the subscriptions by calling the OPC UA DeleteMonitoredItem service call.

The FDI® Server processes the OPC UA DeleteMonitoredItem call by removing the items from the subscription. Afterwards the UID Window calls the Discard Method on the EditContext and the FDI® Server removes the non-browseable sub UID Nodes and closes the UID Execution.

Annex A (normative)

XML schema

A.1 General

The following is the XML schema definitions for UIDs as well as Actions. The types are listed in alphabetical order. The namespace xs: in the elements refers to the W3C XML Schema.

A.2 AbortRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when an Action is aborted. The FDI® Client may inform the user about the reason the Action is aborting. Upon acknowledgement from the user, the FDI® Client sends an ActionResponse back to the FDI® Server.

The XML schema for an AbortRequestT type is:

```
<xs:complexType name="AbortRequestT">
  <xs:sequence>
    <xs:element name="Message" type="xs:string"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an AbortRequestT type are described in Table A.1.

Table A.1 – Elements of AbortRequestT

Element	Description
Message	This required element specifies the reason the action has been aborted.

A.3 AccessT

This type specifies whether the access shall be ONLINE or OFFLINE.

The XML schema for an AccessT enumeration type is:

```
<xs:simpleType name="AccessT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="ONLINE"/>
    <xs:enumeration value="OFFLINE"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of an AccessT enumeration type are described in Table A.2.

Table A.2 – Enumerations of AccessT

Enumeration	Description
ONLINE	The access shall be done ONLINE.
OFFLINE	The access shall be done OFFLINE.

A.4 AcknowledgementRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when the user needs to acknowledge a condition or state within an Action. Upon acknowledgement from the user, the FDI® Client sends an AcknowledgementResponse back to the FDI® Server. An AcknowledgementRequest shall only be used to acknowledge normal operating conditions. An AbortRequest shall be used to acknowledge a condition that leads to the Action being aborted.

The XML schema for an AcknowledgementRequestT type is:

```
<xs:complexType name="AcknowledgementRequestT">
  <xs:sequence>
    <xs:element name="Message" type="xs:string"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an AcknowledgementRequestT type are described in Table A.3.

Table A.3 – Elements of AcknowledgementRequestT

Element	Description
Message	This required element specifies the condition the user is being asked to acknowledge in the form of a message to the user.

A.5 ActionListT

This type specifies a list of Action elements.

The XML schema for an ActionListT type is:

```
<xs:complexType name="ActionListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Action" type="clnt:ActionT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an ActionListT type are described in Table A.4.

Table A.4 – Elements of ActionListT

Element	Description
Action	An element of the list.

A.6 AbortingNotificationT

This type is used in the ActionRequest element to notify the client that the action has been aborted on the server.

The XML schema for an AbortingNotificationT type is:

```
<xs:complexType name="AbortingNotificationT"/>
```

A.7 ActionRequestT

This type specifies an action request from the FDI® server.

The XML schema for an ActionRequestT type is:

```
<xs:complexType name="ActionRequestT">
  <xs:sequence>
    <xs:element name="EditContext" type="xs:string"/>
    <xs:choice>
      <xs:element name="AbortingNotification"
        type="clnt:AbortingNotificationT"/>
      <xs:element name="AcknowledgementRequest"
        type="clnt:AcknowledgementRequestT"/>
      <xs:element name="AbortRequest" type="clnt:AbortRequestT"/>
      <xs:element name="UIDRequest" type="clnt:UidRequestT"/>
      <xs:element name="SelectionRequest"
        type="clnt:SelectionRequestT"/>
      <xs:element name="InputRequest" type="clnt:InputRequestT"/>
      <xs:element name="ParameterInputRequest"
        type="clnt:ParameterInputRequestT"/>
      <xs:element name="InfoRequest" type="clnt:InfoRequestT"/>
      <xs:element name="DelayMessageRequest"
        type="clnt:DelayMessageRequestT"/>
    </xs:choice>
  </xs:sequence>
</xs:complexType>
```

The elements of an ActionRequestT type are described in Table A.5.

Table A.5 – Elements of ActionRequestT

Element	Description
EditContext	This element specifies the EditContext to be used when editing Variables for this Action.
AbortingNotification	This element specifies that the action has been aborted on the server. To ensure correct abort processing, the User Interface shall not allow the cancellation of further action requests.
AcknowledgementRequest	This optional element specifies a request from an FDI® Server to an FDI® Client for the user to acknowledge a condition. The FDI® Client will not respond to the FDI® Server until the user acknowledged the condition.
AbortRequest	This optional element specifies a request from an FDI® Server to an FDI® Client to notify the user the Action is aborting.
UIDRequest	This optional element specifies a request from an FDI® Server to an FDI® Client to display complex user interface.
SelectionRequest	This optional element specifies a request from an FDI® Server to an FDI® Client for the user to make a selection from a list of possible alternatives.
InputRequest	This optional element specifies a request from an FDI® Server to an FDI® Client for the user to edit data.
ParameterInputRequest	This optional element specifies a request from an FDI® Server to an FDI® Client for the user to edit a parameter.
InfoRequest	This optional element specifies a request from an FDI® Server to an FDI® Client for a message to be displayed to the user. The message does not require user acknowledgement and the FDI® Client will respond immediately after displaying the message.
DelayMessageRequest	This type specifies a request sent from an FDI® Server to an FDI® Client when a delay is requested within an Action. The FDI® Client informs the user of the reason for and duration of the delay. The FDI® Client times the delay and sends a DelayMessageResponse back to the FDI® Server after the time has elapsed.

A.8 ActionResponseT

This type specifies an action response to the FDI® Server.

The XML schema for an ActionResponseT type is:

```
<xs:complexType name="ActionResponseT">
  <xs:choice>
    <xs:element name="AbortingNotificationConfirmation"
      type="clnt:ResponseT"/>
    <xs:element name="AcknowledgementResponse" type="clnt:ResponseT"/>
    <xs:element name="AbortResponse" type="clnt:ResponseT"/>
    <xs:element name="UidResponse" type="clnt:UidResponseT"/>
    <xs:element name="SelectionResponse"
      type="clnt:SelectionResponseT"/>
    <xs:element name="InputResponse" type="clnt:InputResponseT"/>
    <xs:element name="ParameterInputResponse" type="clnt:ResponseT"/>
    <xs:element name="InfoResponse" type="clnt:ResponseT"/>
    <xs:element name="DelayMessageResponse" type="clnt:ResponseT"/>
  </xs:choice>
</xs:complexType>
```

The elements of an ActionResponseT type are described in Table A.6.

Table A.6 – Elements of ActionResponseT

Element	Description
AbortingNotificationConfirmation	This optional element specifies the response of an FDI® Client to an AbortingNotification from an FDI® Server.
AcknowledgementResponse	This optional element specifies the response of an FDI® Client to an AcknowledgementRequest from an FDI® Server.
AbortResponse	This optional element specifies the response of an FDI® Client to an AbortRequest from an FDI® Server.
UidResponse	This optional element specifies the response of an FDI® Client to an UIDRequest from an FDI® Server.
SelectionResponse	This optional element specifies the response of an FDI® Client to a SelectionRequest from an FDI® Server.
InputResponse	This optional element specifies the response of an FDI® Client to an InputRequest from an FDI® Server.
ParameterInputResponse	This optional element specifies the response of an FDI® Client to an ParameterInputRequest from an FDI® Server.
InfoResponse	This optional element specifies the response of an FDI® Client to an InfoRequest from an FDI® Server.
DelayMessageResponse	This optional element specifies the response of an FDI® Client to a DelayMessageRequest from an FDI® Server.

A.9 ActionT

This type specifies an Action, which is a sequence of steps that requires collaboration between an FDI® Client and an FDI® Server.

The XML schema for an ActionT type is:

```
<xs:complexType name="ActionT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Name" type="xs:string"/>
        <xs:element name="Access" type="clnt:AccessT" minOccurs="0"/>
        <xs:element name="Class" type="clnt:ActionClassT"
          minOccurs="0"/>
        <xs:element name="ListOfActionArguments"
          type="clnt:ListOfActionArgumentsT" minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of an ActionT type are described in Table A.7.

Table A.7 – Elements of ActionT

Element	Description
Name	This required element specifies the name of the Action, which may be passed to the InvokeAction method of a UID Node in an FDI® Server.
Access	This optional element specifies whether the action shall be used ONLINE or OFFLINE.
Class	This optional element specifies the EDD CLASS attribute of the action.
ListOfActionArguments	This optional element specifies a list of input arguments, which may be passed to the InvokeAction method of a UID Node.

A.10 AxisListT

This type specifies list of named axis elements of a graph or a chart.

The XML schema for an AxisListT type is:

```
<xs:complexType name="AxisListT">
  <xs:sequence minOccurs="0" maxOccurs="unbounded">
    <xs:element name="Axis" type="clnt:AxisT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an AxisListT type are described in Table A.8.

Table A.8 – Elements of AxisListT

Element	Description
Axis	An element of the AxisListT.

A.11 AxisT

This type specifies an axis of a graph or a chart.

The XML schema for an AxisT type is:

```
<xs:complexType name="AxisT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="MaximumValue" type="clnt:VariantT"
          minOccurs="0"/>
        <xs:element name="MinimumValue" type="clnt:VariantT"
          minOccurs="0"/>
        <xs:element name="DisplayedRange" minOccurs="0">
          <xs:complexType>
            <xs:attribute name="NodePathViewMinimum"
              type="xs:string" use="required"/>
            <xs:attribute name="NodePathViewMaximum"
              type="xs:string" use="required"/>
          </xs:complexType>
        </xs:element>
        <xs:element name="Scaling" type="clnt:ScalingT"
          default="Linear" minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

```

        <xs:element name="Unit" type="xs:string" minOccurs="0"/>
    </xs:sequence>
    <xs:attribute name="Name" type="xs:string" use="required"/>
</xs:extension>
</xs:complexContent>
</xs:complexType>

```

The attributes of an AxisT type are described in Table A.9.

Table A.9 – Attributes of AxisT

Attribute	Description
Name	Unique name of axis in the context of Chart/Graph that this axis is present.

The elements of an AxisT type are described in Table A.10.

Table A.10 – Elements of AxisT

Element	Description
MaximumValue	This required element specifies the largest value that lies within the bounds of the axis.
MinimumValue	This required element specifies the smallest value that lies within the bounds of the axis.
DisplayedRange	Sn1p1t Sn1p1t
Scaling	This optional element specifies how the values should be scaled. The default is Linear.
Unit	This optional element specifies the engineering unit of the axis.

A.12 BitEnumerationItemListT

This type specifies the content of a bit enumeration.

The XML schema for a BitEnumerationItemListT type is:

```

<xs:complexType name="BitEnumerationItemListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="BitEnumerationItem"
      type="clnt:BitEnumerationItemT"/>
  </xs:sequence>
</xs:complexType>

```

The elements of a BitEnumerationItemListT type are described in Table A.11.

Table A.11 – Elements of BitEnumerationItemListT

Element	Description
BitEnumerationItem	An element of the bit enumeration.

A.13 BitEnumerationItemT

This type specifies the meaning of a single bit of a bitmapped value.

The XML schema for a BitEnumerationItemT type is:

```
<xs:complexType name="BitEnumerationItemT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="Value" type="xs:unsignedLong"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a BitEnumerationItemT type are described in Table A.12.

Table A.12 – Elements of BitEnumerationItemT

Element	Description
Value	This required element specifies the bit as a bit mask, i.e., 0x1 specifies the least significant bit, 0x2 specifies the second least significant bit, 0x4 specifies the third most significant bit, and so on.

A.14 ButtonListT

This type specifies a list of Button elements. The UID response contains the 0-based index of the selected button.

The XML schema for a ButtonListT type is:

```
<xs:complexType name="ButtonListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Button" type="clnt:LabelT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a ButtonListT type are described in Table A.13.

Table A.13 – Elements of ButtonListT

Element	Description
Button	An element of the button list.

A.15 ChartT

This type specifies a chart that graphically displays data from a device. The data is read from the device periodically and continuously. As new data arrives, it is displayed.

The XML schema for a ChartT type is:

```
<xs:complexType name="ChartT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementSizeableT">
      <xs:sequence>
        <xs:element name="Length" type="xs:nonNegativeInteger"
          default="600000" minOccurs="0"/>
        <xs:element name="Type" type="clnt:ChartTypeT"
          default="Strip" minOccurs="0"/>
        <xs:element name="CycleTime" type="xs:nonNegativeInteger"
          default="1000" minOccurs="0"/>
        <xs:element name="AxisList" type="clnt:AxisListT">
          <xs:key name="AxisKey">
            <xs:selector xpath="clnt:Axis"/>
            <xs:field xpath="@Name"/>
          </xs:key>
        </xs:element>
        <xs:element name="SourceList" type="clnt:SourceListT"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a ChartT type are described in Table A.14.

Table A.14 – Elements of ChartT

Element	Description
Length	This optional element specifies the length of time, in milliseconds, that is displayed by the chart. The number of samples displayed by a chart can be calculated by dividing the Length by the CycleTime. The default is 600 000.
Type	This optional element specifies the type of the chart. The default is Strip.
CycleTime	This optional element specifies the rate, in milliseconds, at which data on the chart is updated. The default is 1 000.
AxisList	This required element specifies the vertical axis data displayed by the chart.
SourceList	This required element specifies the data displayed by the chart.

A.16 ChartTypeT

This type specifies the general appearance and behavior of a chart.

The XML schema for a ChartTypeT enumeration type is:

```
<xs:simpleType name="ChartTypeT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Gauge"/>
    <xs:enumeration value="HorizontalBar"/>
    <xs:enumeration value="Scope"/>
    <xs:enumeration value="Strip"/>
    <xs:enumeration value="Sweep"/>
    <xs:enumeration value="VerticalBar"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a ChartTypeT enumeration type are described in Table A.15.

Table A.15 – Enumerations of ChartTypeT

Enumeration	Description
Gauge	A single source value is displayed as a gauge, which is a graphical representation similar to the fuel gauge in an automobile.
HorizontalBar	The source values are displayed as horizontal bars.
Scope	The source values are displayed as a curve moving from left to right. When the source values reach the far right of the display area, the display area is erased and the new source values are displayed beginning at the far left.
Strip	The source values are displayed as a curve moving from left to right. When the source values reach the far right of the display area, the display area is scrolled with the source values on the far left being removed and the new source values being displayed on the right.
Sweep	The source values are displayed as a curve moving from left to right. When the source values reach the far right of the display area, the new source values are displayed beginning at the far left, but unlike Scope only the portion of the display area needed to display the new source values is erased.
VerticalBar	The source values are displayed as vertical bars.

A.17 ColorNameT

This type specifies the name of a predefined color.

The XML schema for a ColorNameT enumeration type is:

```
<xs:simpleType name="ColorNameT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Aqua"/>
    <xs:enumeration value="Black"/>
    <xs:enumeration value="Blue"/>
    <xs:enumeration value="Fuchsia"/>
    <xs:enumeration value="Gray"/>
    <xs:enumeration value="Green"/>
    <xs:enumeration value="Lime"/>
    <xs:enumeration value="Maroon"/>
    <xs:enumeration value="Navy"/>
    <xs:enumeration value="Olive"/>
    <xs:enumeration value="Purple"/>
    <xs:enumeration value="Red"/>
    <xs:enumeration value="Silver"/>
    <xs:enumeration value="Teal"/>
    <xs:enumeration value="White"/>
    <xs:enumeration value="Yellow"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a ColorNameT enumeration type are described in Table A.16.

Table A.16 – Enumerations of ColorNameT

Enumeration	Description
Agua	RGB value #00FFFF.
Black	RGB value #000000.
Blue	RGB value #0000FF.
Fuchsia	RGB value #FF00FF.
Gray	RGB value #808080.
Green	RGB value #008000.
Lime	RGB value #00FF00.
Maroon	RGB value #800000.
Navy	RGB value #000080.
Olive	RGB value #808000.
Purple	RGB value #800080.
Red	RGB value #FF0000.
Silver	RGB value #C0C0C0.
Teal	RGB value #008080.
White	RGB value #FFFFFF.
Yellow	RGB value #FFFF00.

A.18 ColorT

This type specifies a color, either a name or an RGB value.

The XML schema for a ColorT type is:

```
<xs:simpleType name="ColorT">
  <xs:union memberTypes="clnt:ColorNameT clnt:ColorValueT"/>
</xs:simpleType>
```

A.19 ColorValueT

This type specifies an RGB value consisting of a hash character (#) followed by three or six hexadecimal digits. If three hexadecimal digits are specified, each character is repeated, for example, #F0F is equivalent to #FF00FF.

The XML schema for a ColorValueT type is:

```
<xs:simpleType name="ColorValueT">
  <xs:restriction base="xs:string">
    <xs:pattern value="#[0-9a-fA-F]{3}"/>
    <xs:pattern value="#[0-9a-fA-F]{6}"/>
  </xs:restriction>
</xs:simpleType>
```

A.20 ColumnBreakT

This type specifies a column break.

The XML schema for a ColumnBreakT type is:

```
<xs:complexType name="ColumnBreakT"/>
```

A.21 DateTimeDataT

This type specifies the data type of a date/time value.

The XML schema for a DateTimeDataT enumeration type is:

```
<xs:simpleType name="DateTimeDataT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Date"/>
    <xs:enumeration value="Time"/>
    <xs:enumeration value="DateTime"/>
    <xs:enumeration value="Duration"/>
    <xs:enumeration value="TimeValue"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a DateTimeDataT enumeration type are described in Table A.17.

Table A.17 – Enumerations of DateTimeDataT

Enumeration	Description
Date	A value that represents a date without a time.
Time	A value that represents a time without a date.
DateTime	A value that represents a date and time.
Duration	A value that represents a length of time.
TimeValue	A value that represents a time of the day.

A.22 DelayMessageRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when a delay occurs within an Action. The FDI® Client informs the user of the reason for the delay and expected duration of the delay. The FDI® Client then sends an ActionResponse back to the FDI® Server. The FDI® Server may send DelayMessageRequests frequently with updated information regarding the length of the delay. When the delay is finished, the FDI® Server sends a DelayMessageRequest with the SecondsToWait element set to zero.

The XML schema for a DelayMessageRequestT type is:

```
<xs:complexType name="DelayMessageRequestT">
  <xs:sequence>
    <xs:element name="Message" type="xs:string"/>
    <xs:element name="SecondsToWait" type="xs:unsignedLong"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a DelayMessageRequestT type are described in Table A.18.

Table A.18 – Elements of DelayMessageRequestT

Element	Description
Message	This required element specifies the message to be displayed to the user.
SecondsToWait	This required element specifies the number of seconds the delay is expected to last.

A.23 DiagramLineT

This type specifies an abstract source.

The XML schema for a DiagramLineT type is:

```
<xs:complexType name="DiagramLineT" abstract="true">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Emphasis" type="xs:boolean" default="false"
          minOccurs="0"/>
        <xs:element name="LineColor" type="clnt:ColorT"
          minOccurs="0"/>
        <xs:element name="LineType" type="clnt:LineTypeT"
          minOccurs="0"/>
        <xs:element name="VerticalAxis" minOccurs="0">
          <xs:complexType>
            <xs:attribute name="AxisRef" type="xs:string"/>
          </xs:complexType>
        </xs:element>
        <xs:element name="InitActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="RefreshActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="ExitActionList" type="clnt:ActionListT"
          minOccurs="0"/>
      </xs:sequence>
      <xs:attribute name="Name" type="xs:string" use="required"/>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The attributes of a DiagramLineT type are described in Table A.19.

Table A.19 – Attributes of DiagramLineT

Attribute	Description
Name	Unique name of DiagramlineT in the context of Chart/Graph that this DiagramlineT is present.

The elements of a DiagramLineT type are described in Table A.20.

Table A.20 – Elements of DiagramLineT

Element	Description
Emphasis	This optional element specifies whether or not this data should be graphically emphasized. The default is false.
LineColor	This optional element specifies the color in which to display the data. The default is determined by the FDI® Client.
LineType	This optional element specifies the type of line to be displayed. Every data with the same LineType should be displayed in the same fashion (line pattern, line thickness, etc.).
VerticalAxis	This optional element specifies appearance of the vertical axis. Sn1p1t
InitActionList	This optional element specifies the Actions to be executed before the data is displayed.
RefreshActionList	This optional element specifies the Actions to be executed after the data is read from the device but before it is displayed.
ExitActionList	This optional element specifies the Actions to be executed when the graph or chart containing the data is closed.

A.24 EnumerationItemListT

This type specifies the content of an enumeration.

The XML schema for an EnumerationItemListT type is:

```
<xs:complexType name="EnumerationItemListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="EnumerationItem" type="clnt:EnumerationItemT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an EnumerationItemListT type are described in Table A.21.

Table A.21 – Elements of EnumerationItemListT

Element	Description
EnumerationItem	An element of the enumeration.

A.25 EnumerationItemT

This type specifies one of the possible values of an enumerated value.

The XML schema for an EnumerationItemT type is:

```
<xs:complexType name="EnumerationItemT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="Value" type="xs:unsignedLong"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of an EnumerationItemT type are described in Table A.22.

Table A.22 – Elements of EnumerationItemT

Element	Description
Value	This required element specifies the unique identifier of the list entry in the context of the parent list element.

A.26 FormatSpecifierT

This type specifies the allowed format specifier of parameters (ANSI C compatible).

The XML schema for a FormatSpecifierT type is:

```
<xs:simpleType name="FormatSpecifierT">
  <xs:restriction base="xs:string">
    <xs:pattern value="%?[#-0+
      ]*\d*(\.\d*)?[hlL]?[dioxXucsfeEgGpn%]" />
  </xs:restriction>
</xs:simpleType>
```

A.27 GraphT

This type specifies a graph that graphically displays a finite data set from a device.

The XML schema for a GraphT type is:

```
<xs:complexType name="GraphT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementSizeableT">
      <xs:sequence>
        <xs:element name="CycleTime" type="xs:nonNegativeInteger"
          default="0" minOccurs="0"/>
        <xs:element name="AxisList" type="clnt:AxisListT">
          <xs:key name="GraphAxisKey">
            <xs:selector xpath="clnt:Axis"/>
            <xs:field xpath="@Name"/>
          </xs:key>
        </xs:element>
        <xs:element name="HorizontalAxis" minOccurs="0">
          <xs:complexType>
            <xs:attribute name="AxisRef" type="xs:string"/>
          </xs:complexType>
        </xs:element>
        <xs:element name="WaveformList" type="clnt:WaveformListT"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a GraphT type are described in Table A.23.

Table A.23 – Elements of GraphT

Element	Description
CycleTime	This optional element specifies the rate, in milliseconds, at which data set is re-read from the device and re-displayed. If the CycleTime is 0, the graph is never refreshed. The default is 0.
AxisList	This required element contains all the axes referred from graph or waveform.
HorizontalAxis	Sn1p1t
WaveformList	This required element specifies the waveforms displayed on the graph.

A.28 GridT

This type specifies a grid that displays data in a table-like grid.

The XML schema for a GridT type is:

```
<xs:complexType name="GridT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementSizeableT">
      <xs:sequence>
        <xs:element name="Handling" type="clnt:HandlingT"
          default="rw" minOccurs="0"/>
        <xs:element name="Orientation" type="clnt:OrientationT"
          default="Vertical" minOccurs="0"/>
        <xs:element name="VectorList" type="clnt:VectorListT"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a GridT type are described in Table A.24.

Table A.24 – Elements of GridT

Element	Description
Handling	This optional element specifies whether or not the data within the grid may be modified. The default is ReadWrite.
Orientation	This optional element specifies whether the vectors are displayed horizontally or vertically. The default is Vertical.
VectorList	This required element specifies the data displayed within the grid.

A.29 HandlingT

This type specifies how an item may be accessed (ro = read only, wo = write only, rw = read and write).

The XML schema for a HandlingT enumeration type is:

```
<xs:simpleType name="HandlingT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="rw"/>
    <xs:enumeration value="wo"/>
    <xs:enumeration value="ro"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a HandlingT enumeration type are described in Table A.25.

Table A.25 – Enumerations of HandlingT

Enumeration	Description
rw	The item may be read or written.
wo	The item may only be written.
ro	The item may only be read.

A.30 ImageT

This type specifies a visual entity such as a picture or illustration.

The XML schema for an ImageT type is:

```
<xs:complexType name="ImageT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Inline" type="xs:boolean" default="false"
          minOccurs="0"/>
        <xs:element name="AlignLeft" type="xs:boolean"
          default="false" minOccurs="0"/>
        <xs:element name="AlignRight" type="xs:boolean"
          default="false" minOccurs="0"/>
        <xs:element name="Link" minOccurs="0">
          <xs:complexType>
            <xs:choice>
              <xs:element name="Menu" type="clnt:MenuReferenceT"/>
              <xs:element name="Plugin" type="clnt:PluginT"/>
              <xs:element name="Action" type="clnt:ActionT"/>
            </xs:choice>
          </xs:complexType>
        </xs:element>
      </xs:sequence>
      <xs:attribute name="NodePath" type="xs:string" use="required"/>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The attributes of an ImageT type are described in Table A.26.

Table A.26 – Attributes of ImageT

Attribute	Description
NodePath	This is a mandatory attribute which gives the qualified path of the Node in the Device Model.

The elements of an ImageT type are described in Table A.27.

Table A.27 – Elements of ImageT

Element	Description
Inline	If the image is in a window, dialog, page or group and the inline qualifier is not specified, the image should span with the width of the MENU; otherwise, the image should be displayed in line with other layout items of the item list.
AlignLeft	If the image is in a window, dialog, page or group and the inline qualifier is not specified, the image should span with the width of the MENU; otherwise, the image should be displayed in line with other layout items of the item list.
AlignRight	If the image is in a window, dialog, page or group and the inline qualifier is not specified, the image should span with the width of the MENU; otherwise, the image should be displayed in line with other layout items of the item list.
Link	This optional element specifies a link to Window, Dialog, Menu, Table, or Action related to the image.

A.31 InfoRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when a message needs to be displayed to the user needs during an Action. Unlike an AcknowledgementRequest, when receiving an InfoRequest, the FDI® Client does not wait for the user to acknowledge the message. Once the message has been displayed, the FDI® Client immediately sends an InfoResponse back to the FDI® Server.

The XML schema for an InfoRequestT type is:

```
<xs:complexType name="InfoRequestT">
  <xs:sequence>
    <xs:element name="Message" type="xs:string"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an InfoRequestT type are described in Table A.28.

Table A.28 – Elements of InfoRequestT

Element	Description
Message	This required element specifies the message to be displayed to the user.

A.32 InputRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when the user needs to modify a value during an Action. Once the user has finished modifying the value, the FDI® Client sends an InputResponse back to the FDI® Server.

The XML schema for an InputRequestT type is:

```
<xs:complexType name="InputRequestT">
  <xs:sequence>
    <xs:element name="Prompt" type="xs:string"/>
    <xs:element name="InputValue" type="clnt:InputValueT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an InputRequestT type are described in Table A.29.

Table A.29 – Elements of InputRequestT

Element	Description
Prompt	This required element specifies the prompt to be displayed to the user.
InputValue	This required element specifies the value to be edited by the user.

A.33 InputResponseT

The response sent by an FDI® Client to an FDI® Server as a result of processing an InputRequest.

The XML schema for an InputResponseT type is:

```
<xs:complexType name="InputResponseT">
  <xs:sequence>
    <xs:element name="InputValue" type="clnt:VariantT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an InputResponseT type are described in Table A.30.

Table A.30 – Elements of InputResponseT

Element	Description
InputValue	This required element specifies the value the user specified.

A.34 InputValueT

This type specifies the value to be modified by the user during an InputRequest.

The XML schema for an InputValueT type is:

```
<xs:complexType name="InputValueT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="InitialValue" type="clnt:VariantT"/>
        <xs:element name="Type" type="clnt:InputValueType"
          minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of an InputValueType type are described in Table A.31.

Table A.31 – Elements of InputValueType

Element	Description
InitialValue	This required element specifies the initial value shown to the user.
Type	This optional element specifies the type of the value.

A.35 InputValueType

This type specifies the type of the value modified by the user during an InputRequest.

The XML schema for an InputValueType type is:

```
<xs:complexType name="InputValueType">
  <xs:choice>
    <xs:element name="NumericType" type="clnt:NumericDataT"/>
    <xs:element name="StringType" type="clnt:StringT"/>
    <xs:element name="Enumeration" type="clnt:EnumerationItemListT">
      <xs:unique name="InputValueUniqueEnumValue">
        <xs:selector xpath="clnt:EnumerationItem/clnt:Value"/>
        <xs:field xpath="."/>
      </xs:unique>
    </xs:element>
    <xs:element name="BitEnumeration"
      type="clnt:BitEnumerationItemListT">
      <xs:unique name="InputValueUniqueBitMask">
        <xs:selector xpath="clnt:BitEnumerationItem/clnt:Value"/>
        <xs:field xpath="."/>
      </xs:unique>
    </xs:element>
    <xs:element name="DateTimeType" type="clnt:DateTimeDataT"/>
  </xs:choice>
</xs:complexType>
```

The elements of an InputValueType type are described in Table A.32.

Table A.32 – Elements of InputValueType

Element	Description
NumericType	This optional element specifies an integer or floating point value.
StringType	This optional element specifies a string value.
Enumeration	This element specifies an enumeration. Each enumeration item defines a description and help text for a parameter value.
BitEnumeration	This element specifies an enumeration. Each enumeration item defines a description and help text for a bitmask of the parameter value.
DateTimeType	This element specifies a date or time value.

A.36 LabelHelpT

This type specifies an extended layout object with an additional localized help text.

The XML schema for a LabelHelpT type is:

```
<xs:complexType name="LabelHelpT" abstract="true">
  <xs:complexContent>
    <xs:extension base="clnt:LabelT">
      <xs:sequence>
        <xs:element name="Help" type="xs:string" minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a LabelHelpT type are described in Table A.33.

Table A.33 – Elements of LabelHelpT

Element	Description
Help	This optional element specifies a localized help text of the element.

A.37 LabelT

This type specifies the layout object with a localized description.

The XML schema for a LabelT type is:

```
<xs:complexType name="LabelT">
  <xs:sequence>
    <xs:element name="Label" type="xs:string"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a LabelT type are described in Table A.34.

Table A.34 – Elements of LabelT

Element	Description
Label	This required element specifies the localized name of the element.

A.38 LineTypeT

This type specifies the type of line on a chart or a graph. All lines of the same type shall have the same visual appearance; for example, all Data0 lines will appear the same and all Data1 lines will appear the same, but the two sets of lines shall be visually distinct.

The XML schema for a LineTypeT enumeration type is:

```
<xs:simpleType name="LineTypeT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Data"/>
    <xs:enumeration value="Data0"/>
    <xs:enumeration value="Data1"/>
    <xs:enumeration value="Data2"/>
    <xs:enumeration value="Data3"/>
    <xs:enumeration value="Data4"/>
    <xs:enumeration value="Data5"/>
    <xs:enumeration value="Data6"/>
    <xs:enumeration value="Data7"/>
    <xs:enumeration value="Data8"/>
    <xs:enumeration value="Data9"/>
    <xs:enumeration value="LowLimit"/>
    <xs:enumeration value="LowLowLimit"/>
    <xs:enumeration value="HighLimit"/>
    <xs:enumeration value="HighHighLimit"/>
    <xs:enumeration value="Transparent"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a LineTypeT enumeration type are described in Table A.35.

Table A.35 – Enumerations of LineTypeT

Enumeration	Description
Data	The line represents data.
Data0	The line represents data.
Data1	The line represents data.
Data2	The line represents data.
Data3	The line represents data.
Data4	The line represents data.
Data5	The line represents data.
Data6	The line represents data.
Data7	The line represents data.
Data8	The line represents data.
Data9	The line represents data.
LowLimit	The line represents a low limit.
LowLowLimit	The line represents a low low limit.
HighLimit	The line represent a high limit.
HighHighLimit	The line represents a high high limit.
Transparent	Represents a transparent line type.

A.39 ListOfActionArgumentsT

This type specifies a list of name-value pairs used for attributes of actions.

The XML schema for a ListOfActionArguments type is:

```
<xs:complexType name="ListOfActionArgumentsT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="ActionArgument">
      <xs:complexType>
        <xs:sequence>
          <xs:element name="ActionArgumentName" type="xs:string"/>
          <xs:element name="ActionArgumentValue" type="xs:string"/>
        </xs:sequence>
      </xs:complexType>
    </xs:element>
  </xs:sequence>
</xs:complexType>
```

A.40 MenuT

This type specifies the layout of a Window, Dialog, Page, Group, Menu, or Table.

The XML schema for a MenuT type is:

```
<xs:complexType name="MenuT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="InitActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="PreEditActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="PostEditActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="ExitActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="Access" type="clnt:AccessT" minOccurs="0"/>
        <xs:element name="ItemList">
          <xs:complexType>
            <xs:choice minOccurs="0" maxOccurs="unbounded">
              <xs:element name="Menu" type="clnt:MenuReferenceT"/>
              <xs:element name="Chart" type="clnt:ChartT"/>
              <xs:element name="Graph" type="clnt:GraphT"/>
              <xs:element name="Grid" type="clnt:GridT"/>
              <xs:element name="Image" type="clnt:ImageT"/>
              <xs:element name="Text" type="xs:string"/>
              <xs:element name="Parameter" type="clnt:ParameterT"/>
              <xs:element name="Plugin" type="clnt:PluginT"/>
              <xs:element name="Action" type="clnt:ActionT"/>
              <xs:element name="RowBreak" type="clnt:RowBreakT"/>
              <xs:element name="ColumnBreak"
                type="clnt:ColumnBreakT"/>
              <xs:element name="Separator" type="clnt:SeparatorT"/>
            </xs:choice>
          </xs:complexType>
        </xs:element>
      </xs:sequence>
      <xs:attribute name="Style" type="clnt:MenuStyleT"
        use="optional"/>
      <xs:attribute name="NodePath" type="xs:string" use="required"/>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The attributes of a MenuT type are described in Table A.36.

Table A.36 – Attributes of MenuT

Attribute	Description
Style	This optional attribute determines the menu style.
NodePath	This is a mandatory attribute which gives the qualified path of the Node in the Device Model.

The elements of a MenuT type are described in Table A.37.

Table A.37 – Elements of MenuT

Element	Description
InitActionList	This optional element specifies the Actions to be executed before the menu is activated.
PreEditActionList	This optional element specifies the Actions to be executed immediately after the element is activated.
PostEditActionList	This optional element specifies the Actions to be executed after the user has finished processing the element.
ExitActionList	This optional element specifies the Actions to be executed when the menu is deactivated.
Access	This optional element specifies whether the menu shall be used ONLINE or OFFLINE
ItemList	This optional element specifies the base content of the menu.

A.41 MenuReferenceT

This type specifies the layout of a Window, Dialog, Page, Group, Menu, or Table.

The XML schema for a MenuReferenceT type is:

```
<xs:complexType name="MenuReferenceT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Review" type="xs:boolean" minOccurs="0"/>
      </xs:sequence>
      <xs:attribute name="Style" type="clnt:MenuStyleT"
        use="optional"/>
      <xs:attribute name="NodePath" type="xs:string" use="required"/>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The attributes of a MenuReferenceT type are described in Table A.38.

Table A.38 – Attributes of MenuReferenceT

Attribute	Description
Style	This optional attribute determines the menu style.
NodePath	This is a mandatory attribute which gives the qualified path of the Node in the Device Model.

The elements of a MenuReferenceT type are described in Table A.39.

Table A.39 – Elements of MenuReferenceT

Element	Description
Review	This optional element specifies all referenced items of type VARIABLE appearing in the GUI or its subcomponents shall assume the qualifiers as READ ONLY.

A.42 MenuStyleT

This type specifies the style of a menu.

The XML schema for a MenuStyleT enumeration type is:

```
<xs:simpleType name="MenuStyleT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Menu"/>
    <xs:enumeration value="Group"/>
    <xs:enumeration value="Page"/>
    <xs:enumeration value="Table"/>
    <xs:enumeration value="Window"/>
    <xs:enumeration value="Dialog"/>
    <xs:enumeration value="Record"/>
    <xs:enumeration value="Collection"/>
    <xs:enumeration value="ItemArray"/>
    <xs:enumeration value="EditDisplay"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a MenuStyleT enumeration type are described in Table A.40.

Table A.40 – Enumerations of MenuStyleT

Enumeration	Description
Menu	EDD Menu Style 'MENU'
Group	EDD Menu Style 'GROUP'
Page	EDD Menu Style 'PAGE'
Table	EDD Menu Style 'TABLE'
Window	EDD Menu Style 'WINDOW'
Dialog	EDD Menu Style 'DIALOG'
Record	Menu represents EDD 'RECORD'
Collection	Menu represents EDD 'COLLECTION'
ItemArray	Menu represents EDD 'ITEMARRAY'
EditDisplay	Menu represents EDD 'EDIT_DISPLAY'

A.43 NumericDataT

This type specifies the data type of an integer, boolean or floating point value.

The XML schema for a NumericDataT enumeration type is:

```
<xs:simpleType name="NumericDataT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="SignedInteger"/>
    <xs:enumeration value="UnsignedInteger"/>
    <xs:enumeration value="FloatingPoint"/>
    <xs:enumeration value="Double"/>
    <xs:enumeration value="Boolean"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a NumericDataT enumeration type are described in Table A.41.

Table A.41 – Enumerations of NumericDataT

Enumeration	Description
SignedInteger	A signed integer.
UnsignedInteger	An unsigned integer.
FloatingPoint	A floating point number.
Double	A Double point number.
Boolean	A boolean value.

A.44 NumericTemplateT

This type specifies the template used to display a numeric parameter value.

The XML schema for a NumericTemplateT type is:

```
<xs:complexType name="NumericTemplateT">
  <xs:sequence>
    <xs:element name="DataType" type="clnt:NumericDataT"/>
    <xs:element name="Options" type="clnt:VariantOptionListT"
      minOccurs="0" maxOccurs="1">
      <xs:unique name="UiTemplateUniqueVariantValue">
        <xs:selector xpath="clnt:Option/clnt:Value/*"/>
        <xs:field xpath="."/>
      </xs:unique>
    </xs:element>
  </xs:sequence>
</xs:complexType>
```

The elements of a NumericTemplateT type are described in Table A.42.

Table A.42 – Elements of NumericTemplateT

Element	Description
DataType	This required element specifies the type of the numeric parameter.
Options	This optional element specifies the list of options the user may select for the string.

A.45 OptionListT

This type specifies a list of Option elements. The selection response contains the 0-based index of the selected option.

The XML schema for an OptionListT type is:

```
<xs:complexType name="OptionListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Option" type="clnt:LabelT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of an OptionListT type are described in Table A.43.

Table A.43 – Elements of OptionListT

Element	Description
Option	An element of the list.

A.46 OrientationT

This type specifies a direction.

The XML schema for an OrientationT enumeration type is:

```
<xs:simpleType name="OrientationT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Horizontal"/>
    <xs:enumeration value="Vertical"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of an OrientationT enumeration type are described in Table A.44.

Table A.44 – Enumerations of OrientationT

Enumeration	Description
Horizontal	Left to right and right to left.
Vertical	Top to bottom and bottom to top.

A.47 ParameterInputRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when the user needs to modify a value during an Action. Once the user has finished modifying the value, the FDI® Client sends an InputResponse back to the FDI® Server.

The XML schema for a ParameterInputRequestT type is:

```
<xs:complexType name="ParameterInputRequestT">
  <xs:sequence>
    <xs:element name="Prompt" type="xs:string"/>
    <xs:element name="Parameter" type="clnt:ParameterT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a ParameterInputRequestT type are described in Table A.45.

Table A.45 – Elements of ParameterInputRequestT

Element	Description
Prompt	This required element specifies the prompt to be displayed to the user.
Parameter	This required element specifies the value to be edited by the user.

A.48 ParameterListT

This type specifies a list of Parameter elements.

The XML schema for a ParameterListT type is:

```
<xs:complexType name="ParameterListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Parameter" type="clnt:ParameterT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a ParameterListT type are described in Table A.46.

Table A.46 – Elements of ParameterListT

Element	Description
Parameter	An element of the list.

A.49 ParameterT

This type specifies a device or block parameter that is displayed in a user interface element such as a Window or Dialog.

The XML schema for a ParameterT type is:

```
<xs:complexType name="ParameterT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementSizeableT">
      <xs:sequence>
        <xs:element name="UITemplate" type="clnt:UITemplateT"/>
        <xs:element name="Unit" type="xs:string" minOccurs="0"/>
        <xs:element name="Handling" type="clnt:HandlingT"
          default="rw" minOccurs="0"/>
        <xs:element name="RangeList" type="clnt:RangeListT"
          minOccurs="0"/>
        <xs:element name="DisplayFormat" type="clnt:FormatSpecifierT"
          minOccurs="0"/>
        <xs:element name="EditFormat" type="clnt:FormatSpecifierT"
          minOccurs="0"/>
        <xs:element name="TimeFormat" type="xs:string"
          minOccurs="0"/>
        <xs:element name="TimeScale" type="clnt:TimeScaleT"
          minOccurs="0"/>
        <xs:element name="DisplayLabel" type="xs:boolean"
          default="true" minOccurs="0"/>
        <xs:element name="DisplayValue" type="xs:boolean"
          default="true" minOccurs="0"/>
        <xs:element name="DisplayUnit" type="xs:boolean"
          default="true" minOccurs="0"/>
        <xs:element name="PreEditActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="PostEditActionList" type="clnt:ActionListT"
          minOccurs="0"/>
        <xs:element name="ScalingFactor" type="xs:double"
          minOccurs="0"/>
        <xs:element name="Class" type="clnt:ParameterClassT"
          minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a ParameterT type are described in Table A.47.

Table A.47 – Elements of ParameterT

Element	Description
UITemplate	This element specifies the complex UI template used to display a parameter. UI templates modify how parameter values are displayed. The default UI template displays a parameter value as plain text.
Unit	This optional element specifies the engineering unit of the parameter. The default is the parameter has no engineering unit.
Handling	This optional element specifies whether or not the parameter may be modified. The default is ReadWrite.
RangeList	This optional element specifies the minimum and maximum values to which the user may set the parameter.
DisplayFormat	This optional element specifies the format to be used when displaying the value of the parameter as specified in IEC 61804-3. The default is dependent upon the data type of the parameter and is determined by the FDI® Client.
EditFormat	This optional element specifies the format to be used when modifying the value of the parameter as specified in IEC 61804-3. The default is dependent upon the data type of the parameter and is determined by the FDI® Client.
TimeFormat	This optional element specifies the format to be used when displaying and modifying the value of parameters of date or time types.
TimeScale	This optional element specifies the TIME_SCALE of parameters of date or time types.
DisplayLabel	This optional element specifies whether or not the parameter's label should be displayed. The default is true.
DisplayValue	This optional element specifies whether or not the parameter's value should be displayed. The default is true.
DisplayUnit	This optional element specifies whether or not the parameter's unit should be displayed. The default is true.
PreEditActionList	This optional element specifies the Actions to be executed before the parameter is modified by the user.
PostEditActionList	This optional element specifies the Actions to be executed after the parameter is modified by the user.
ScalingFactor	This element specifies the scaling factor to be used when the value of the parameter will be shown to the user. This visible value is the result of the multiplication of the factor and the parameter value, returned by the device.
Class	This optional element specifies the EDD CLASS attribute of VARIABLE.

A.50 PluginT

This type specifies a User Interface Plug-in that is referenced from a user interface element such as a Window or Dialog.

The XML schema for a PluginT type is:

```
<xs:complexType name="PluginT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Identifier">
          <xs:simpleType>
            <xs:restriction base="xs:string">
              <xs:pattern value="[0-9a-fA-F]{8}-[0-9a-fA-F]{4}-[0-9a-fA-F]{4}-[0-9a-fA-F]{4}-[0-9a-fA-F]{12}"/>
            </xs:restriction>
          </xs:simpleType>
        </xs:element>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a PluginT type are described in Table A.48.

Table A.48 – Elements of PluginT

Element	Description
Identifier	This required element specifies the Universally Unique Identifier (UUID) that identifies the plug-in.

A.51 RangeListT

This type specifies a list of Range elements.

The XML schema for a RangeListT type is:

```
<xs:complexType name="RangeListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Range" type="clnt:RangeT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a RangeListT type are described in Table A.49.

Table A.49 – Elements of RangeListT

Element	Description
Range	An element of the list.

A.52 RangeT

This type specifies a range defined by a minimum and a maximum value.

The XML schema for a RangeT type is:

```
<xs:complexType name="RangeT">
  <xs:sequence>
    <xs:element name="MinimumValue" type="clnt:VariantT"/>
    <xs:element name="MaximumValue" type="clnt:VariantT"
      minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a RangeT type are described in Table A.50.

Table A.50 – Elements of RangeT

Element	Description
MinimumValue	This required element specifies the minimum value of the range.
MaximumValue	This required element specifies the maximum value of the range.

A.53 ResponseT

This type specifies the response sent by an FDI® Client to an FDI® Server as a result of processing an Action request.

The XML schema for a ResponseT type is:

```
<xs:complexType name="ResponseT"/>
```

A.54 RowBreakT

This type specifies a row break.

The XML schema for a RowBreakT type is:

```
<xs:complexType name="RowBreakT"/>
```

A.55 ScalingT

This type specifies a method of scaling values from a lower bound to an upper bound.

The XML schema for a ScalingT enumeration type is:

```
<xs:simpleType name="ScalingT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="Linear"/>
    <xs:enumeration value="Logarithmic"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a ScalingT enumeration type are described in Table A.51.

Table A.51 – Enumerations of ScalingT

Enumeration	Description
Linear	The values are scaled linearly.
Logarithmic	The values are scaled logarithmically via the natural logarithm.

A.56 SelectionRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when the user needs to choose from a list of options during an Action. Once the user has selected one of the options, the FDI® Client sends an SelectionResponse back to the FDI® Server.

The XML schema for a SelectionRequestT type is:

```
<xs:complexType name="SelectionRequestT">
  <xs:sequence>
    <xs:element name="Prompt" type="xs:string"/>
    <xs:element name="OptionList" type="clnt:OptionListT">
      <xs:unique name="UniqueOptionIdentifier">
        <xs:selector xpath="clnt:Option/clnt:Label"/>
        <xs:field xpath="."/>
      </xs:unique>
    </xs:element>
  </xs:sequence>
</xs:complexType>
```

The elements of a SelectionRequestT type are described in Table A.52.

Table A.52 – Elements of SelectionRequestT

Element	Description
Prompt	This required element specifies the prompt to be displayed to the user.
OptionList	This required element specifies the list of options the user may select.

A.57 SelectionResponseT

This type specifies the response sent by an FDI® Client to an FDI® Server as a result of processing a SelectionRequest.

The XML schema for a SelectionResponseT type is:

```
<xs:complexType name="SelectionResponseT">
  <xs:sequence>
    <xs:element name="SelectedOption" type="xs:unsignedLong"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a SelectionResponseT type are described in Table A.53.

Table A.53 – Elements of SelectionResponseT

Element	Description
SelectedOption	The 0-based index of the selected option.

A.58 SeparatorT

This type specifies a separator.

The XML schema for a SeparatorT type is:

```
<xs:complexType name="SeparatorT"/>
```

A.59 SizeT

This type specifies the relative size of an item.

The XML schema for a SizeT enumeration type is:

```
<xs:simpleType name="SizeT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="XXX_SMALL"/>
    <xs:enumeration value="XX_SMALL"/>
    <xs:enumeration value="X_SMALL"/>
    <xs:enumeration value="SMALL"/>
    <xs:enumeration value="MEDIUM"/>
    <xs:enumeration value="LARGE"/>
    <xs:enumeration value="X_LARGE"/>
    <xs:enumeration value="XX_LARGE"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a SizeT enumeration type are described in Table A.54.

Table A.54 – Enumerations of SizeT

Enumeration	Description
XXX_SMALL	Extra extra extra small.
XX_SMALL	Extra extra small.
X_SMALL	Extra small.
SMALL	Small.
MEDIUM	Medium.
LARGE	Large.
X_LARGE	Extra large.
XX_LARGE	Extra extra large.

A.60 ParameterClassT

This type specifies the EDD CLASS type definition for VARIABLE.

The XML schema for a ParameterClassT enumeration type is:

```
<xs:simpleType name="ParameterClassT">
  <xs:list>
    <xs:simpleType>
      <xs:restriction base="xs:string">
        <xs:enumeration value="ALARM"/>
        <xs:enumeration value="ANALOG_INPUT"/>
        <xs:enumeration value="ANALOG_OUTPUT"/>
        <xs:enumeration value="COMPUTATION"/>
        <xs:enumeration value="CONSTANT"/>
        <xs:enumeration value="CONTAINED"/>
        <xs:enumeration value="CORRECTION"/>
        <xs:enumeration value="DEVICE"/>
        <xs:enumeration value="SPECIALIST"/>
        <xs:enumeration value="DIAGNOSTIC"/>
        <xs:enumeration value="DIGITAL_INPUT"/>
        <xs:enumeration value="DIGITAL_OUTPUT"/>
        <xs:enumeration value="DISCRETE_INPUT"/>
        <xs:enumeration value="DISCRETE_OUTPUT"/>
        <xs:enumeration value="DYNAMIC"/>
        <xs:enumeration value="FREQUENCY_INPUT"/>
        <xs:enumeration value="FREQUENCY_OUTPUT"/>
        <xs:enumeration value="HART"/>
        <xs:enumeration value="INPUT"/>
        <xs:enumeration value="IS_CONFIG"/>
        <xs:enumeration value="LOCAL"/>
        <xs:enumeration value="LOCAL_DISPLAY"/>
        <xs:enumeration value="OPERATE"/>
        <xs:enumeration value="OPTIONAL"/>
        <xs:enumeration value="OUTPUT"/>
        <xs:enumeration value="SERVICE"/>
        <xs:enumeration value="TEMPORARY"/>
        <xs:enumeration value="TUNE"/>
      </xs:restriction>
    </xs:simpleType>
  </xs:list>
</xs:simpleType>
```

The enumeration values of a ParameterClassT enumeration type are described in Table A.55.

Table A.55 – Enumerations of ParameterClassT

Enumeration	Description
ALARM	The VARIABLE contains alarm limits.
ANALOG_INPUT	The VARIABLE is part of an analog input block.
ANALOG_OUTPUT	The VARIABLE is part of an analog output block.
COMPUTATION	The VARIABLE is part of a computation block.
CONSTANT	The VARIABLE is constant.
CONTAINED	The VARIABLE represents the physical characteristics of the device.
CORRECTION	The VARIABLE is part of the correction block.
DEVICE	The VARIABLE represents the physical characteristics of the device.
SPECIALIST	The VARIABLE is a configuration parameter. Permission to modify this VARIABLE may only be granted to users that are specialists for this device.
DIAGNOSTIC	The VARIABLE indicates the device status.
DIGITAL_INPUT	The VARIABLE is part of a digital input block.
DIGITAL_OUTPUT	The VARIABLE is part of a digital output block.
DISCRETE_INPUT	The VARIABLE is part of a discrete input block.
DISCRETE_OUTPUT	The VARIABLE is part of a discrete output block.
DYNAMIC	The VARIABLE is modified by the device without stimulus from the network.
FREQUENCY_INPUT	The VARIABLE is part of a frequency input block.
FREQUENCY_OUTPUT	The VARIABLE is part of a frequency output block.
HART	The VARIABLE is part of the HART block which characterizes the HART interface.
INPUT	The VARIABLE is part of an input block.
IS_CONFIG	A modification of the VARIABLE results in setting the revision counter or configuration-changed bit, as applicable.
LOCAL	The VARIABLE is locally used by the EDD application
LOCAL_DISPLAY	The VARIABLE is part of the local display block.
OPERATE	The VARIABLE is used to control a block's operation.
OPTIONAL	The VARIABLE may not be present in the device.
OUTPUT	The VARIABLE is part of the output block.
SERVICE	The VARIABLE is used when performing routine maintenance.
TEMPORARY	The VARIABLE is initialized to its DEFAULT_VALUE in each EDD application session. LOCAL variables may be persisted by the EDD application; TEMPORARY variables are never persisted.
TUNE	The VARIABLE is used to tune the algorithm of a block.

A.61 ActionClassT

This type specifies the EDD CLASS definition of an Action.

The XML schema for an ActionClassT enumeration type is:

```
<xs:simpleType name="ActionClassT">
  <xs:list>
    <xs:simpleType>
      <xs:restriction base="xs:string">
        <xs:enumeration value="ALARM"/>
        <xs:enumeration value="ANALOG_OUTPUT"/>
        <xs:enumeration value="BACKGROUND"/>
        <xs:enumeration value="COMPUTATION"/>
        <xs:enumeration value="CONTAINED"/>
        <xs:enumeration value="CORRECTION"/>
        <xs:enumeration value="DEVICE"/>
        <xs:enumeration value="SPECIALIST"/>
        <xs:enumeration value="DIAGNOSTIC"/>
        <xs:enumeration value="DISCRETE"/>
        <xs:enumeration value="FREQUENCY"/>
        <xs:enumeration value="HART"/>
        <xs:enumeration value="INPUT"/>
        <xs:enumeration value="LOCAL_DISPLAY"/>
        <xs:enumeration value="OPERATE"/>
        <xs:enumeration value="OUTPUT"/>
        <xs:enumeration value="SERVICE"/>
        <xs:enumeration value="TUNE"/>
      </xs:restriction>
    </xs:simpleType>
  </xs:list>
</xs:simpleType>
```

The enumeration values of an ActionClassT enumeration type are described in Table A.56.

Table A.56 – Enumerations of ActionClassT

Enumeration	Description
ALARM	The METHOD is associated with an alarm (e.g., specifying alarm limits, indicating alarm status, etc.)
ANALOG_OUTPUT	The METHOD is part of an analog output block.
BACKGROUND	CLASS BACKGROUND is provided to enhance the simulation of a device using its EDD. In all EDD applications other than Simulators, this class shall be ignored. CLASS BACKGROUND METHODS shall not belong to any other CLASS. CLASS BACKGROUND shall only be used in METHODS and, when used, indicates the Simulator shall periodically execute the METHOD. All METHODS of CLASS BACKGROUND shall be run at the monotonic period specified by the VARIABLE background_period. The METHOD shall not be run during a packet handling operation (i.e., between the time the request packet arrives and the corresponding response packet has been dispatched to the communications handler). If the background_period expires during this interval, then the METHOD shall be run as soon as the command response is generated.
COMPUTATION	The METHOD is part of a computation block.
CONTAINED	The METHOD represents the physical characteristics of the device.
CORRECTION	The METHOD supports the transducers in the field device. The METHOD may establish transducer limits, provide signal damping, indicate the transducer's value, linearize or calibrate the transducer, etc.
DEVICE	The METHOD specifies the physical characteristics of the device.
SPECIALIST	Permission to execute this METHOD may only be granted to users that are specialists for this device.
DIAGNOSTIC	The METHOD evaluates the device status.
DISCRETE	The METHOD supports the discrete and or digital I/O of the device.
FREQUENCY	The METHOD supports the frequency I/O of the device.
HART	The METHOD is part of the HART block which characterizes the HART interface. There is only one HART block.
INPUT	The METHOD is part of an input block. An input block is a special kind of computation block which does unit conversions, scaling, and damping. The input block parameters can be determined by the output of another block.
LOCAL_DISPLAY	The METHOD is part of the local display block. A local display block contains the VARIABLES associated with the local interface (keyboard, display, etc.) of the device.
OPERATE	The METHOD is used to control a block's operation.
OUTPUT	The METHOD is part of the output block. The values of output parameters may be accessed by another block input.
SERVICE	The METHOD is used when performing routine maintenance.
TUNE	The METHOD is used to tune the algorithm of a block.

A.62 SourceListT

This type specifies a list of Source elements.

The XML schema for a SourceListT type is:

```
<xs:complexType name="SourceListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Source" type="clnt:SourceT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a SourceListT type are described in Table A.57.

Table A.57 – Elements of SourceListT

Element	Description
Source	An element of the list.

A.63 SourceT

This type specifies a source of data values displayed by a chart.

The XML schema for a SourceT type is:

```
<xs:complexType name="SourceT">
  <xs:complexContent>
    <xs:extension base="clnt:DiagramLineT">
      <xs:sequence>
        <xs:element name="ParameterList" type="clnt:ParameterListT"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a SourceT type are described in Table A.58.

Table A.58 – Elements of SourceT

Element	Description
ParameterList	This required element specifies the parameters to be sampled and displayed.

A.64 StringDataT

This type specifies that data type of a string value.

The XML schema for a StringDataT enumeration type is:

```
<xs:simpleType name="StringDataT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="ASCII"/>
    <xs:enumeration value="BITSTRING"/>
    <xs:enumeration value="EUC"/>
    <xs:enumeration value="PACKED_ASCII"/>
    <xs:enumeration value="PASSWORD"/>
    <xs:enumeration value="VISIBLE"/>
    <xs:enumeration value="OCTET"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a StringDataT enumeration type are described in Table A.59.

Table A.59 – Enumerations of StringDataT

Enumeration	Description
ASCII	String of ASCII characters.
BITSTRING	Variables of data type BIT_ENUMERATED are string constants which identify the position of a character of the VARIABLE value with its position.
EUC	(Extended Unit code) – is the internal code for specific characters (for example, China: EUC-CN, Taiwan EUC-TW). EUC is used to handle East Asian languages (ISO/IEC 10646-1).
PACKED_ASCII	Is a subset of ASCII produced by removing the two most significant bits of each ASCII character.
PASSWORD	Is a string type and is intended for specifying password strings. Except for how the variable is presented to the user, password and ASCII string types are identical.
VISIBLE	This string is an ordered sequence of characters from the ISO/IEC 10646-1 and ISO/IEC 2375 character set.
OCTET	Is for specifying a sequence of unformatted binary data whose definition is determined by the implementation of the device.

A.65 StringTemplateT

This type specifies the template used to display a string parameter value.

The XML schema for a StringTemplateT type is:

```
<xs:complexType name="StringTemplateT">
  <xs:sequence>
    <xs:element name="DataType" type="clnt:StringDataT"/>
    <xs:element name="Options" type="clnt:StringOptionListT"
      minOccurs="0" maxOccurs="1">
      <xs:unique name="UiTemplateUniqueStringValue">
        <xs:selector xpath="clnt:Option/clnt:Value"/>
        <xs:field xpath="."/>
      </xs:unique>
    </xs:element>
  </xs:sequence>
</xs:complexType>
```

The elements of a StringTemplateT type are described in Table A.60.

Table A.60 – Elements of StringTemplateT

Element	Description
DataType	This required element specifies the type of the string parameter.
Options	This optional element specifies the list of options the user may select for the string.

A.66 StringOptionListT

This type specifies the list of options to choose for the string parameter type.

The XML schema for a StringOptionListT type is:

```
<xs:complexType name="StringOptionListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Option" type="clnt:StringOptionT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a StringOptionListT type are described in Table A.61.

Table A.61 – Elements of StringOptionListT

Element	Description
Option	An element of the string options.

A.67 StringOptionT

This type specifies one of the possible values of string options.

The XML schema for a StringOptionT type is:

```
<xs:complexType name="StringOptionT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="Value" type="xs:string"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a StringOptionT type are described in Table A.62.

Table A.62 – Elements of StringOptionT

Element	Description
Value	This required element specifies the unique identifier of the list entry in the context of the parent list element.

A.68 StringT

This type specifies the type of a string value.

The XML schema for a StringT type is:

```
<xs:complexType name="StringT">
  <xs:sequence>
    <xs:element name="DataType" type="clnt:StringDataT"/>
    <xs:element name="Length" type="xs:unsignedInt"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a StringT type are described in Table A.63.

Table A.63 – Elements of StringT

Element	Description
DataType	This required element specifies the data type of the string.
Length	This required element specifies the length of the string, in characters not in octets.

A.69 TimeScaleT

This enum type specifies the options for the EDD timescale modifier.

The XML schema for a TimeScaleT enumeration type is:

```
<xs:simpleType name="TimeScaleT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="SECONDS"/>
    <xs:enumeration value="MINUTES"/>
    <xs:enumeration value="HOURS"/>
  </xs:restriction>
</xs:simpleType>
```

The enumeration values of a TimeScaleT enumeration type are described in Table A.64.

Table A.64 – Enumerations of TimeScaleT

Enumeration	Description
SECONDS	The access shall be done ONLINE.
MINUTES	The access shall be done OFFLINE.
HOURS	The access shall be done OFFLINE.

A.70 UidLayoutInformation

This element is the root entry element containing the UID.

The XML schema for a UidLayoutInformation element is:

```
<xs:element name="UidLayoutInformation">
  <xs:complexType>
    <xs:sequence>
      <xs:choice>
        <xs:element name="Menu" type="clnt:MenuT"/>
        <xs:element name="ActionRequest" type="clnt:ActionRequestT"/>
        <xs:element name="ActionResponse"
          type="clnt:ActionResponseT"/>
      </xs:choice>
    </xs:sequence>
  </xs:complexType>
</xs:element>
```

The elements of a UidLayoutInformation element are described in Table A.65.

Table A.65 – Elements of UidLayoutInformation

Element	Description
Menu	This optional element specifies a request from an FDI® Server to an FDI® Client to display a menu.
ActionRequest	This optional element specifies a request from an FDI® Server to an FDI® Client for the user to perform a specific action.
ActionResponse	This optional element specifies a request from an FDI® Server to an FDI® Client for a response to be displayed to the user.

A.71 UidRequestT

This type specifies a request sent from an FDI® Server to an FDI® Client when an advanced user interface needs to be shown to the user during an Action. The structure of the user interface is specified as a Dialog, Table, or Window. When the user interface is no longer needed, the FDI® Client sends a UIDResponse back to the FDI® Server.

The XML schema for a UidRequestT type is:

```
<xs:complexType name="UidRequestT">
  <xs:sequence>
    <xs:element name="UidRef" type="xs:string"/>
    <xs:element name="ButtonList" type="clnt:ButtonListT">
      <xs:unique name="UniqueButtonIdentifier">
        <xs:selector xpath="clnt:Button/clnt:Label"/>
        <xs:field xpath="."/>
      </xs:unique>
    </xs:element>
  </xs:sequence>
</xs:complexType>
```

The elements of a UidRequestT type are described in Table A.66.

Table A.66 – Elements of UidRequestT

Element	Description
UidRef	This required element specifies the Node path of the UID containing the definition of the Dialog, Table, or Window to be displayed.
ButtonList	This required element specifies the buttons displayed by the FDI® Client that the user may press to indicate the user interface is no longer needed.

A.72 UidResponseT

This type specifies the response sent by an FDI® Client to an FDI® Server as a result of processing a SelectionRequest.

The XML schema for a UidResponseT type is:

```
<xs:complexType name="UidResponseT">
  <xs:sequence>
    <xs:element name="SelectedButton" type="xs:unsignedLong"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a UidResponseT type are described in Table A.67.

Table A.67 – Elements of UidResponseT

Element	Description
SelectedButton	The 0-based index of the selected button. If the button list is not provided in the UID request, Next and Cancel buttons are shown. SelectedButton=0 means that the Next button was pressed.

A.73 UiElementSizeableT

The XML schema for a UiElementSizeableT type is:

```
<xs:complexType name="UiElementSizeableT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Height" type="clnt:SizeT" minOccurs="0"/>
        <xs:element name="Width" type="clnt:SizeT" minOccurs="0"/>
      </xs:sequence>
      <xs:attribute name="NodePath" type="xs:string" use="required"/>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The attributes of a UiElementSizeableT type are described in Table A.68.

Table A.68 – Attributes of UiElementSizeableT

Attribute	Description
NodePath	This is a mandatory attribute which specifies the qualified path of the Node in the Device Model. The path description helps in finding a Node in the Information Model.

The elements of a UiElementSizeableT type are described in Table A.69.

Table A.69 – Elements of UiElementSizeableT

Element	Description
Height	This optional element specifies the relative height of the element.
Width	This optional element specifies the relative width of the element.

A.74 UiElementT

This type specifies an extended layout object with a settable visibility.

The XML schema for a UiElementT type is:

```
<xs:complexType name="UiElementT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="Visibility" type="xs:boolean"
          minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a UiElementT type are described in Table A.70.

Table A.70 – Elements of UiElementT

Element	Description
Visibility	This optional element specifies whether the element is visible or not. The default is visible.

A.75 UiTemplateT

This type specifies templates used to display a parameter value. UI templates modify how parameter values are displayed.

The XML schema for a UiTemplateT type is:

```
<xs:complexType name="UiTemplateT">
  <xs:sequence>
    <xs:choice>
      <xs:element name="Enumeration"
        type="clnt:EnumerationItemListT">
        <xs:unique name="UiTemplateUniqueEnumValue">
          <xs:selector xpath="clnt:EnumerationItem/clnt:Value"/>
          <xs:field xpath="."/>
        </xs:unique>
      </xs:element>
      <xs:element name="BitEnumeration"
        type="clnt:BitEnumerationItemListT">
        <xs:unique name="UiTemplateUniqueBitMask">
          <xs:selector xpath="clnt:BitEnumerationItem/clnt:Value"/>
          <xs:field xpath="."/>
        </xs:unique>
      </xs:element>
      <xs:element name="String" type="clnt:StringTemplateT"/>
      <xs:element name="Arithmetic" type="clnt:NumericTemplateT"/>
      <xs:element name="DateTime" type="clnt:DateTimeDataT"/>
    </xs:choice>
    <xs:element name="UiTemplateSize" type="xs:int" minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a UiTemplateT type are described in Table A.71.

Table A.71 – Elements of UiTemplateT

Element	Description
Enumeration	This element specifies that the value shall be displayed with an UI template optimized for enumerations. Each enumeration item defines a description and help text for a parameter value.
BitEnumeration	This element specifies that the value shall be displayed with an UI template optimized for bit enumerations. Each enumeration item defines a description and help text for a bitmask of the parameter value.
String	This element specifies that the value shall be displayed with an UI template optimized for all values of String Types.
Arithmetic	This element specifies that the value shall be displayed with an UI template optimized for all values of Numeric Types.
DateTime	This element specifies that the value shall be displayed with an UI template optimized for all values of Date and Time Types.
UiTemplateSize	This is an optional element used to specify the size of the Arithmetic data types for example Byte information for Signed and Unsigned integer and to specify the number of characters in case of string datatypes.

A.76 VariantT

This type specifies a value. The value is in raw format and not scaled.

The XML schema for a VariantT type is:

```
<xs:complexType name="VariantT">
  <xs:choice>
    <xs:element name="Float" type="xs:float"/>
    <xs:element name="Double" type="xs:double"/>
    <xs:element name="Integer" type="xs:integer"/>
    <xs:element name="UnsignedInteger" type="xs:nonNegativeInteger"/>
    <xs:element name="Date" type="xs:date"/>
    <xs:element name="DateTime" type="xs:dateTime"/>
    <xs:element name="Time" type="xs:time"/>
    <xs:element name="Duration" type="xs:duration"/>
    <xs:element name="String" type="xs:string"/>
    <xs:element name="Boolean" type="xs:boolean"/>
  </xs:choice>
</xs:complexType>
```

The elements of a VariantT type are described in Table A.72.

Table A.72 – Elements of VariantT

Element	Description
Float	This optional element specifies a single precision floating point value.
Double	This optional element specifies a double precision floating point value.
Integer	This optional element specifies a signed integer value.
UnsignedInteger	This optional element specifies an unsigned integer value.
Date	This optional element specifies a date value.
DateTime	This optional element specifies a date and time value.
Time	This optional element specifies a time value.
Duration	This optional element specifies a length of time.
String	This optional element specifies a string.
Boolean	This optional element specifies a Boolean.

A.77 VariantOptionListT

This type specifies the list of options to choose for the numeric parameter type.

The XML schema for a VariantOptionListT type is:

```
<xs:complexType name="VariantOptionListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Option" type="clnt:VariantOptionT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a VariantOptionListT type are described in Table A.73.

Table A.73 – Elements of VariantOptionListT

Element	Description
Option	An element of the numeric options.

A.78 VariantOptionT

This type specifies one of the possible values of numeric options.

The XML schema for a VariantOptionT type is:

```
<xs:complexType name="VariantOptionT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="Value" type="clnt:VariantT"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a VariantOptionT type are described in Table A.74.

Table A.74 – Elements of VariantOptionT

Element	Description
Value	This required element specifies the unique identifier of the list entry in the context of the parent list element.

A.79 VectorListT

This type specifies a list of Vector elements.

The XML schema for a VectorListT type is:

```
<xs:complexType name="VectorListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Vector" type="clnt:VectorT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a VectorListT type are described in Table A.75.

Table A.75 – Elements of VectorListT

Element	Description
Vector	An element of the list.

A.80 VectorT

This type specifies the content of a row or column in a grid.

The XML schema for a VectorT type is:

```
<xs:complexType name="VectorT">
  <xs:sequence>
    <xs:element name="Heading" type="xs:string"/>
    <xs:element name="Items">
      <xs:complexType>
        <xs:sequence minOccurs="0" maxOccurs="unbounded">
          <xs:choice>
            <xs:element name="Parameter" type="clnt:ParameterT"/>
            <xs:element name="Value" type="clnt:VariantT"/>
          </xs:choice>
        </xs:sequence>
      </xs:complexType>
    </xs:element>
  </xs:sequence>
</xs:complexType>
```

The elements of a VectorT type are described in Table A.76.

Table A.76 – Elements of VectorT

Element	Description
Heading	This required element specifies the localized heading displayed along with the data.
Items	This required element specifies the data to be displayed, which may be parameters or static scalar values.

A.81 WaveformListT

This type specifies a list of Waveform elements.

The XML schema for a WaveformListT type is:

```
<xs:complexType name="WaveformListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Waveform" type="clnt:WaveformT"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a WaveformListT type are described in Table A.77.

Table A.77 – Elements of WaveformListT

Element	Description
Waveform	An element of the list.

A.82 WaveformT

This type specifies a single data set displayed on a graph. A graph may contain one or more waveforms.

The XML schema for a WaveformT type is:

```
<xs:complexType name="WaveformT">
  <xs:complexContent>
    <xs:extension base="clnt:DiagramLineT">
      <xs:sequence>
        <xs:element name="Handling" type="clnt:HandlingT"
          default="rw" minOccurs="0" maxOccurs="1"/>
        <xs:element name="WaveformType" type="clnt:WaveformTypeT"
          minOccurs="1" maxOccurs="1"/>
        <xs:element name="KeyPointList"
          type="clnt:WaveformKeyPointListT" minOccurs="0"
          maxOccurs="1"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a WaveformT type are described in Table A.78.

Table A.78 – Elements of WaveformT

Element	Description
Handling	This optional element specifies whether or not the waveform may be modified. The default is ReadWrite.
WaveformType	
KeyPointList	This optional element specifies a collection of key points that are displayed along with the waveform. The key points may or may not be points on the waveform itself.

A.83 WaveformTypeT

This is the abstract base type of all Waveform Types

The XML schema for a WaveformTypeT type is:

```
<xs:complexType name="WaveformTypeT" abstract="true">
```

A.84 WaveformTypeHorizontalT

From EDD-Spec: The HORIZONTAL attribute specifies a WAVEFORM that contains horizontal lines.

The XML schema for a WaveformTypeHorizontalT type is:

```
<xs:complexType name="WaveformTypeHorizontalT">
  <xs:complexContent>
    <xs:extension base="clnt:WaveformTypeT">
      <xs:sequence>
        <xs:element name="Yvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="1"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a WaveformTypeHorizontalT type are described in Table A.79.

Table A.79 – Elements of WaveformTypeHorizontalT

Element	Description
Yvalues	From EDD-Spec: The Y_VALUES attribute specifies the Y coordinate of each horizontal line in the WAVEFORM.

A.85 WaveformTypeVerticalT

From EDD-Spec: The VERTICAL attribute specifies a WAVEFORM that contains vertical lines

The XML schema for a WaveformTypeVerticalT type is:

```
<xs:complexType name="WaveformTypeVerticalT">
  <xs:complexContent>
    <xs:extension base="clnt:WaveformTypeT">
      <xs:sequence>
        <xs:element name="Xvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="1"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a WaveformTypeVerticalT type are described in Table A.80.

Table A.80 – Elements of WaveformTypeVerticalT

Element	Description
Xvalues	From EDD-Spec: The X_VALUES attribute specifies the X coordinate of each vertical line in the WAVEFORM.

A.86 WaveformTypeYTT

From EDD-Spec: The YT attribute specifies a WAVEFORM that contains a list of points that are defined via an initial X coordinate, an X increment between successive points and a list of Y values.

The XML schema for a WaveformTypeYTT type is:

```
<xs:complexType name="WaveformTypeYTT">
  <xs:complexContent>
    <xs:extension base="clnt:WaveformTypeT">
      <xs:sequence>
        <xs:element name="Yvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="1"/>
        <xs:element name="Xinitial" type="clnt:VariantT"
          minOccurs="1" maxOccurs="1"/>
        <xs:element name="Xincrement" type="clnt:VariantT"
          minOccurs="1" maxOccurs="1"/>
        <xs:element name="NumberOfPoints"
          type="xs:nonNegativeInteger" minOccurs="0" maxOccurs="1"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a WaveformTypeYTT type are described in Table A.81.

Table A.81 – Elements of WaveformTypeYTT

Element	Description
Yvalues	From EDD-Spec: The Y_VALUES attribute specifies the Y coordinate of each point in the WAVEFORM.
Xinitial	From EDD-Spec: The X_INITIAL attribute specifies the X coordinate of the first point in the WAVEFORM.
Xincrement	From EDD-Spec: The X_INCREMENT attribute specifies difference between the X coordinates of adjacent points in the WAVEFORM.
NumberOfPoints	From EDD-Spec: The NUMBER_OF_POINTS attribute specifies the number of valid data points in X_VALUES. By default, the number of points in the WAVEFORM without a NUMBER_OF_POINTS attribute equals the size of X_VALUES.

A.87 WaveformTypeXYT

From EDD-Spec: The XY attribute specifies a WAVEFORM that contains a list of (x,y) points.

The XML schema for a WaveformTypeXYT type is:

```
<xs:complexType name="WaveformTypeXYT">
  <xs:complexContent>
    <xs:extension base="clnt:WaveformTypeT">
      <xs:sequence>
        <xs:element name="Xvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="0"/>
        <xs:element name="Yvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="1"/>
        <xs:element name="NumberOfPoints"
          type="xs:nonNegativeInteger" minOccurs="0" maxOccurs="1"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a WaveformTypeXYT type are described in Table A.82.

Table A.82 – Elements of WaveformTypeXYT

Element	Description
Xvalues	From EDD-Spec: The X_VALUES attribute specifies the X coordinate of each point in the WAVEFORM. For each X coordinate specified in X_VALUES, there shall be a corresponding Y coordinate specified in Y_VALUES.
Yvalues	From EDD-Spec: The Y_VALUES attribute specifies the Y coordinate of each point in the WAVEFORM. For each Y coordinate specified in Y_VALUES, there shall be a corresponding X coordinate specified in X_VALUES.
NumberOfPoints	From EDD-Spec: The NUMBER_OF_POINTS attribute specifies the number of valid data points in X_VALUES and Y_VALUES. By default, the number of points in the WAVEFORM without a NUMBER_OF_POINTS attribute equals the size of X_VALUES and Y_VALUES.

A.88 WaveformKeyPointListT

From EDD-Spec: The KEY_POINTS attribute specifies key points in the WAVEFORM that should be highlighted by the EDD application. The key points need not directly correspond to the data points specified via the TYPE attribute. The way in which these points are highlighted is defined by the EDD specification. By default, a WAVEFORM without a KEY_POINTS attribute should not have any of its points highlighted.

The XML schema for a WaveformKeyPointListT type is:

```
<xs:complexType name="WaveformKeyPointListT">
  <xs:complexContent>
    <xs:extension base="clnt:WaveformTypeT">
      <xs:sequence>
        <xs:element name="Xvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="1"/>
        <xs:element name="Yvalues" type="clnt:WaveformVectorT"
          minOccurs="1" maxOccurs="1"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

The elements of a WaveformKeyPointListT type are described in Table A.83.

Table A.83 – Elements of WaveformKeyPointListT

Element	Description
Xvalues	From EDD-Spec: The X_VALUES attribute specifies the X coordinate of each point that is to be highlighted. For each X coordinate specified in X_VALUES, there shall be a corresponding Y coordinate specified in Y_VALUES.
Yvalues	From EDD-Spec: The Y_VALUES attribute specifies the Y coordinate of each point that is to be highlighted. For each Y coordinate specified in Y_VALUES, there shall be a corresponding X coordinate specified in X_VALUES.

A.89 WaveformVectorT

WaveformVectorT represents the whole information of a waveform vector, for example the nodepath for the array of scalar values and additional information about these values such as Handling, Range, Type.

The XML schema for a WaveformVectorT type is:

```
<xs:complexType name="WaveformVectorT">
  <xs:sequence>
    <xs:element name="WaveformVectorElementList"
      type="clnt:WaveformVectorElementListT" minOccurs="1"
      maxOccurs="1"/>
  </xs:sequence>
  <xs:attribute name="DataArrayNodePath" type="xs:string"
    use="required"/>
</xs:complexType>
```

The attributes of a WaveformVectorT type are described in Table A.84.

Table A.84 – Attributes of WaveformVectorT

Attribute	Description
dataArrayNodePath	The nodepath that is used by the client to request the waveform vector.

The elements of a WaveformVectorT type are described in Table A.85.

Table A.85 – Elements of WaveformVectorT

Element	Description
WaveformVectorElementList	WaveformVectorElementList contains static information about each individual element of a waveform vector.

A.90 WaveformVectorElementListT

It represents the static information of a waveform vector, except the nodepath for the array of scalar values.

The XML schema for a WaveformVectorElementListT type is:

```
<xs:complexType name="WaveformVectorElementListT">
  <xs:sequence>
    <xs:element name="WaveformVectorElement"
      type="clnt:WaveformVectorElementT" minOccurs="0"
      maxOccurs="unbounded"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a WaveformVectorElementListT type are described in Table A.86.

Table A.86 – Elements of WaveformVectorElementListT

Element	Description
WaveformVectorElement	The static information of an individual waveform vector element.

A.91 WaveformVectorElementT

It represents the whole information of a single element in a waveform vector. It contains additional information about one value such as Handling, Range, Type. It belongs to the corresponding element in the result array of DataArrayNodePath

The XML schema for a WaveformVectorElementT type is:

```
<xs:complexType name="WaveformVectorElementT">
  <xs:sequence>
    <xs:element name="DataType" type="clnt:NumericDataT"
      default="SignedInteger" minOccurs="0"/>
    <xs:element name="RangeList" type="clnt:RangeListT"
      minOccurs="0"/>
    <xs:element name="Handling" type="clnt:HandlingT" default="rw"
      minOccurs="0" maxOccurs="1"/>
    <xs:element name="PreEditActionsList" type="clnt:ActionListT"
      minOccurs="0" maxOccurs="1"/>
    <xs:element name="PostEditActionsList" type="clnt:ActionListT"
      minOccurs="0" maxOccurs="1"/>
    <xs:element name="ScalingFactor" type="xs:double" minOccurs="0"/>
    <xs:element name="DisplayFormat" type="clnt:FormatSpecifierT"
      minOccurs="0"/>
    <xs:element name="EditFormat" type="clnt:FormatSpecifierT"
      minOccurs="0"/>
  </xs:sequence>
</xs:complexType>
```

The elements of a WaveformVectorElementT type are described in Table A.87.

Table A.87 – Elements of WaveformVectorElementT

Element	Description
DataType	This required element specifies the data type of the value in the corresponding element of the result array of DataArrayNodePath.
RangeList	This optional element specifies the acceptable range of the value in the corresponding element of the result array of DataArrayNodePath.
Handling	This optional element specifies whether or not the current data value may be modified. The default is ReadWrite.
PreEditActionsList	This optional element specifies the PreEditActions of the value in the corresponding element of the result array of DataArrayNodePath.
PostEditActionsList	This optional element specifies the PostEditActions of the value in the corresponding element of the result array of DataArrayNodePath.
ScalingFactor	This optional element specifies the scaling factor of the value in the corresponding element of the result array of DataArrayNodePath.
DisplayFormat	This optional element specifies the display format of the value in the corresponding element of the result array of DataArrayNodePath.
EditFormat	This optional element specifies the edit format of the value in the corresponding element of the result array of DataArrayNodePath.

Annex B (informative)

Action example

The following is an example of an EDD method being executed by an FDI® Server and the resulting interaction with an FDI® Client.

The EDDL used by this example is shown below followed by a sequence diagram and the description of the sequence.

```
VARIABLE device_var1
{
    LABEL "device var1";
    HELP  "";
    CLASS DEVICE;
    HANDLING READ & WRITE;
    CONSTANT_UNIT "constUnit";
    TYPE INTEGER;
    PRE_EDIT_ACTIONS
    {
        PreEditAction1
    }
    POST_EDIT_ACTIONS
    {
        PostEditAction1
    }
}

VARIABLE process_value
{
    LABEL "Level";
    HELP  "";
    CLASS DYNAMIC;
    HANDLING READ;
    CONSTANT_UNIT "m";
    TYPE FLOAT;
}
```

VARIABLE newI

```
{  
    LABEL "new i";  
    HELP "new value of i";  
    CLASS DEVICE;  
    HANDLING READ & WRITE;  
    TYPE INTEGER;  
}
```

VARIABLE newJ

```
{  
    LABEL "new j";  
    HELP "new value of j";  
    CLASS DEVICE;  
    HANDLING READ & WRITE;  
    TYPE INTEGER;  
}
```

MENU MethodMenu

```
{  
    LABEL "MethodMenu";  
    HELP "This menu is used in a method";  
    STYLE DIALOG;  
    ITEMS  
    {  
        newI,  
        newJ  
    }  
}
```

METHOD UIReqRespCategories

```
{  
    LABEL "Request Response Categories";  
    HELP "This method demonstrates different categories of messages that are passed
```

between server and client during a method execution";

DEFINITION

```
{
    int i, j, k, selection;

    add_abort_method(AbortMethod);

    //Acknowledgement
    ACKNOWLEDGE("Please hit OK to acknowledge the start of this method");

                                                                    // A010

    i = 5;
    PUT_MESSAGE("i = %{i}"); //Info // A020

    j = 10;
    PUT_MESSAGE("j = %{j}"); //Info // A030

    k = i+j;
    DELAY(5, "k = %{k}"); //Delay // A040

    GET_DEV_VAR_VALUE("Enter new value for the
                                                                    %[L]%[U]{device_var1}%[U]",device_var1); //Input // A050

    selection = SELECT_FROM_LIST("Is the value entered, correct? ", "YES;NO");

                                                                    //selection // A060

    if (selection == 1)
    {
        device_var1 = 0;
        abort(); //abort --- this will trigger the AbortMethod as well; // A070
    }
    k = k + device_var1;

    if (k == i + j)
    {
        display_comm_status(2); //Error - 2 == "Buffer Overflow" -- HART;

                                                                    // A080
    }

    display("Current level is %{process_value}%[U]{process_value}!"); // A090
    MenuDisplay(MethodMenu,"APPLY;DISCARD",selection); //UIDMessage // A100
}
```

```
        if(selection == 0)
        {
            i = newI;
            j = newJ;

            ACKNOWLEDGE("new value of k = %{k}"); // A110
        }

        ACKNOWLEDGE("This concludes the method !!"); // A120
    }
}

METHOD AbortMethod
{
    LABEL "AbortMethod";

    HELP "This is a simple Abort Method";

    DEFINITION
    {
        ACKNOWLEDGE("Method was aborted due to a call to abort()"); // B010
    }
}

METHOD PreEditAction1
{
    LABEL "Action1";

    HELP "This is a simple Pre Edit Warning";

    DEFINITION
    {
        ACKNOWLEDGE("Do you really want to edit this variable"); // C010
    }
}

METHOD PostEditAction1
{
    LABEL "Action2";

    HELP "This is a simple Post Edit Message";

    DEFINITION
```

```

{
    ACKNOWLEDGE("You actually edited the variable now!!!"); // D010
}
}

MENU FDIActions
{
    LABEL "FDI Actions";

    HELP "This menu contains methods for verifying FDI UID contents";

    ITEMS
    {
        MethodMenu,

        UIReqRespCategories
    }
}

```

The example assumes as a precondition that the FDI® Client has already established a Session with the FDI® Server, the user has navigated to the Device (MyDevice), and the user has initiated the opening of the function group (FDIActions).

The sequence begins with the FDI® Client subscribing to the value of the UID in order to retrieve the UID content from the FDI® Server. The FDI® Client adds a monitored item and waits for the user to provide the initial value. The sequence is illustrated in Figure B.1 along with the XML string that will be returned from the FDI® Server.

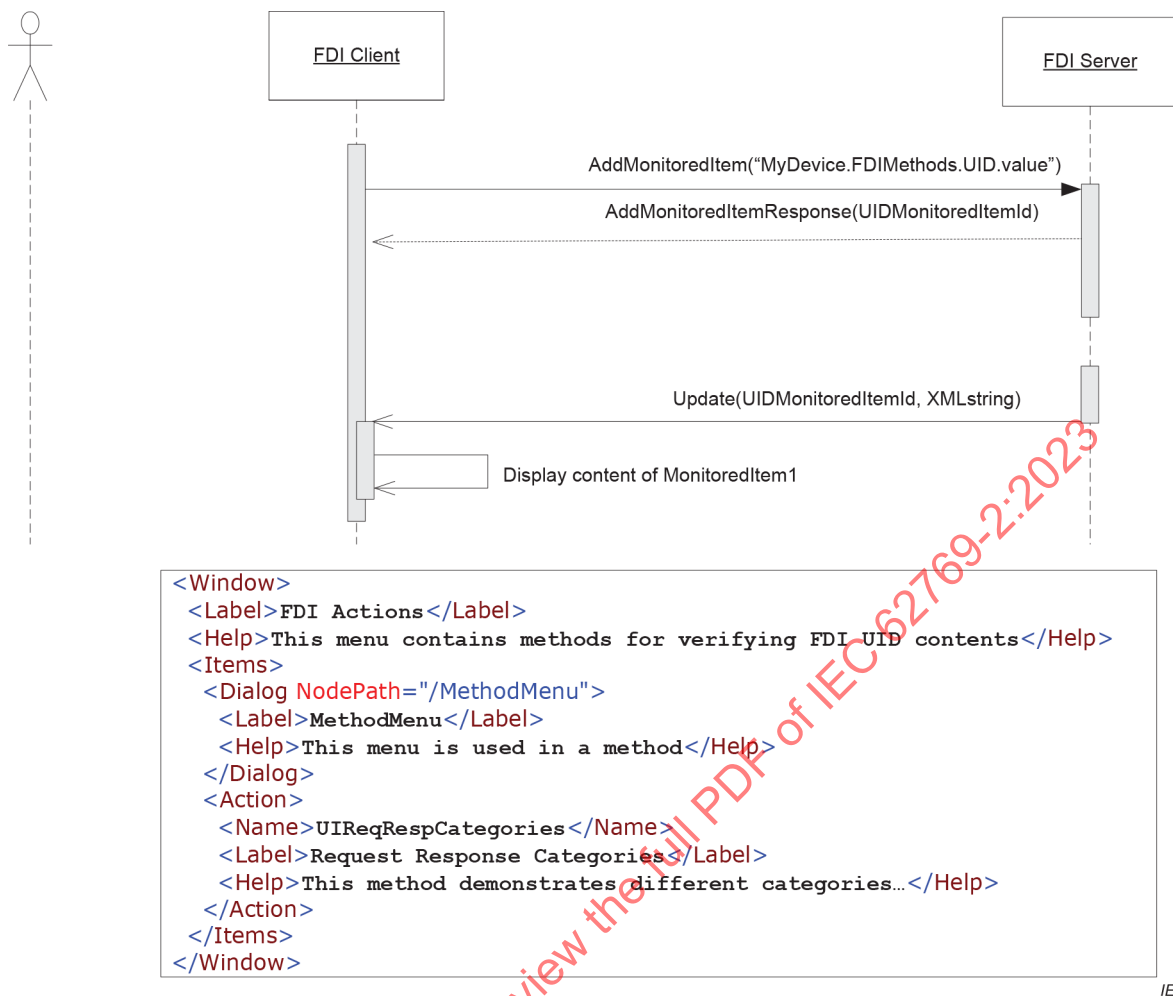


Figure B.1 – Action example (step 1)

The FDI® Client interprets the XML string and presents the menu to the user as four action buttons with each button containing the text defined in the `<Label>` element. The FDI® Client then waits for the user to select one of the actions.

In the next step of the example, the sequence begins with the user clicking the action button (`UIReqRespCategories`) presented in the menu. The FDI® Client reacts by initiating an OPC UA Call service request (see IEC 62541-4), specifying the OPC UA method (`MyDevice.ActionSet.InvokeAction`) and the EDDL method (`UIReqRespCategories`). The FDI® Server responds by locating the EDDL method and initiating execution of it. The FDI® Server responds with a unique node Id (`ActionNodeId1`) that represents the running method. The FDI® Client subscribes to the value of the method using the node Id (`ActionNodeId.value`). The FDI® Server provides the current value of the method as any XML string. The initial value of this XML string indicates that the method has started. The sequence of this step is illustrated in Figure B.2.

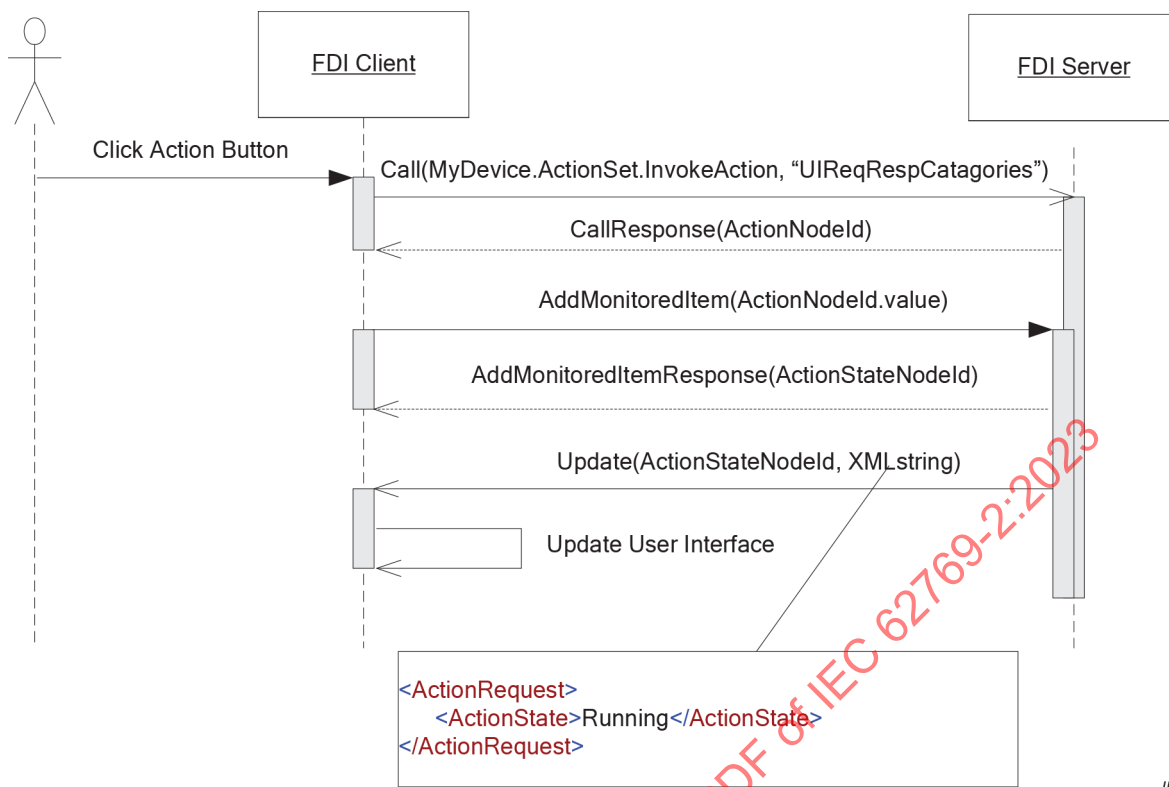


Figure B.2 – Action example (step 2)

In the next step of the example, the method has run up to the "ACKNOWLEDGE" statement. The FDI® Server processes the statement by setting the ActionNodeID value to indicate that a user acknowledgement is needed before the method can continue. The change to the value results in the FDI® Server issuing a subscription update. Upon receiving the value update, the FDI® Client detects that an acknowledge request is pending. The FDI® Client reacts by opening a dialog to present the message received in the value update also with an OK button.

The user reads the message and presses the OK button resulting in the FDI® Client issuing a RespondAction method call to the FDI® Server.

The FDI® Server, receiving the RespondAction call, continues the execution of the method.

The sequence of this step is illustrated in Figure B.3.

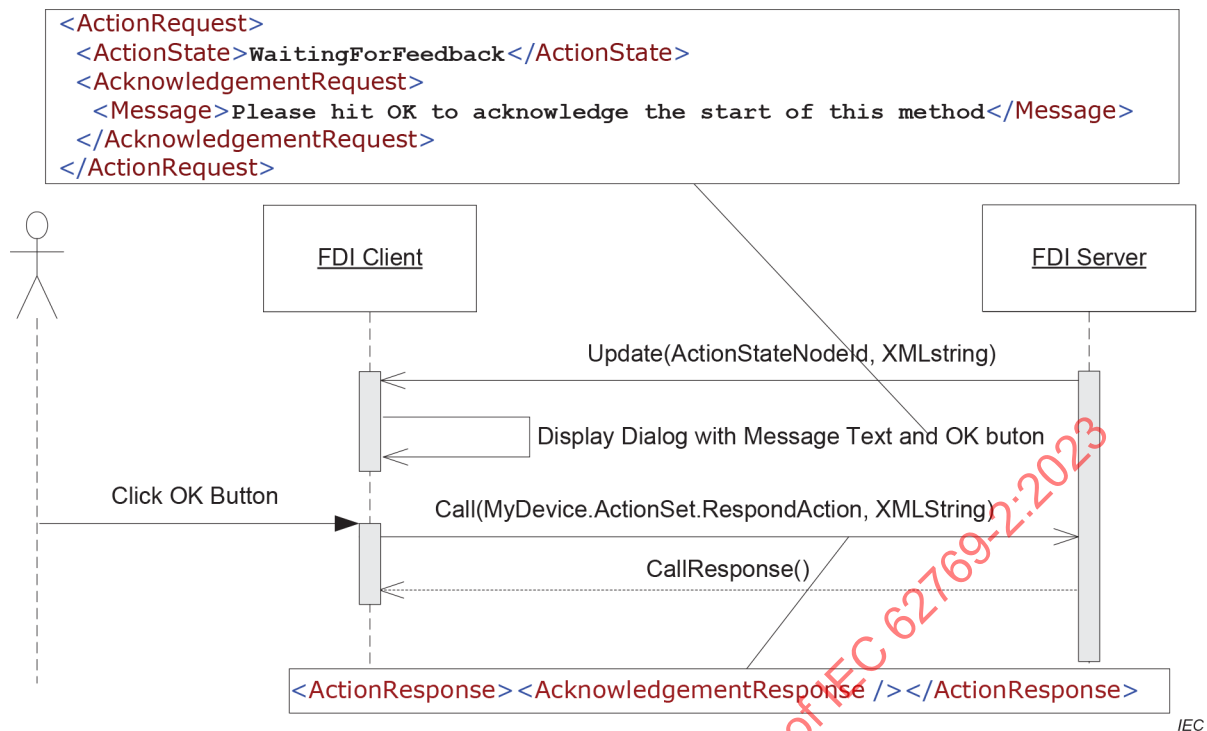


Figure B.3 – Action example (step 3)

In the next step of the example, the method has just executed the "ACKNOWLEDGE" statement and is about to execute the two "PUT_MESSAGE" statements and the "DELAY" statement. The FDI® Server processes these statements by setting the ActionNodeId value to indicate the notifications. Each statement will generate a value change and be delivered to the FDI® Client. The FDI® Client reacts by showing the message text in an appropriate user interface component. The sequence of this step is illustrated in Figure B.4.



The diagram illustrates a sequence of three identical steps. Each step begins with a 'Display Message Text' action, represented by a rectangle with two arrows pointing left. This is followed by an 'Update(ActionStateNodeId, XMLstring)' action, represented by a rectangle with two arrows pointing right. The XML string for the third iteration is detailed in a box below the sequence:


```
<ActionRequest>
  <ActionState>Running</ActionState>
  <DelayMessageRequest>
    <Message>k = 15</Message>
    <SecondsToWait>5</SecondsToWait>
  </DelayMessageRequest>
</ActionRequest>
```

In the next step of the example, the method requests the user to input a value for the (device_var1) variable. The FDI® Server processes this statement by setting the ActionNodeID value to indicate the data input request. The FDI® Client reacts to the value update by opening a dialog, showing the message text and preparing to accept user input. The sequence of this step is illustrated in Figure B.5.

```

<ActionRequest>
  <ActionState>WaitingForFeedback</ActionState>
  <InputRequest>
    <Prompt>Enter new value for the device var1 constUnit</Prompt>
    <InputValue>
      <Label>device var1</Label>
      <InitialValue><Integer>123</Integer></InitialValue>
      <Type>
        <NumericType>
          <DataType>SignedInteger</DataType>
          <Units>constUnit</Units>
          <ListOfRanges>
            <Range>
              <MinimumValue>
                <Integer>-127</Integer>
              </MinimumValue>
              <MaximumValue>
                <Integer>127</Integer>
              </MaximumValue>
            </Range>
          </ListOfRanges>
          <ListOfPresetValues>
            <PresetValue>
              <Value>
                <Integer>123</Integer>
              </Value>
              <Label>label</Label>
            </PresetValue>
          </ListOfPresetValues>
        </NumericType>
      </Type>
    </InputValue>
  </InputRequest>
</ActionRequest>


```

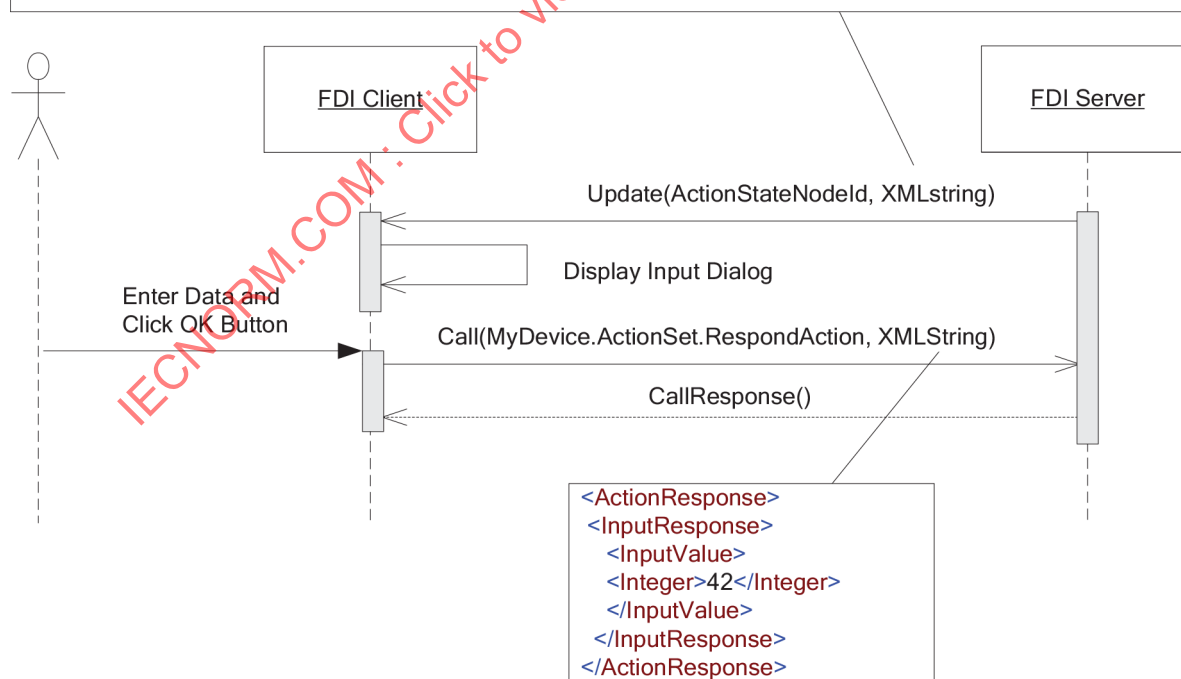

IEC

Figure B.5 – Action example (step 5)

In the next step of the example, the method requests the user to verify the value that was inputted for the (device_var1) variable. The FDI® Server processes this statement by setting the ActionNodeID value to indicate a response is needed. The FDI® Client reacts to the value update by opening a dialog, showing the message text and preparing to accept a response from the user. The sequence of this step is illustrated in Figure B.6.

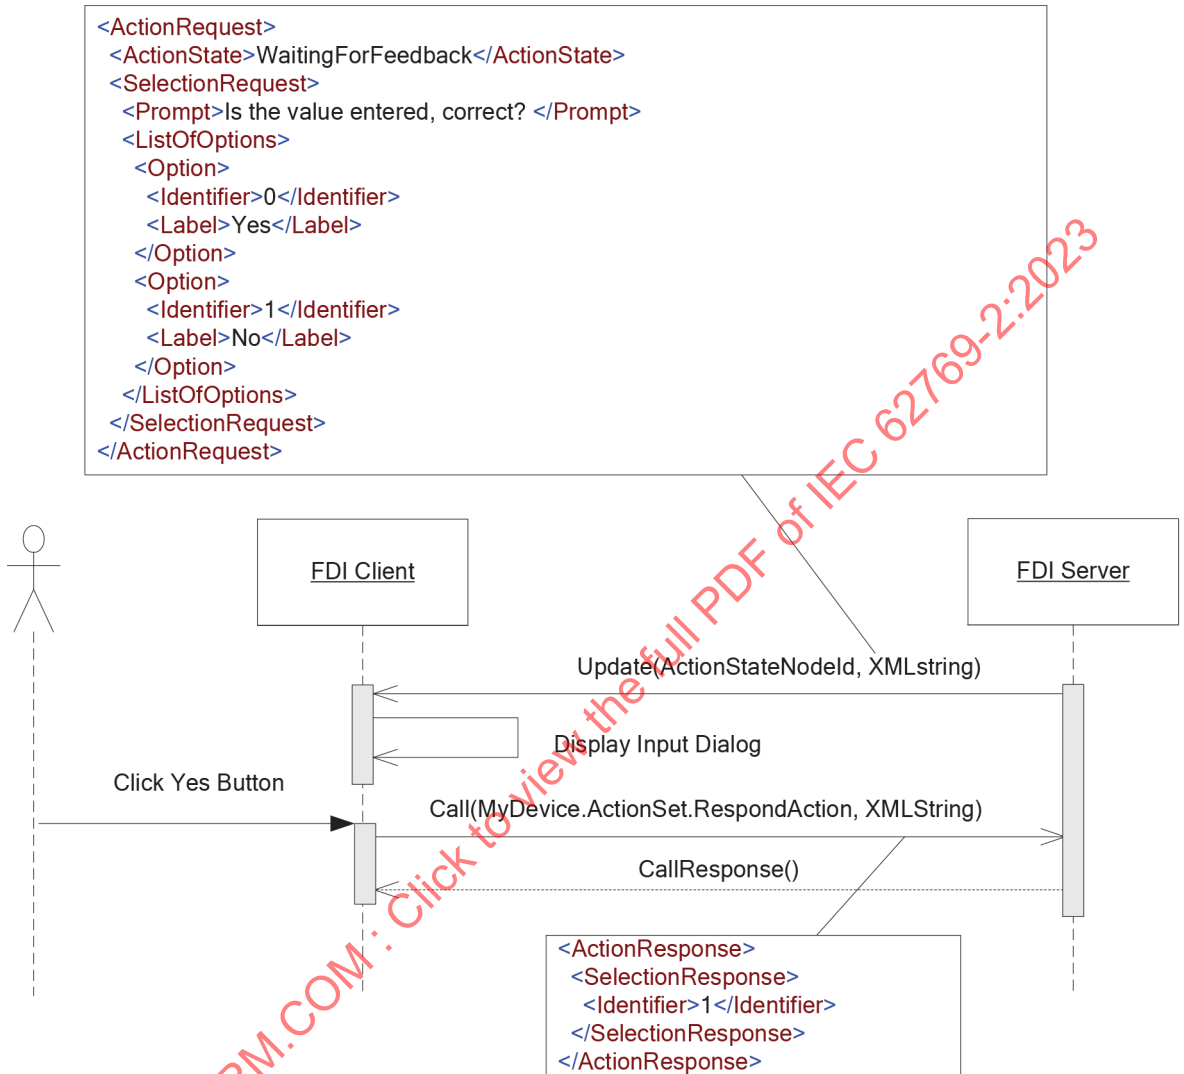

IEC

Figure B.6 – Action example (step 6)

Annex C (informative)

Typical FDI® Client use cases

C.1 General

Annex C describes how typical FDI® Client use cases could be implemented.

C.2 Bulk operations

In Clause C.2, the term bulk operation is understood as applying the same operation iteratively to a group of Devices. If the group of Devices consists of Devices of different Device Types, a precondition is the clarification of what the "same" operations are with respect to the different Device Types.

Bulk operations can be performed by an FDI® Client or by a UIP. In case of a UIP, the group of devices shall be a subset of the Device and its sub-devices because a UIP has only access to these.


NOTE The following description only refers to an FDI® Client. The algorithm is the same for a UIP besides the above-mentioned restriction.

First of all, an FDI® Client has to give the user the ability to define a group of Devices. This is implementation specific and outside the scope of this document. The FDI® Client can then use the OPC UA services to apply the same operation to these Devices. For that, OPC UA supports reading and writing of multiple parameters in one service call as well as invoking several methods in one service call. See IEC 62541-4 for details.

C.3 Progress bar support

The following is an example of a UIP using the Progress Bar functionality provided by the FDI® Client (see Figure C.1). In this example, the user initiates some operations by interacting with the UIP's user interface. The UIP initiates the operation and uses the progress bar functionality to keep the user informed of the progress (see 5.2.2.10 and 5.2.2.11).

In this example, the FDI® Client opens a small dialog window to present the progress information to the user. Once the UIP informs the FDI® Client that the operation is complete, via the EndShowProgressBar service (see 5.2.2.12), the FDI® Client prompts the user before closing the dialog to ensure the user has seen the 100 % completion of the operations.

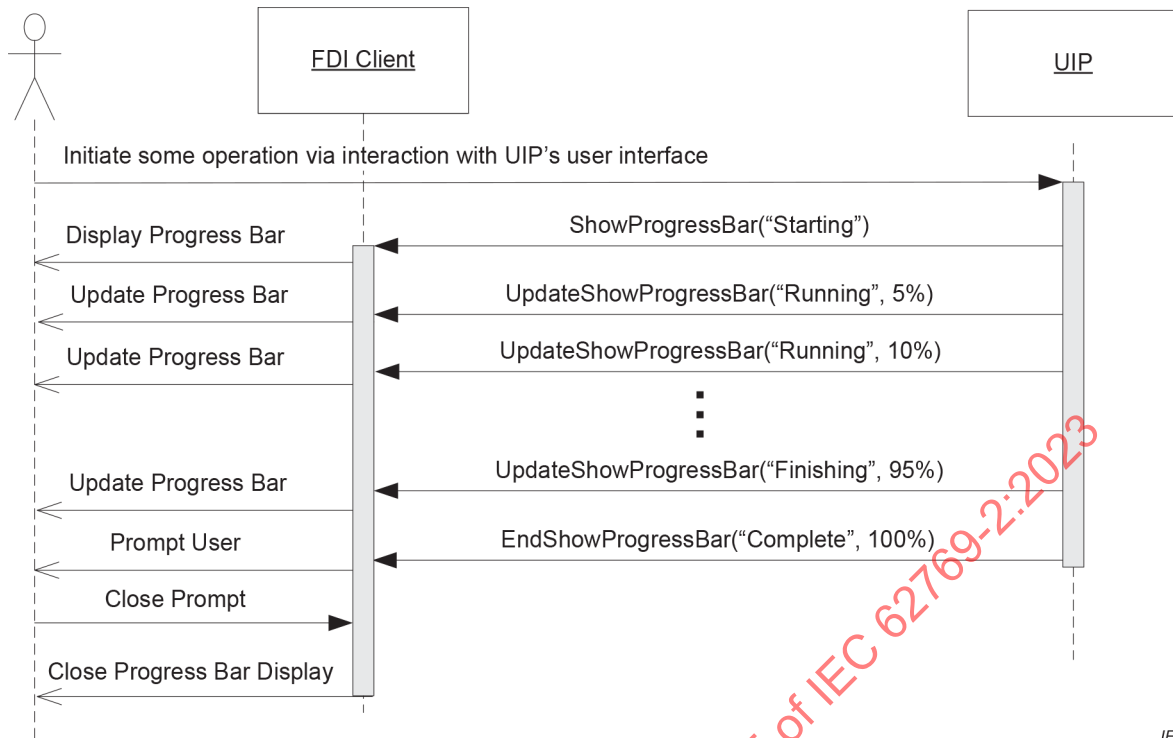

IEC

Figure C.1 – Progress bar support

Bibliography

ISO/IEC 10646-1², *Information technology – Universal Multiple-Octet Coded Character Set (UCS) – Part 1: Architecture and Basic Multilingual Plane*

ISO/IEC 2375, *Information technology – Procedure for registration of escape sequences and coded character sets*

XMLSchema-1, *XML Schema: Structures* (available at <http://www.w3.org/TR/xmlschema-1/>) [viewed 2023-01-13]

XMLSchema-2, *XML Schema: Datatypes* (available at <http://www.w3.org/TR/xmlschema-2/>) [viewed 2023-01-13]

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

² Withdrawn.

SOMMAIRE

AVANT-PROPOS	162
1 Domaine d'application	164
2 Références normatives	165
3 Termes, définitions, abréviations, acronymes et conventions	166
3.1 Termes et définitions	166
3.1.1 Termes utilisés pour les Services	166
3.1.2 Termes utilisés pour les Services d'Accès à l'Appareil	166
3.2 Abréviations et acronymes	167
3.3 Conventions	167
4 Vue d'ensemble	167
5 Client FDI®	169
5.1 Services d'Accès à l'Appareil	169
5.1.1 Généralités	169
5.1.2 Modèle d'Appareil	169
5.1.3 Modèle de Nœud	171
5.1.4 Services	177
5.1.5 Services des Propriétés de Base	179
5.1.6 Services du Modèle d'Appareil	180
5.1.7 Services de Verrouillage	194
5.1.8 Services d'Accès Direct	196
5.1.9 Types de données	199
5.2 Services d'Hébergement	204
5.2.1 Généralités	204
5.2.2 Services	205
5.2.3 Définitions du type Paramètre	218
6 UIP	220
6.1 Services d'UIP	220
6.1.1 Services	220
6.1.2 Définitions du type Paramètre	224
6.2 Règles d'instanciation de l'UIP	225
6.3 Diagramme d'états de l'UIP	226
6.3.1 Etats	226
6.3.2 Transitions d'état	226
6.4 Permissions et restrictions de l'UIP	227
6.4.1 Vue d'ensemble	227
6.4.2 Accès au système local de fichiers	227
6.4.3 Exportation/Importation de fichiers	228
6.4.4 Communication interprocessus (IPC)	228
6.4.5 Ouverture des fichiers de type MIME	228
6.4.6 Accès aux ressources	228
6.5 Déploiement de l'UIP	229
6.5.1 Téléchargements de l'UIP à partir du Serveur FDI®	229
6.5.2 Gestion de l'UIP sur le Client FDI®	230
7 Actions	230
7.1 Généralités	230
7.2 Diagramme de séquences	231

7.3	Définition du schéma d'Action FDI®	234
7.4	Transfert interactif vers l'appareil	235
8	Description d'Interface Utilisateur (UID)	236
8.1	Vue d'ensemble	236
8.2	Exécution de l'UID	239
Annexe A (normative)	Schéma XML	243
A.1	Généralités	243
A.2	AbortRequestT	243
A.3	AccessT	243
A.4	AcknowledgementRequestT	244
A.5	ActionListT	244
A.6	AbortingNotificationT	245
A.7	ActionRequestT	245
A.8	ActionResponseT	246
A.9	ActionT	247
A.10	AxisListT	248
A.11	AxisT	248
A.12	BitEnumerationItemListT	249
A.13	BitEnumerationItemT	250
A.14	ButtonListT	250
A.15	ChartT	250
A.16	ChartTypeT	251
A.17	ColorNameT	252
A.18	ColorT	253
A.19	ColorValueT	253
A.20	ColumnBreakT	253
A.21	DateTimeDataT	254
A.22	DelayMessageRequestT	254
A.23	DiagramLineT	255
A.24	EnumerationItemListT	256
A.25	EnumerationItemT	256
A.26	FormatSpecifierT	257
A.27	GraphT	257
A.28	GridT	258
A.29	HandlingT	258
A.30	ImageT	259
A.31	InfoRequestT	260
A.32	InputRequestT	260
A.33	InputResponseT	261
A.34	InputValueT	261
A.35	InputValueTypeT	262
A.36	LabelHelpT	262
A.37	LabelT	263
A.38	LineTypeT	263
A.39	ListOfActionArgumentsT	264
A.40	MenuT	265
A.41	MenuReferenceT	266
A.42	MenuStyleT	267
A.43	NumericDataT	268

A.44	NumericTemplateT	268
A.45	OptionListT	269
A.46	OrientationT	270
A.47	ParameterInputRequestT	270
A.48	ParameterListT	271
A.49	ParameterT	271
A.50	PluginT	272
A.51	RangeListT	273
A.52	RangeT	273
A.53	ResponseT	274
A.54	RowBreakT	274
A.55	ScalingT	274
A.56	SelectionRequestT	275
A.57	SelectionResponseT	275
A.58	SeparatorT	276
A.59	SizeT	276
A.60	ParameterClassT	276
A.61	ActionClassT	279
A.62	SourceListT	280
A.63	SourceT	281
A.64	StringDataT	281
A.65	StringTemplateT	282
A.66	StringOptionListT	282
A.67	StringOptionT	283
A.68	StringT	283
A.69	TimeScaleT	284
A.70	UidLayoutInformation	284
A.71	UidRequestT	285
A.72	UidResponseT	285
A.73	UiElementSizeableT	286
A.74	UiElementT	286
A.75	UiTemplateT	287
A.76	VariantT	288
A.77	VariantOptionListT	289
A.78	VariantOptionT	289
A.79	VectorListT	290
A.80	VectorT	290
A.81	WaveformListT	291
A.82	WaveformT	291
A.83	WaveformTypeT	292
A.84	WaveformTypeHorizontalT	292
A.85	WaveformTypeVerticalT	292
A.86	WaveformTypeYTT	293
A.87	WaveformTypeXYT	294
A.88	WaveformKeyPointListT	295
A.89	WaveformVectorT	295
A.90	WaveformVectorElementListT	296
A.91	WaveformVectorElementT	296
Annexe B (informative)	Exemple d'action	298

Annexe C (informative) Cas d'utilisation types du Client FDI®	309
C.1 Généralités	309
C.2 Opérations d'ensemble	309
C.3 Prise en charge de la barre de progression	309
Bibliographie.....	311
 Figure 1 – Diagramme de l'architecture FDI®	164
Figure 2 – Structure générale d'un Appareil	170
Figure 3 – Structure des Blocs	170
Figure 4 – NodeClasses du Modèle d'appareil	171
Figure 5 – Exemple: Hiérarchie de la Variable qui représente un RECORD.....	175
Figure 6 – Hiérarchie Variable qui représente une VALUE_ARRAY de plusieurs RECORDs	176
Figure 7 – Diagramme d'états de l'UIP	226
Figure 8 – Diagramme de séquences d'Action FDI®	233
Figure 9 – Diagramme de séquences du transfert interactif vers l'appareil	236
Figure 10 – Descriptions d'interface utilisateur.....	238
Figure 11 – Diagramme de séquences de la Description d'interface utilisateur.....	240
Figure B.1 – Exemple d'action (étape 1)	303
Figure B.2 – Exemple d'action (étape 2)	304
Figure B.3 – Exemple d'action (étape 3)	305
Figure B.4 – Exemple d'action (étape 4)	306
Figure B.5 – Exemple d'action (étape 5)	307
Figure B.6 – Exemple d'action (étape 6)	308
Figure C.1 – Prise en charge de la barre de progression	310
 Tableau 1 – Attributs de BaseNodeClass	171
Tableau 2 – Attributs de la NodeClass Objet.....	172
Tableau 3 – Attributs de la NodeClass Variable	172
Tableau 4 – Tableau de définition des services.....	177
Tableau 5 – Codes de résultat de service	179
Tableau 6 – Paramètres du Service GetDeviceAccessInterfaceVersion.....	180
Tableau 7 – Paramètres du Service GetOnlineAccessAvailability	180
Tableau 8 – Paramètres du Service Browse.....	181
Tableau 9 – Paramètres du Service CancelBrowse	182
Tableau 10 – Paramètres du Service Read	183
Tableau 11 – Codes de résultat du service Read	183
Tableau 12 – Codes de résultat de l'opération Read	184
Tableau 13 – Paramètres du Service CancelRead	185
Tableau 14 – Paramètres du Service Write	186
Tableau 15 – Codes de résultat de l'opération Write	187
Tableau 16 – Paramètres du Service CancelWrite	187
Tableau 17 – Paramètres du Service CreateSubscription.....	189
Tableau 18 – Codes de résultat du Service CreateSubscription	189

Tableau 19 – Paramètres du Service Subscribe	190
Tableau 20 – Codes de résultat de l'opération Subscribe	192
Tableau 21 – Paramètres du Service Unsubscribe	192
Tableau 22 – Codes de résultat de l'opération Unsubscribe	193
Tableau 23 – Paramètres du Service DeleteSubscription	193
Tableau 24 – Paramètres du Service DataChangeCallback	194
Tableau 25 – Codes de résultat de DataChangeCallback	194
Tableau 26 – Paramètres du Service InitLock	195
Tableau 27 – Codes de résultat du Service InitLock	195
Tableau 28 – Paramètres du Service ExitLock	196
Tableau 29 – Codes de résultat du Service ExitLock	196
Tableau 30 – Paramètres du Service InitDirectAccess	197
Tableau 31 – Codes de résultat du Service InitDirectAccess	197
Tableau 32 – Paramètres du Service ExitDirectAccess	198
Tableau 33 – Codes de résultat du Service ExitDirectAccess	198
Tableau 34 – Paramètres du Service Transfer	198
Tableau 35 – Codes de résultat du Service Transfer	199
Tableau 36 – Types de données de base	199
Tableau 37 – Identificateurs attribués aux Attributs	200
Tableau 38 – NodeSpecifier	201
Tableau 39 – DataValue	201
Tableau 40 – InnerErrorInfo	202
Tableau 41 – Définition de LocalizedText	202
Tableau 42 – Exemples de LocaleIds	203
Tableau 43 – Structure du Type de Données Range	203
Tableau 44 – Structure du Type de Données EUInformation	204
Tableau 45 – Définition d'EnumValueType	204
Tableau 46 – Paramètres du Service GetClientTechnologyVersion	205
Tableau 47 – Paramètres du Service OpenUserInterface	206
Tableau 48 – Paramètres du Service CloseUserInterface	206
Tableau 49 – Paramètres du Service LogAuditTrailMessage	207
Tableau 50 – Paramètres du Service SaveUserSettings	207
Tableau 51 – Paramètres du Service LoadUserSettings	208
Tableau 52 – Paramètres du Service Trace	208
Tableau 53 – Paramètres du Service ShowMessageBox	209
Tableau 54 – Paramètres du Service ShowProgressBar	209
Tableau 55 – Paramètres du Service UpdateShowProgressBar	210
Tableau 56 – Paramètres du Service EndShowProgressBar	210
Tableau 57 – Paramètres du Service StandardUIActionItemsChange	211
Tableau 58 – Paramètres du Service SpecificUIActionItemsChange	211
Tableau 59 – Paramètres du Service InitExportFile	212
Tableau 60 – Paramètres du Service WriteExportFile	212
Tableau 61 – Paramètres du Service FinishExportFile	213

Tableau 62 – Paramètres du Service InitImportFile	214
Tableau 63 – Paramètres du Service ReadImportFile.....	214
Tableau 64 – Paramètres du Service FinishImportFile	215
Tableau 65 – Paramètres du Service InitOpenDefaultApplication	215
Tableau 66 – Paramètres du Service WriteOpenDefaultApplication.....	216
Tableau 67 – Paramètres du Service FinishOpenDefaultApplication	216
Tableau 68 – Paramètres du Service GetHostingProperties	217
Tableau 69 – Paires Clé/Valeur GetHostingProperties	218
Tableau 70 – Définition de DefaultResult	219
Tableau 71 – Définition de CommunicationGatewayType	219
Tableau 72 – Définition de AcknStyle.....	219
Tableau 73 – Paramètres du Service Activate.....	220
Tableau 74 – Paramètres du Service Deactivate	221
Tableau 75 – Paramètres du Service SetSystemLabel	222
Tableau 76 – Paramètres du Service SetTraceLevel	222
Tableau 77 – Paramètres du Service GetStandardUIActionItems	222
Tableau 78 – Paramètres du Service GetSpecificUIActionItems	223
Tableau 79 – Paramètres du Service InvokeStandardUIAction	223
Tableau 80 – Paramètres du Service InvokeSpecificUIAction.....	224
Tableau 81 – Définition de TraceLevel	224
Tableau 82 – Définition de StandardUIAction	225
Tableau 83 – Définition de StandardUIActionItem	225
Tableau 84 – Définition de SpecificUIActionItem	225
Tableau 85 – Etats de l'UIP	226
Tableau 86 – Transitions d'états de l'UIP	227
Tableau A.1 – Eléments d'AbortRequestT	243
Tableau A.2 – Enumérations d'AccessT	244
Tableau A.3 – Eléments d'AcknowledgementRequestT	244
Tableau A.4 – Eléments de GenericConnectionPointT	244
Tableau A.5 – Eléments d>ActionRequestT.....	246
Tableau A.6 – Eléments d>ActionResponseT	247
Tableau A.7 – Eléments d>ActionT	248
Tableau A.8 – Eléments d'AxisListT	248
Tableau A.9 – Attributs d'AxisT	249
Tableau A.10 – Eléments d'AxisT.....	249
Tableau A.11 – Eléments de BitEnumerationItemListT	249
Tableau A.12 – Eléments de BitEnumerationItemT.....	250
Tableau A.13 – Eléments de ButtonListT	250
Tableau A.14 – Eléments de ChartT	251
Tableau A.15 – Enumérations de ChartTypeT	252
Tableau A.16 – Enumérations de ColorNameT.....	253
Tableau A.17 – Enumérations de DateTimeDataT	254
Tableau A.18 – Eléments de DelayMessageRequestT	255

Tableau A.19 – Attributs de DiagramLineT	255
Tableau A.20 – Eléments de DiagramLineT	256
Tableau A.21 – Eléments d'EnumerationItemT	256
Tableau A.22 – Eléments d'EnumerationItemT	257
Tableau A.23 – Eléments de GraphT	258
Tableau A.24 – Eléments de GridT	258
Tableau A.25 – Enumérations de HandlingT	259
Tableau A.26 – Attributs d'ImageT	260
Tableau A.27 – Eléments d'ImageT	260
Tableau A.28 – Eléments d'InfoRequestT	260
Tableau A.29 – Eléments d'InputRequestT	261
Tableau A.30 – Eléments d'InputResponseT	261
Tableau A.31 – Eléments d'InputValueT	262
Tableau A.32 – Eléments d'InputValueTypeT	262
Tableau A.33 – Eléments de LabelHelpT	263
Tableau A.34 – Eléments de LabelT	263
Tableau A.35 – Enumérations de LineTypeT	264
Tableau A.36 – Attributs de MenuT	266
Tableau A.37 – Eléments de MenuT	266
Tableau A.38 – Attributs de MenuReferenceT	267
Tableau A.39 – Eléments de MenuReferenceT	267
Tableau A.40 – Enumérations de MenuStyleT	268
Tableau A.41 – Enumérations de NumericDataT	268
Tableau A.42 – Eléments de NumericTemplateT	269
Tableau A.43 – Eléments d'OptionListT	269
Tableau A.44 – Enumérations d'OrientationT	270
Tableau A.45 – Eléments de ParameterInputRequestT	270
Tableau A.46 – Eléments de ParameterListT	271
Tableau A.47 – Eléments de ParameterT	272
Tableau A.48 – Eléments de PluginT	273
Tableau A.49 – Eléments de RangeListT	273
Tableau A.50 – Eléments de RangeT	274
Tableau A.51 – Enumérations de ScalingT	275
Tableau A.52 – Eléments de SelectionRequestT	275
Tableau A.53 – Eléments de SelectionResponseT	276
Tableau A.54 – Enumérations de SizeT	276
Tableau A.55 – Enumérations de ParameterClassT	278
Tableau A.56 – Enumérations d'ActionClassT	280
Tableau A.57 – Eléments de SourceListT	281
Tableau A.58 – Eléments de SourceT	281
Tableau A.59 – Enumérations de StringDataT	282
Tableau A.60 – Eléments de StringTemplateT	282
Tableau A.61 – Eléments de StringOptionListT	283

Tableau A.62 – Éléments de StringOptionT	283
Tableau A.63 – Éléments de StringT	284
Tableau A.64 – Enumérations de TimeScaleT	284
Tableau A.65 – Éléments d'UidLayoutInformation	285
Tableau A.66 – Éléments d'UidRequestT	285
Tableau A.67 – Éléments d'UidResponseT	286
Tableau A.68 – Attributs d'UiElementSizeableT	286
Tableau A.69 – Éléments d'UiElementSizeableT	286
Tableau A.70 – Éléments d'UiElementT	287
Tableau A.71 – Éléments d'UiTemplateT	288
Tableau A.72 – Éléments de VariantT	289
Tableau A.73 – Éléments de VariantOptionListT	289
Tableau A.74 – Éléments de VariantOptionT	290
Tableau A.75 – Éléments de VectorListT	290
Tableau A.76 – Éléments de VectorT	291
Tableau A.77 – Éléments de WaveformListT	291
Tableau A.78 – Éléments de WaveformT	292
Tableau A.79 – Éléments de WaveformTypeHorizontalT	292
Tableau A.80 – Éléments de WaveformTypeVerticalT	293
Tableau A.81 – Éléments de WaveformTypeYTT	294
Tableau A.82 – Éléments de WaveformTypeXYT	294
Tableau A.83 – Éléments de WaveformKeyPointListT	295
Tableau A.84 – Attributs de WaveformVectorT	296
Tableau A.85 – Éléments de WaveformVectorT	296
Tableau A.86 – Éléments de WaveformVectorElementListT	296
Tableau A.87 – Éléments de WaveformVectorElementT	297

COMMISSION ÉLECTROTECHNIQUE INTERNATIONALE

INTÉGRATION DES APPAREILS DE TERRAIN (FDI®) –

Partie 2: Client

AVANT-PROPOS

- 1) La Commission Electrotechnique Internationale (IEC) est une organisation mondiale de normalisation composée de l'ensemble des comités électrotechniques nationaux (Comités nationaux de l'IEC). L'IEC a pour objet de favoriser la coopération internationale pour toutes les questions de normalisation dans les domaines de l'électricité et de l'électronique. A cet effet, l'IEC – entre autres activités – publie des Normes internationales, des Spécifications techniques, des Rapports techniques, des Spécifications accessibles au public (PAS) et des Guides (ci-après dénommés "Publication(s) de l'IEC"). Leur élaboration est confiée à des comités d'études, aux travaux desquels tout Comité national intéressé par le sujet traité peut participer. Les organisations internationales, gouvernementales et non gouvernementales, en liaison avec l'IEC, participent également aux travaux. L'IEC collabore étroitement avec l'Organisation Internationale de Normalisation (ISO), selon des conditions fixées par accord entre les deux organisations.
- 2) Les décisions ou accords officiels de l'IEC concernant les questions techniques représentent, dans la mesure du possible, un accord international sur les sujets étudiés, étant donné que les Comités nationaux de l'IEC intéressés sont représentés dans chaque comité d'études.
- 3) Les Publications de l'IEC se présentent sous la forme de recommandations internationales et sont agréées comme telles par les Comités nationaux de l'IEC. Tous les efforts raisonnables sont entrepris afin que l'IEC s'assure de l'exactitude du contenu technique de ses publications; l'IEC ne peut pas être tenue responsable de l'éventuelle mauvaise utilisation ou interprétation qui en est faite par un quelconque utilisateur final.
- 4) Dans le but d'encourager l'uniformité internationale, les Comités nationaux de l'IEC s'engagent, dans toute la mesure possible, à appliquer de façon transparente les Publications de l'IEC dans leurs publications nationales et régionales. Toutes divergences entre toutes Publications de l'IEC et toutes publications nationales ou régionales correspondantes doivent être indiquées en termes clairs dans ces dernières.
- 5) L'IEC elle-même ne fournit aucune attestation de conformité. Des organismes de certification indépendants fournissent des services d'évaluation de conformité et, dans certains secteurs, accèdent aux marques de conformité de l'IEC. L'IEC n'est responsable d'aucun des services effectués par les organismes de certification indépendants.
- 6) Tous les utilisateurs doivent s'assurer qu'ils sont en possession de la dernière édition de cette publication.
- 7) Aucune responsabilité ne doit être imputée à l'IEC, à ses administrateurs, employés, auxiliaires ou mandataires, y compris ses experts particuliers et les membres de ses comités d'études et des Comités nationaux de l'IEC, pour tout préjudice causé en cas de dommages corporels et matériels, ou de tout autre dommage de quelque nature que ce soit, directe ou indirecte, ou pour supporter les coûts (y compris les frais de justice) et les dépenses découlant de la publication ou de l'utilisation de cette Publication de l'IEC ou de toute autre Publication de l'IEC, ou au crédit qui lui est accordé.
- 8) L'attention est attirée sur les références normatives citées dans cette publication. L'utilisation de publications référencées est obligatoire pour une application correcte de la présente publication.
- 9) L'attention est attirée sur le fait que certains des éléments de la présente Publication de l'IEC peuvent faire l'objet de droits de brevet. L'IEC ne saurait être tenue pour responsable de ne pas avoir identifié de tels droits de brevets.

L'IEC 62769-2 a été établie par le sous-comité 65E: Les dispositifs et leur intégration dans les systèmes de l'entreprise, du comité d'études 65 de l'IEC: Mesure, commande et automation dans les processus industriels. Il s'agit d'une Norme internationale.

Cette troisième édition annule et remplace la deuxième édition parue en 2021. Cette édition constitue une révision technique.

Cette édition inclut les modifications techniques majeures suivantes par rapport à l'édition précédente:

- a) ajout du transfert interactif vers l'appareil;
- b) correction de ListOfInputArguments.

Le texte de cette Norme internationale est issu des documents suivants:

Projet	Rapport de vote
65E/855/CDV	65E/912/RVC

Le rapport de vote indiqué dans le tableau ci-dessus donne toute information sur le vote ayant abouti à son approbation.

La langue employée pour l'élaboration de cette Norme internationale est l'anglais.

Ce document a été rédigé selon les Directives ISO/IEC, Partie 2, il a été développé selon les Directives ISO/IEC, Partie 1 et les Directives ISO/IEC, Supplément IEC, disponibles sous www.iec.ch/members_experts/refdocs. Les principaux types de documents développés par l'IEC sont décrits plus en détail sous www.iec.ch/standardsdev/publications.

Une liste de toutes les parties de la série IEC 62769, publiées sous le titre général *Intégration des appareils de terrain (FDI®)*, se trouve sur le site web de l'IEC.

Le comité a décidé que le contenu de ce document ne sera pas modifié avant la date de stabilité indiquée sur le site web de l'IEC sous webstore.iec.ch dans les données relatives au document recherché. A cette date, le document sera

- reconduit,
- supprimé,
- remplacé par une édition révisée, ou
- amendé.


IMPORTANT – Le logo "colour inside" qui se trouve sur la page de couverture de cette publication indique qu'elle contient des couleurs qui sont considérées comme utiles à une bonne compréhension de son contenu. Les utilisateurs devraient, par conséquent, imprimer cette publication en utilisant une imprimante couleur.

INTÉGRATION DES APPAREILS DE TERRAIN (FDI®) –

Partie 2: Client

1 Domaine d'application

La présente partie de l'IEC 62769 spécifie le Client FDI®¹. Voir l'Annexe C pour certains cas d'utilisation types du Client FDI®. L'architecture FDI® complète est représentée à la Figure 1. Les composants architecturaux qui relèvent du domaine d'application du présent document ont été mis en évidence dans cette figure.

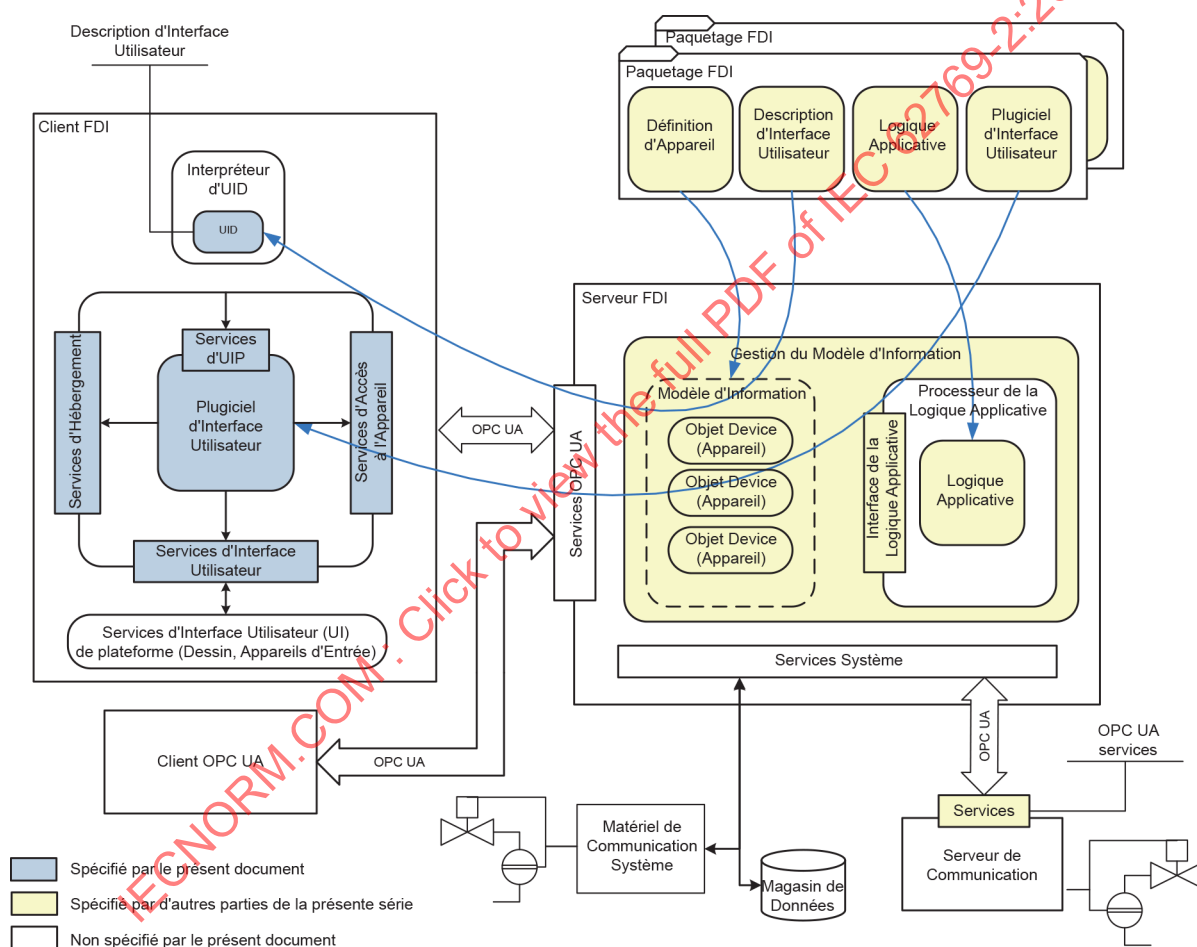

IEC

Figure 1 – Diagramme de l'architecture FDI®

¹ FDI® est une marque déposée de l'organisation à but non lucratif Fieldbus Foundation, Inc. Cette information est donnée à l'intention des utilisateurs du présent document et ne signifie nullement que l'IEC approuve le détenteur de la marque ou l'emploi de ses produits. La conformité n'exige pas l'utilisation de la marque. L'utilisation de la marque exige l'autorisation du détenteur de la marque.

2 Références normatives

Les documents suivants sont cités dans le texte de sorte qu'ils constituent, pour tout ou partie de leur contenu, des exigences du présent document. Pour les références datées, seule l'édition citée s'applique. Pour les références non datées, la dernière édition du document de référence s'applique (y compris les éventuels amendements).

IEC 61804-3, *Les dispositifs et leur intégration dans les systèmes de l'entreprise – Blocs fonctionnels (FB) pour les procédés industriels et le langage de description électronique de produit (EDDL) – Partie 3: Sémantique et syntaxe EDDL*

IEC 61804-4, *Les dispositifs et leur intégration dans les systèmes de l'entreprise – Blocs fonctionnels (FB) pour les procédés industriels et le langage de description électronique de produit (EDDL) – Partie 4: Interprétation EDD*

IEC 62443-3-3, *Réseaux industriels de communication – Sécurité dans les réseaux et les systèmes – Partie 3-3: Exigences de sécurité des systèmes et niveaux sécurité*

IEC 62541-3, *Architecture unifiée OPC – Partie 3: Modèle d'espace d'adressage*

IEC 62541-4, *Architecture unifiée OPC – Partie 4: Services*

IEC 62769-1, *Intégration des appareils de terrain (FDI®) – Partie 1: Vue d'ensemble*

IEC 62769-3, *Intégration des appareils de terrain (FDI®) – Partie 3: Serveur*

IEC 62769-4, *Intégration des appareils de terrain (FDI®) – Partie 4: Paquetages FDI®*

IEC 62769-5, *Intégration des appareils de terrain (FDI®) – Partie 5: Modèle d'Information FDI®*

IEC 62769-6 (toutes les parties), *Intégration des appareils de terrain (FDI®) – Partie 6: Mappings de technologies FDI®*

ISO/IEC 10918-1, *Technologies de l'information – Compression numérique et codage des images fixes de nature photographique: Prescriptions et lignes directrices*

ISO/IEC 15948, *Technologies de l'information – Infographie et traitement d'images – Graphiques de réseau portables (PNG): Spécification fonctionnelle*

ISO 639, *Codes des langues*

ISO 3166, *Codes des noms de pays*

IEEE Std 754, *IEEE Standard for Floating-Point Arithmetic* (disponible en anglais seulement)

IETF RFC 2083, *PNG (Portable Network Graphics) Specification Version 1.0* (disponible en anglais seulement)

IETF RFC 3066, *Tags for the Identification of Languages* (disponible en anglais seulement)

3 Termes, définitions, abréviations, acronymes et conventions

3.1 Termes et définitions

Pour les besoins du présent document, les termes et définitions de l'IEC 62769-1 ainsi que les suivants s'appliquent.

L'ISO et l'IEC tiennent à jour des bases de données terminologiques destinées à être utilisées en normalisation, consultables aux adresses suivantes:

- IEC Electropedia: disponible à l'adresse <https://www.electropedia.org/>
- ISO Online browsing platform: disponible à l'adresse <https://www.iso.org/obp>

3.1.1 Termes utilisés pour les Services

3.1.1.1

Services de Verrouillage

ensemble de Services à travers lesquels l'accès à un Appareil est contrôlé

3.1.1.2

Services du Modèle d'Appareil

sous-ensemble des Services d'Accès à l'Appareil à travers lequel un UIP peut accéder aux informations d'un Appareil

3.1.1.3

Services d'Accès Direct

sous-ensemble des Services d'Accès à l'Appareil à travers lequel un UIP peut accéder directement à un Appareil

3.1.2 Termes utilisés pour les Services d'Accès à l'Appareil

3.1.2.1

Attribut

élément d'information d'un Nœud

Note 1 à l'article: Certains Attributs existent pour toutes les NodeClasses et d'autres sont spécifiques à une NodeClass donnée.

Note 2 à l'article: Remplace la définition donnée dans l'IEC 62769-1.

3.1.2.2

Modèle d'Appareil

hiérarchie de Nœuds qui représente un Appareil existant

3.1.2.3

Nœud

élément dans un Modèle d'Appareil qui peut être adressé par l'intermédiaire des Services d'Accès à l'Appareil

Note 1 à l'article: Remplace la définition donnée dans l'IEC 62769-1.

3.1.2.4

NodeClass

soit un Objet ou une Variable

Note 1 à l'article: Remplace la définition donnée dans l'IEC 62769-1.

3.1.2.5

Objet

instance de la NodeClass Objet

Note 1 à l'article: Remplace la définition donnée dans l'IEC 62769-1.

3.1.2.6

Variable

instance de la NodeClass Variable

Note 1 à l'article: Remplace la définition donnée dans l'IEC 62769-1.

3.2 Abréviations et acronymes

Pour les besoins du présent document, les abréviations et acronymes de l'IEC 62769-1 ainsi que les suivants s'appliquent.

UTC (Coordinated Universal Time)	Temps Universel Coordonné
XML (Extended Mark-up Language)	Langage de balisage extensible

3.3 Conventions

Les conventions pour les définitions de services sont identiques à celles de l'IEC 62541-4.

Les types de données de base sont définis dans l'IEC 62541-3.

"Paramètre" est toujours un Paramètre du Modèle d'Information. Le terme "paramètre" est utilisé pour l'usage général du mot. Pour toute ambiguïté, un contexte supplémentaire est apporté.

La mise en majuscules de la première lettre des mots est utilisée dans la série IEC 62769 pour souligner un terme défini spécifique à la FDI®.

4 Vue d'ensemble

Un Paquetage FDI® (FDI® Package) fournit les informations nécessaires à un Type d'Appareil pour permettre la gestion de l'Appareil au sein du système. Il est fourni par un fournisseur d'appareils et déployé dans un Serveur FDI®. Il peut contenir deux types de composants d'interface utilisateur, dont le Client FDI® dispose pour l'affichage à un utilisateur. Un Paquetage FDI® peut contenir un seul type ou les deux. Ces deux types sont appelés Plugiciels d'Interface Utilisateur et Descriptions d'Interface Utilisateur.

Un Plugiciel d'interface utilisateur (UIP, *User Interface Plug-in*) est un élément exécutable. Un UIP est fourni par un Paquetage FDI® et transféré au Client FDI® par le Serveur FDI®. Un UIP fournit un ensemble de Services UIP que le Client FDI® utilise pour initialiser et interagir avec l'UIP.

NOTE 1 La série IEC 62769-6 définit les interfaces de programmation d'application pour les services décrits dans le présent document.

Les Descriptions d'interface utilisateur (UID, *User Interface Description*) sont définies en utilisant l'EDDL (langage de description d'appareil électronique). Un UID est fourni au Client FDI® par le Serveur FDI®. Le Client FDI® utilise l'Interprète UID pour interpréter et exécuter l'UID. Un UID peut utiliser d'autres composants d'UID et d'UIP en tant que sous-composants, afin de fournir une approche modulaire et de tirer le meilleur parti des deux éléments d'interface utilisateur, descriptif et exécutable.

NOTE 2 Les UIP peuvent utiliser d'autres UIP, mais ne peuvent pas utiliser d'autres UID.

Le Serveur FDI® met les UID et les UIP à la disposition du Client FDI® par l'intermédiaire du Modèle d'Information. Le Modèle d'Information organise les UID et les UIP par Type d'Appareil.

Le Client FDI® fournit l'environnement d'exécution pour les UIP. Le Client FDI® charge l'UIP à partir du Serveur FDI®.

L'environnement d'exécution de l'UIP du Client FDI® se compose des ensembles de services suivants qui sont mis à la disposition de l'UIP:

- Services d'Accès à l'Appareil;
- Services d'Hébergement;
- Services d'Interface Utilisateur;
- Services d'Impression (s'ils sont disponibles dans l'environnement d'hébergement).

NOTE 3 Le fait que différents UIP aient la même instance d'interface ou différentes instances d'interface pour accéder à ces services dépend de la mise en œuvre. La seule exigence est qu'il n'y ait pas d'effet secondaire si deux UIP utilisent la même instance d'une interface.

De la même manière que le Client FDI®, chaque UIP doit également fournir un ensemble de services (Services UIP), à l'aide duquel le Client FDI® active, contrôle et arrête les UIP (voir 6.1).

Les Services d'Accès à l'Appareil permettent l'interaction entre l'UIP et le Modèle d'Information maintenu par le Serveur FDI®. Le Client FDI® prend en charge l'interaction avec le Serveur FDI®, ce qui libère l'UIP et lui permet de se concentrer sur le niveau application uniquement.

L'accès de l'UIP au Modèle d'Information (IM, *Information Model*) par l'intermédiaire des Services d'Accès à l'Appareil est limité à l'Appareil et à ses sous-appareils.

Les Services d'Hébergement sont fournis par le Client FDI® et sont utilisés par l'UIP. Les Services d'Hébergement comprennent les services relatifs au Client FDI®, qui permettent à l'UIP d'obtenir des informations sur l'environnement.

Les Services d'Interface Utilisateur fournissent les moyens par lesquels l'UIP accède aux services d'interface utilisateur du système d'exploitation sous-jacent. Ces services fournissent l'accès à l'écran, au clavier, à la souris et aux autres ressources du système d'exploitation. Les Services d'Interface Utilisateur sont définis par la technologie de mise en œuvre choisie. Le présent document ne comporte donc pas de définition supplémentaire (voir la série IEC 62769-6 pour chaque technologie). Les UIP doivent utiliser les Services d'Hébergement pour afficher les boîtes de dialogue ou les barres de progression. Ils ne doivent en aucun cas utiliser de services comparables fournis par le système d'exploitation sous-jacent.

Aucun service d'impression n'est fourni par le Client. S'il est nécessaire pour un UIP de générer une impression, il accède aux services d'impression du système d'exploitation sous-jacent. Le présent document ne comporte pas de définition supplémentaire.

Le Client FDI® utilise le paramètre culture de l'utilisateur actuellement connecté pour l'environnement d'exécution de l'UIP. Il utilise ce paramètre lors de la création des Sessions OPC UA et il définit la culture pour chaque fil qu'il crée. Les UIP doivent prendre en charge le paramètre culture pour chaque fil qu'ils créent.

Le Client FDI® fournit un Interprète UID, utilisé pour interpréter et exécuter les UID. Le schéma XML de l'UID est défini dans le présent document (voir Annexe A).

La Logique Applicative est exécutée dans le Serveur FDI®. Certaines Logiques Applicatives peuvent être exposées au Client FDI® en tant qu'Actions (voir Article 7) et peuvent être déclenchées par les Clients FDI®.

5 Client FDI®

5.1 Services d'Accès à l'Appareil

5.1.1 Généralités

Les Services d'Accès à l'Appareil fournissent l'accès aux informations en ligne et hors-ligne d'un Appareil ou ses composants, comme cela est défini dans le Paquetage FDI®, en particulier pour

- explorer le Modèle d'Appareil,
- lire/écrire des données et s'abonner aux modifications de données,
- contrôler l'accès à l'Appareil, et
- communiquer directement avec l'Appareil.

Le domaine d'application des Services d'Accès à l'Appareil est un Appareil, un Bloc ou un Serveur de Communication, auquel un UIP est assigné. Le Client FDI® est réputé mapper les Services d'Accès à l'Appareil avec les services de l'OPC UA, fournis par le Serveur FDI®.

Les principaux Services sont les Services du Modèle d'Appareil pour visualiser et accéder aux Paramètres. Les Services de Verrouillage sont utilisés pour contrôler l'accès simultané à un Appareil. Les Services d'Accès Direct permettent à un UIP de communiquer avec l'Appareil.

La série IEC 62769-6, qui correspond à chaque technologie, définit la manière dont les différents services sont mappés avec les interfaces réelles. La série IEC 62769-6 spécifie également la manière dont les interfaces sont obtenues.

5.1.2 Modèle d'Appareil

Le Modèle d'Appareil (Device Model) définit la structure de toutes les données disponibles pour un UIP. Il est limité à une instance d'appareil unique. Les entités dans la structure (Paramètres, Images et Documents) sont construites à partir des informations du Paquetage FDI®. Les éléments d'interface utilisateur, tels que les Menus, Graphiques, Formes d'onde, ne font pas partie du Modèle d'Appareil de l'UIP.

Tous les éléments de l'Appareil sont organisés selon une hiérarchie définie. La racine de la hiérarchie peut être un Appareil ou un Bloc, sous réserve de l'emplacement (par quel MENU) dans lequel l'UIP est référencé dans la Description d'Interface Utilisateur du Paquetage FDI® (voir l'IEC 62769-4). Les Nœuds dans la hiérarchie sont des Objets ou des Variables, et la principale différence réside dans le fait que les Variables fournissent une Valeur. La Figure 2 représente la structure générale d'un Appareil. La Figure 3 représente la structure d'un bloc de manière plus détaillée. Les éléments qui seront réellement disponibles dépendent des contenus du Paquetage FDI® respectif. Les rectangles représentent des Nœuds Objet, tandis que les rectangles dont les coins sont arrondis représentent des Nœuds Variable. Ces NodeClasses sont définies en 5.1.3. Le Nœud en haut à gauche est le Nœud racine. Les lignes coupées d'un trait définissent la relation parent-enfant dans la hiérarchie. Par exemple, les enfants de Device1 sur la Figure 2 sont ParameterSet, ImageSet, Documentation, Blocks et SubDevices. Les enfants de /SubDevices/Device_1b/ImageSet sont Image_1 et Image_2.

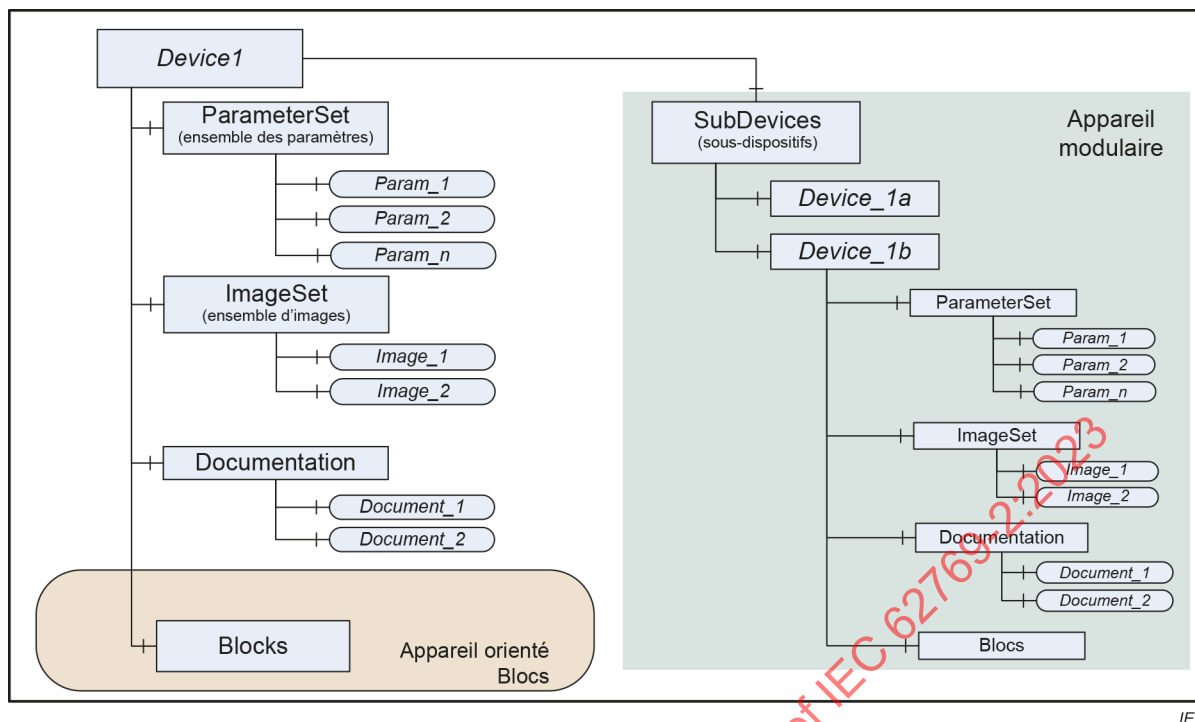


Figure 2 – Structure générale d'un Appareil

Les noms rédigés dans une police d'écriture normale sont définis par les Services d'Accès à l'Appareil; les noms en italique représentent des paramètres fictifs pour les noms réels, comme cela est défini dans le Paquetage FDI®.

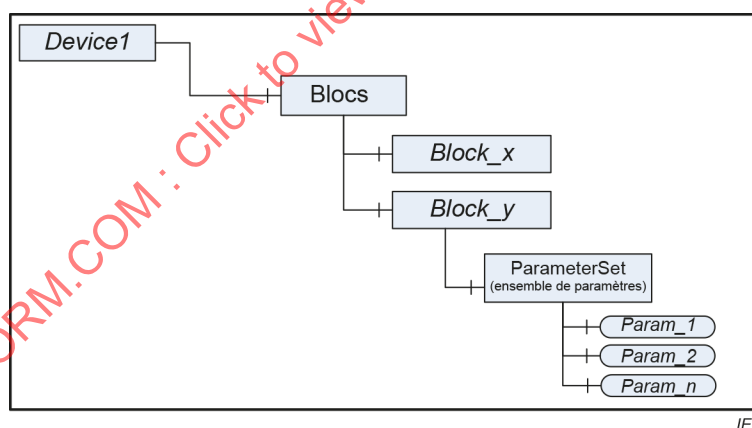


Figure 3 – Structure des Blocs

Chaque Nœud dans la hiérarchie est qualifié de manière unique avec son nom de chemin d'accès. Ce nom de chemin d'accès est une concaténation des Attributs Nom de Nœud individuels. Le séparateur est une barre oblique "/".

EXEMPLE Les exemples suivants décrivent des noms de chemin d'accès qualifiés:

/	-- le Nœud racine (ici "Device1")	
/ParameterSet/Param_2		-- un Nœud Variable
/SubDevices/Device_1b/ImageSet/Image_1	-- une image	

Certaines Variables du Paquetage FDI® peuvent être marquées comme étant "privées", ce qui signifie qu'elles ne sont pas consultables. Bien qu'elles ne soient pas consultables, elles existent dans le Modèle d'Appareil et peuvent être adressées avec leur nom de chemin d'accès.

5.1.3 Modèle de Nœud

5.1.3.1 Généralités

Les informations d'un Appareil sont organisées sous forme de hiérarchie de Nœuds. Chaque Nœud est un Objet ou une Variable. Les Objets et les Variables sont dérivés de la BaseNodeClass, comme cela est représenté à la Figure 4.

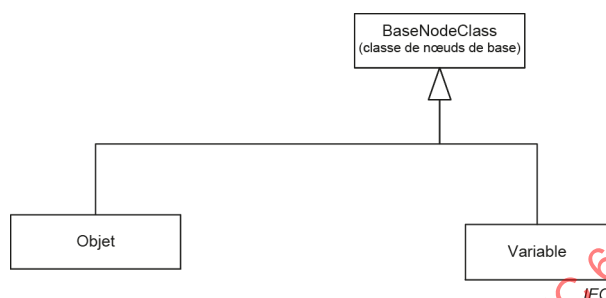


Figure 4 – NodeClasses du Modèle d'appareil

5.1.3.2 BaseNodeClass

Il s'agit d'une NodeClass parente abstraite des Nœuds Objet et Variable. Les Attributs de BaseNodeClass sont indiqués dans le Tableau 1. Les Attributs de cette NodeClass sont disponibles dans les NodeClasses Objet et Variable.

Tableau 1 – Attributs de BaseNodeClass

Attribut	Datatype	Description
NodePath	String	Chemin qualifié du Nœud dans le Modèle d'Appareil. Cet Attribut est renvoyé par le Service Browse (Explorer) et ne peut être ni lu ni écrit.
Name	String	Nom du Nœud selon la documentation spécifique à l'appareil.
Label	LocalizedText	Etiquette du Nœud interprétable par l'homme.
Description (facultatif)	LocalizedText	Chaîne d'aide interprétable par l'homme qui décrit le Nœud.

Les Attributs supplémentaires seront disponibles pour les NodeClasses dérivées. Par exemple, une Variable a des Attributs qui définissent le DataType (Type de Données) et les AccessRights (Droits d'Accès).

5.1.3.3 NodeClass Objet

Le Tableau 2 répertorie les Attributs pour les Objets autres que ceux hérités de la BaseNodeClass.

Tableau 2 – Attributs de la NodeClass Objet

Attribut	Datatype	Description
LockedStatus	Boolean	Lorsqu'il a pour valeur "true", cet Attribut indique que cet Objet est actuellement verrouillé. Le code de résultat de service Bad_AttributeInvalid signifie que le verrouillage n'est pas du tout pris en charge par cet Objet.

5.1.3.4 NodeClass Variable

5.1.3.4.1 Généralités

Les Variables sont utilisées pour représenter des Paramètres, des images et des documents. Lors de la lecture de Variables qui représentent des images ou des documents, le système les fournit sous la forme d'une ByteString (chaîne d'octets). Pour les documents, l'Attribut Name consiste en un nom de fichier ainsi que son extension, qui peut être utilisée pour identifier le type de document. La FDI® prend en charge les fichiers aux formats ".pdf" et ".txt". Pour la représentation des images, voir 5.1.3.4.2.

Le Tableau 3 répertorie les Attributs pour les Variables autres que ceux hérités de la BaseNodeClass.

Tableau 3 – Attributs de la NodeClass Variable

Attribut	Datatype	Description
Value	Variant	Valeur de la Variable renvoyée par l'appareil (sans application de l'Attribut ScalingFactor). Le Datatype Variant est spécifié en 5.1.9.4.
DataType	UInt32	L'Attribut DataType spécifie le type de données de l'Attribut Value. Un des types de données spécifiés en 5.1.9. La série IEC 62769-6 spécifie l'attribution d'identifiants uniques pour chaque type.
ValueRank	Int32	Indique si l'Attribut Value est une matrice. Il peut prendre les valeurs suivantes: >1 (MoreDimensions) – la valeur est une matrice ayant le nombre spécifié de dimensions. 1 (OneDimension) – la valeur est une matrice unidimensionnelle. 0 (OneOrMoreDimensions) – la valeur est une matrice à une ou plusieurs dimensions. -1 (Scalar) – la valeur n'est pas une matrice. -2 (Any) – la valeur peut être scalaire ou être une matrice ayant n'importe quel nombre de dimensions. -3 (ScalarOrOneDimension) – la valeur peut être scalaire ou être une matrice unidimensionnelle.
ArrayDimensions (facultatif)	UInt32[]	Spécifie la longueur de chaque dimension pour une valeur matricielle. L'Attribut permet de décrire la capacité de la Variable et non la taille courante. Le nombre d'éléments doit être égal à la valeur de l'Attribut ValueRank. Doit être nul si ValueRank <= 0. Une valeur 0 pour une dimension particulière indique que la dimension a une longueur Variable. Par exemple, si une Variable est définie par la matrice C suivante: <code>Int32 myArray[346];</code> ainsi, ce DataType de la Variable pointe vers une Int32, le ValueRank de la Variable prend la valeur 1 et l'Attribut ArrayDimensions indique une matrice dont l'une des entrées a la valeur 346.

Attribut	Datatype	Description
AccessRights	Byte	Les droits d'accès pour la Valeur. Une énumération avec l'une des valeurs suivantes: NONE_0 La valeur de la Variable ne peut pas être consultée READ_1 La valeur de la Variable peut être lue WRITE_2 La valeur de la Variable peut être écrite READORWRITE_3 La valeur de la Variable peut être lue ou écrite
UserAccessRights	Byte	Cet Attribut spécifie les droits d'accès à la Valeur pour l'utilisateur actuellement authentifié. Ils peuvent être inférieurs aux droits d'accès potentiels. La même énumération que pour AccessRights est utilisée.
ScalingFactor (facultatif)	Double	Cet Attribut spécifie un facteur scalaire suggéré. Noter que l'Attribut Value contient la valeur brute renvoyée depuis l'appareil. Il est admis que la valeur (brute) soit multipliée par ce facteur avant d'être affichée.
EngineeringUnits (facultatif)	EUInformation	EngineeringUnits spécifie les unités pour la valeur (degré Celsius, hertz ou secondes, par exemple). Voir 5.1.9.3.8 pour la définition du type de données EUInformation.
Attributs des Variables analogiques (Variables qui représentent des grandeurs physiques continuellement variables (pression ou température, par exemple)).		
EURange (facultatif)	Range[]	Définit une ou plusieurs plages de valeurs qui peuvent être obtenues en fonctionnement normal. Destiné à un usage tel que la mise à l'échelle automatique d'un affichage en diagramme en bâtons. La défaillance ou la désactivation du capteur ou de l'instrument peut impliquer le renvoi d'une valeur d'élément en dehors de cette plage. Le logiciel UIP doit être en mesure de traiter ce cas. Voir 5.1.9.3.7 pour la définition du type de données Range. Les plages peuvent changer pendant l'opération, par exemple, lors du changement du mode d'opération d'un instrument. Comme l'Attribut Value lui-même, les Attributs Range ne sont jamais échelonnés (c'est-à-dire, sans application de l'Attribut ScalingFactor).
Attributs des Variables discrètes (énumérées) (pour les données qui peuvent prendre uniquement un certain nombre de valeurs possibles (OPENING, OPEN, CLOSING ou CLOSED, par exemple)).		
CurrentLabel	String	Les Variables énumérées exposent l'état numérique actuel de leur Attribut Value. L'Attribut CurrentLabel fournit le nom de la valeur actuelle d'énumération.
EnumValues	EnumValuesType[]	EnumValues est une matrice de {StateValue, Enumeration Name et Help Information}. Voir 5.1.9.3.9 pour la définition de ce type. Les Clients FDI®/UIP peuvent lire cet Attribut en avance et le stocker pour garder en référence le nom ou l'aide, lorsqu'ils reçoivent la représentation numérique.
Attributs des Variables énumérées en bits (pour les données qui représentent un masque binaire).		
OptionNames	String[]	Les Variables énumérées en bits transmettent un masque binaire encodé dans un entier non signé d'une longueur suffisante pour représenter tous les bits. L'Attribut OptionNames fournit une représentation lisible par l'homme pour chaque bit valide du masque binaire. L'ordre des bits du masque binaire pointe vers une position de la matrice de Chaînes dans l'Attribut OptionNames, c'est-à-dire que le premier bit pointe vers la première entrée dans la matrice, et ainsi de suite. La matrice contient une Chaîne vide pour chaque bit qui n'a pas de signification spécifique.

5.1.3.4.2 Représentation des images

Toutes les images comportent le DataType (Type de Données) et sont transférées sous la forme d'une ByteString (Chaîne d'octets). La FDI® prend en charge trois formats d'image. Afin d'identifier le format de l'image fournie dans la ByteString, les premiers octets doivent être analysés, comme indiqué ci-après.

Type d'image	Description																		
GIF	Définit une image au format GIF (Graphics Interchange Format). Le format GIF est spécifié à l'adresse http://www.w3.org/Graphics/GIF/spec-gif89a.txt . Les premiers octets d'une image GIF sont les suivants: <table><tr><td>Byte</td><td>1</td><td>2</td><td>3</td></tr><tr><td>Hex</td><td>47</td><td>49</td><td>46</td></tr></table>	Byte	1	2	3	Hex	47	49	46										
Byte	1	2	3																
Hex	47	49	46																
JPG	Définit une image au format JPG (format d'échange de fichiers Joint Photographic Experts Group). Le format JPG est spécifié dans l'ISO/IEC 10918-1. Les premiers octets d'une image JPG sont les suivants: <table><tr><td>Byte</td><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>Hex</td><td>FF</td><td>D8</td><td>FF</td><td>E0</td></tr></table>	Byte	1	2	3	4	Hex	FF	D8	FF	E0								
Byte	1	2	3	4															
Hex	FF	D8	FF	E0															
PNG	Définit une image au format PNG (Portable Network Graphics). Le format PNG est défini dans l'IETF RFC 2083 et l'ISO/IEC 15948. Les premiers octets d'une image PNG sont les suivants: <table><tr><td>Byte</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr><tr><td>Hex</td><td>89</td><td>50</td><td>4E</td><td>47</td><td>0D</td><td>0A</td><td>1A</td><td>0A</td></tr></table>	Byte	1	2	3	4	5	6	7	8	Hex	89	50	4E	47	0D	0A	1A	0A
Byte	1	2	3	4	5	6	7	8											
Hex	89	50	4E	47	0D	0A	1A	0A											

5.1.3.4.3 Représentation des enregistrements

Une hiérarchie de Variable est utilisée pour représenter les Paramètres RECORD de l'EDDL. La Variable racine représente l'enregistrement (record) lui-même. Elle comporte des composants Variable qui représentent des RECORD MEMBERS de l'EDDL (les RECORD MEMBERS de l'EDDL sont définis dans l'EDDL au moyen d'une référence à une VARIABLE EDDL).

Un exemple du mode de représentation d'un enregistrement dans le Modèle d'Appareil est décrit à la Figure 5.

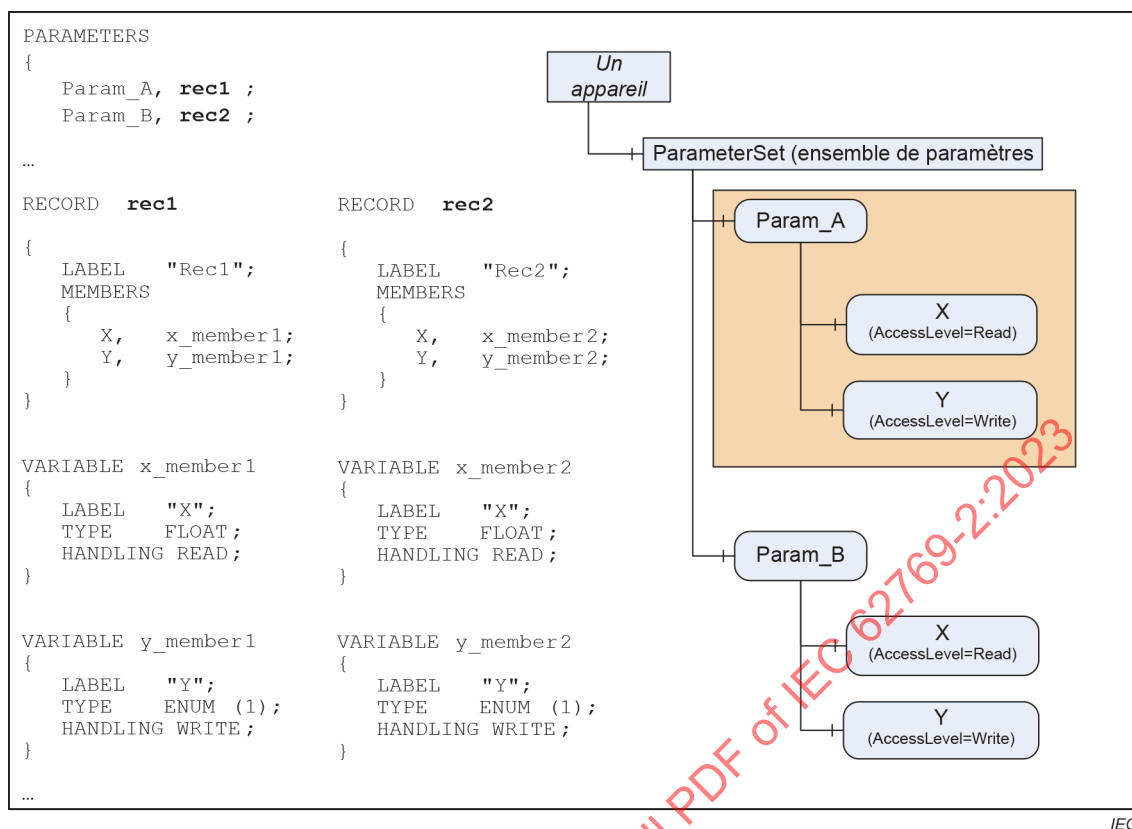


Figure 5 – Exemple: Hiérarchie de la Variable qui représente un RECORD

Les Attributs Name et Label de la Variable racine sont définis sur le nom de RECORD et l'Attribut LABEL, respectivement. L'Attribut DataType de la Variable "racine" est Variant (Variante). L'Attribut ValueRank est utilisé pour spécifier que la Valeur contient une matrice. L'Attribut Value représente les valeurs de tous les membres, dans l'ordre défini pour le RECORD. Selon l'exemple représenté à la Figure 5, la première variante est une valeur FLOAT et la seconde est une valeur ENUM.

Pour chaque Variable de composant qui représente un RECORD MEMBER de l'EDDL,

- l'Attribut Name est défini sur l'identifiant de la VARIABLE EDDL correspondante,
- l'Etiquette est l'Attribut LABEL de la VARIABLE EDDL correspondante,
- la Description est l'Attribut HELP de la VARIABLE EDDL correspondante, et
- l'Attribut AccessRights est dérivé de l'Attribut HANDLING EDDL.

Chaque membre de l'enregistrement peut être accessible par son nom de chemin d'accès, comme cela est spécifié ci-dessus. La navigation peut également être utilisée.

EXEMPLE Exemple de nom de chemin d'accès: /ParameterSet/Param_A/X.

5.1.3.4.4 Représentation des matrices et listes des membres avec types de données simples

Une Variable unique représente un élément VALUE_ARRAY ou LIST de l'EDDL lorsque le type de données de l'élément de matrice référencé est un type de données simple.

L'Attribut DataType est défini sur l'un des types de données de base (voir 5.1.9.2).

L'Attribut ValueRank est utilisé pour spécifier que la Valeur contient une matrice. Pour une VALUE_ARRAY de l'EDDL, le nombre d'éléments est exposé par l'intermédiaire de l'Attribut ArrayDimensions. Pour une LIST de l'EDDL, le nombre d'éléments n'est pas spécifié puisque la taille peut changer de manière dynamique.

5.1.3.4.5 Représentation des matrices et des listes de RECORD

Les matrices ou listes de valeurs des Paramètres de l'EDDL non simples sont représentées sous la forme d'une matrice de hiérarchies Variable. La Figure 6 représente le code d'échantillonnage EDDL d'une VALUE_ARRAY des RECORDs et de la hiérarchie Variable correspondante.

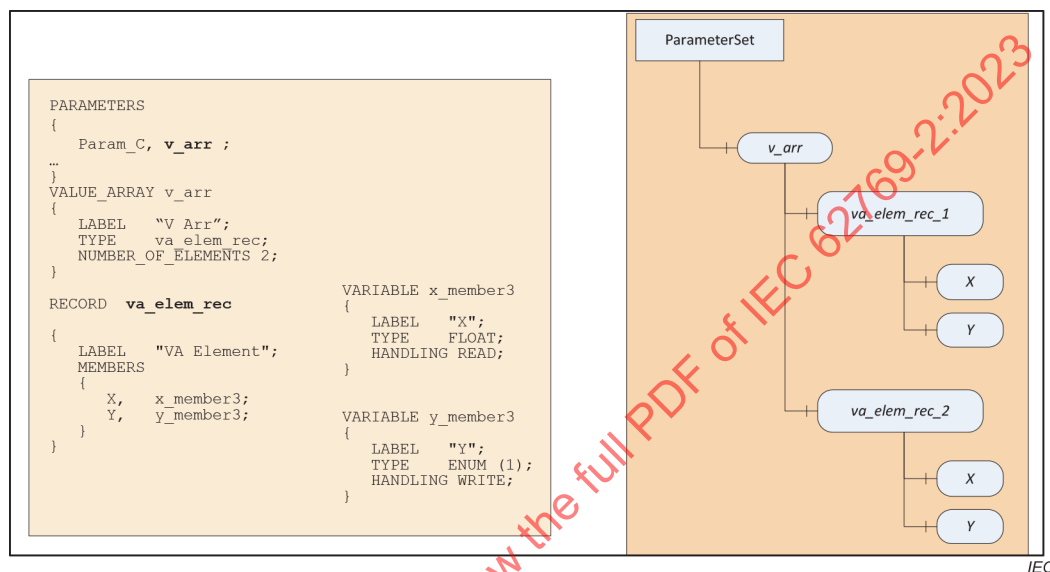


Figure 6 – Hiérarchie Variable qui représente une VALUE_ARRAY de plusieurs RECORDs

Les Attributs Name (Nom) et Label (Etiquette) de la Variable racine sont définis sur le nom d'ARRAY et l'Attribut LABEL, respectivement. L'Attribut DataType de la DataVariable "racine" est Variant (Variante). L'Attribut ValueRank est utilisé pour spécifier que la Valeur contient une matrice. L'Attribut Value représente toutes les entrées VALUE_ARRAY. La première Variante correspond à la première entrée de la matrice et ainsi de suite. Chaque Variante à son tour contient une matrice. Il peut s'agir soit d'une matrice de types simples ou d'une matrice de Variantes. Un RECORD est toujours représenté sous la forme d'une matrice de Variantes.

L'élément de VALUE_ARRAY, qui est en fait un RECORD, est représenté sous la forme d'un composant de hiérarchie Variable. Les Attributs Name et Label, de chaque Variable racine qui représente un RECORD, sont définis sur le nom de RECORD et l'Attribut LABEL, respectivement. L'indice de la matrice (_1, _2) est accolé afin de permettre l'identification unique. Noter que l'indice commence toujours par '1'.

Les RECORD MEMBERS sont également représentés sous la forme de composants de Variables, comme cela est spécifié en 5.1.3.4.3.

Les membres de chaque enregistrement peuvent être accessibles avec un nom de chemin d'accès. La navigation peut également être utilisée.

EXEMPLE Exemple de nom de chemin d'accès: /ParameterSet/v_arr/va_elem_rec_2/Y.

5.1.4 Services

5.1.4.1 Généralités

Tous les Services spécifiés dans la présente partie de l'IEC 62769 reposent sur les conventions définies en 5.1.4.2. Ils sont spécifiés d'une manière abstraite avec les paramètres de demande et de réponse dans un tableau unique.

L'accès par programme aux services peut être synchrone ou asynchrone (voir la série IEC 62769-6 pour chaque technologie). Cependant, l'asynchronisme existe afin de maintenir la réactivité de l'Interface Utilisateur. Par hypothèse, l'exécution d'un service doit toujours être séquentielle.

5.1.4.2 Conventions pour les définitions de service

Les spécifications des services utilisent des tableaux pour décrire les paramètres des services, comme cela est indiqué dans le Tableau 4. Dans ce tableau, les paramètres sont organisés sous la forme de paramètres de demande et de paramètres de réponse.

Tableau 4 – Tableau de définition des services

Nom	Type	Description
Demande		Définit les paramètres de demande relatifs au service
nom de paramètre simple	type de données simple	Description de ce paramètre
nom de paramètre construit	structure	Description du paramètre construit
nom de paramètre composant	structure ou type de données simple	Description du paramètre composant
Réponse		Définit les paramètres de réponse relatifs au service

Les colonnes Nom, Type et Description donnent le nom, le type de donnée et la description de chaque paramètre. Tous les paramètres sont obligatoires, même si certains peuvent être inutilisés dans certaines circonstances. La colonne Description spécifie la valeur à fournir lorsqu'un paramètre est inutilisé. Les noms de paramètres commencent toujours par un caractère minuscule. Cela permet de différencier un nom et un type s'ils ont la même dénomination (si nom = "nodeId" et type = "NodeId", par exemple).

Deux types de paramètres sont définis dans ces tableaux: simple et construit. Les paramètres simples ont un type de donnée simple, tel que Boolean (Booléen) ou String (Chaîne).

Les paramètres construits sont des paramètres composés de deux paramètres ou plus, qui peuvent être simples ou construits. Les noms des paramètres composants sont indentés sous le nom du paramètre construit.

Les types de données utilisés dans ces tableaux peuvent être des types de base ou des types spécifiques à un service. Les types de données de base sont énumérés en 5.1.9. Les types de données qui sont spécifiques à un Service sont définis dans le tableau de paramètres du service concerné.

5.1.4.3 Vérification

La vérification est une exigence pour de nombreux systèmes. Elle fournit le moyen de suivre les activités qui se produisent dans le cadre du fonctionnement normal du système. Elle fournit également le moyen de surveiller les comportements anormaux. Il s'agit également d'une exigence en ce qui concerne la sécurité.

Lorsqu'une piste de vérification est gérée par le système, les enregistrements de la piste de vérification pour le Service Write, appelés par l'UIP, sont implicitement créés par le système.

De plus, les UIP ont le moyen de fournir des informations supplémentaires sur le contexte de la vérification, concernant des éléments que le système ne peut pas connaître:

- Ils peuvent appeler le service LogAuditTrailMessage (voir 5.2.2.5). Ce service doit être accompli plus particulièrement lorsque les Services DirectAccess sont utilisés. L'UIP doit inclure suffisamment d'informations dans le message pour décrire précisément l'activité exécutée.
- Ils peuvent fournir un texte de contexte lors de l'utilisation des Services de Verrouillage (voir 5.1.7) ou des Services d'Accès Direct (voir 5.1.8).

5.1.4.4 Codes de résultat des services et des opérations

Plusieurs Services du Modèle d'Appareil (par exemple, Read et Write) autorisent la spécification d'une matrice d'éléments qui doivent être traités. Le traitement de chaque élément individuel est appelé "opération". Il s'agit d'une différentiation importante pour la prise en charge des erreurs, puisque l'exécution d'un service est considérée comme réussie même en cas d'échec d'opérations individuelles. La liste suivante explique les différences entre les codes de résultat des services et ceux des opérations.

- Code de résultat de service
Si un service aboutit, le code de résultat de service est "Good" et les paramètres de réponse sont valides. S'il échoue, le code de résultat de service est l'un des codes de défaillance des services "Bad_..." définis dans le Tableau 5. Dans ce cas, une InnerErrorInfo (voir 5.1.9.3.4) peut également être fournie. L'accès programmé aux codes de défaillance du service est spécifique à la technologie et peut être fondé sur des exceptions (voir la série IEC 62769-6).
- Code de résultat de l'opération
Le code de résultat de chaque opération est renvoyé dans les paramètres de réponse spécifiques au service. Les codes de statut de tous les résultats de niveau opération sont spécifiés dans l'IEC 62769-5. Chaque service qui renvoie des codes de statut de niveau opération définit son sous-ensemble applicable.

Les opérations peuvent renvoyer une InnerErrorInfo pour chaque code de résultat différent de "Good" si la demande de service indique returnInnerErrorInfo="true".

La structure générale du StatusCode utilisé pour les résultats de service et les résultats opérationnels est spécifiée dans l'IEC 62769-5.

Le Tableau 5 définit les codes de résultat de service. La colonne Service du Tableau 5 indique quel code peut être renvoyé par un service donné. Les codes de résultat spécifiques à un service individuel sont également spécifiés avec le service.

Tableau 5 – Codes de résultat de service

ID symbolique	Description	Service
Bad_AlreadyLocked	Le Nœud est déjà verrouillé par un autre Client FDI®.	InitLock
Bad_LockRequired	Le Nœud transmis n'est pas encore verrouillé.	Write, DirectAccess
Bad_MaxAgeInvalid	Le paramètre âge maximal n'est pas valide.	Read
Bad_NodeInvalid	L'identifiant ne se réfère pas à un Nœud valide dans le Modèle d'Appareil. Ce code de résultat est utilisé comme code de résultat du niveau service et du niveau opération.	Browse, InitLock, ExitLock
Bad_NothingToDo	Il n'y avait aucune tâche à réaliser, car l'appelant a transmis une liste d'opérations sans éléments.	Read, Write, Subscribe, Unsubscribe
Bad_NotSupported	Le Service n'est pas pris en charge pour le Nœud spécifié ou pour l'Appareil/Bloc en général.	Locking, DirectAccess
Bad_RequestCancelled	La demande a été annulée par le Client/l'UIP.	Tous
Bad_SubscriptionIdInvalid	L'identifiant d'abonnement n'est pas valide.	Subscribe, Unsubscribe, DeleteSubscription
Bad_Timeout	L'opération s'est interrompue après le délai.	Tous
Bad_TooManySubscriptions	Le Serveur FDI® a atteint le nombre maximal d'abonnements.	CreateSubscription
Bad_InvalidState	Le Nœud spécifié est dans un état qui ne permet pas cette opération.	Services pour Locking
Bad_TooManyOperations	La demande n'a pas pu être traitée, car elle spécifiait trop d'opérations.	Read, Write, Subscribe
Bad_UnexpectedError	Une erreur inattendue s'est produite.	Tous

Tous les UIP doivent toujours vérifier le StatusCode associé à un résultat avant de l'utiliser. Les résultats auxquels est associé un statut uncertain/warning (incertain/avertissement) doivent être utilisés avec prudence, car ces résultats peuvent ne pas être valides pour toutes les situations. Les résultats avec un statut bad/failed (mauvais/défaillant) ne doivent jamais être utilisés.

5.1.5 Services des Propriétés de Base

5.1.5.1 Vue d'ensemble

Les Services des Propriétés de Base fournissent l'accès aux propriétés de base d'Accès à l'Appareil.

5.1.5.2 GetDeviceAccessInterfaceVersion

5.1.5.2.1 Description

Ce service renvoie la version de l'interface utilisée par l'UIP.

5.1.5.2.2 Paramètres

Le Tableau 6 définit les paramètres du service.

Tableau 6 – Paramètres du Service GetDeviceAccessInterfaceVersion

Nom	Type	Description
Demande		
Réponse		
version	String	Version de Technologie FDI® de l'interface DeviceAccess. Le format de la valeur est xx.yy.zz, comme cela est défini dans l'IEC 62769-4.

5.1.5.2.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.1.5.3 GetOnlineAccessAvailability

5.1.5.3.1 Description

Ce service renvoie un élément de réponse pour savoir si l'accès en ligne est disponible en principe. Il s'agit d'une information générale. Il ne précise pas s'il est possible d'accéder en ligne à un appareil spécifique.

5.1.5.3.2 Paramètres

Le Tableau 7 définit les paramètres du service.

Tableau 7 – Paramètres du Service GetOnlineAccessAvailability

Nom	Type	Description
Demande		
Réponse		
onlineAccess	Boolean	Lorsqu'elle est définie sur "false", cette valeur spécifie que l'accès en ligne n'est pas disponible. La valeur "true" indique une disponibilité de base.

5.1.5.3.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.1.6 Services du Modèle d'Appareil

5.1.6.1 Vue d'ensemble

Les Services du Modèle d'Appareil comprennent:

- Browse,
- Read,
- Write,
- Subscription
 - CreateSubscription,
 - Subscribe,
 - Unsubscribe,
 - DeleteSubscription.

Les services fournissent l'accès à la représentation hors-ligne et en ligne de l'Appareil. Les Nœuds en ligne d'un Appareil sont toujours présents. Cependant, l'accès aux données dont la communication est exigée peut être rejeté avec les codes de statut adéquats, tels que `Bad_NotConnected`.

NOTE Le modèle en ligne ne contient pas `SubDevices`. Si l'UIP utilise un chemin comprenant `SubDevices` pour accéder au Nœud en ligne, ce chemin sera évalué dans la hiérarchie hors-ligne.

Les services `Cancel` (Annuler) sont disponibles pour `Browse`, `Read` et `Write`. La définition et les mécaniques exactes dépendent de la technologie utilisée pour la mise en œuvre de ces services.

5.1.6.2 Browse

5.1.6.2.1 Description

Permet de parcourir un niveau unique dans la hiérarchie du Modèle d'Appareil et renvoie les Attributs pour tous les enfants du Nœud spécifié.

5.1.6.2.2 Paramètres

Le Tableau 8 définit les paramètres du service.

Tableau 8 – Paramètres du Service Browse

Nom	Type	Description
Demande		
<code>nodeToBrowse</code>	<code>NodeSpecifier</code>	Identifiant du Nœud à explorer. Voir la définition du type <code>NodeSpecifier</code> en 5.1.9.3.2.
Réponse		
<code>browseResult[]</code>	<code>structure</code>	Liste des Nœuds situés dans le prochain niveau inférieur de la hiérarchie. Pour chaque Nœud, les Attributs suivants sont renvoyés.
<code>nodePath</code>	<code>String</code>	Voir <code>BaseNodeClass</code> en 5.1.3.2.
<code>name</code>	<code>String</code>	Voir <code>BaseNodeClass</code> en 5.1.3.2.
<code>label</code>	<code>LocalizedText</code>	Voir <code>BaseNodeClass</code> en 5.1.3.2.

5.1.6.2.3 Résultats de service

Aucun code de résultat de Service spécifique n'est défini pour `Browse`. Les `StatusCodes` communs sont définis en 5.1.4.4.

5.1.6.3 CancelBrowse

5.1.6.3.1 Description

L'appel de `CancelBrowse` indique que l'UIP ne s'intéresse plus aux résultats de ce service. L'exécution est interrompue dès que possible.

`Cancel` (Annuler) est une suggestion pour le système. En raison de son exécution asynchrone, le service peut déjà être entièrement ou partiellement terminé.

5.1.6.3.2 Paramètres

Le Tableau 9 définit les paramètres du service.

Tableau 9 – Paramètres du Service CancelBrowse

Nom	Type	Description
Demande		
serviceld	<dépendant de la technologie>	Identifiant du service à annuler.
Réponse		

5.1.6.3.3 Résultats de service

Aucun code de résultat de Service spécifique n'est défini pour CancelBrowse. Les demandes de Browse annulées avec succès doivent répondre à Bad_RequestCancelled. Les StatusCodes communs sont définis en 5.1.4.4.

5.1.6.4 Read

5.1.6.4.1 Description

Ce service est utilisé pour lire les Attributs des Nœuds Objet ou Variable. Les UIP qui nécessitent de surveiller les Attributs de Variable pour modifications doivent utiliser les services Subscription (Abonnement) en lieu et place de Read (Lecture).

5.1.6.4.2 Paramètres

Le Tableau 10 définit les paramètres du service.

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

Tableau 10 – Paramètres du Service Read

Nom	Type	Description
Demande		
returnInnerErrorInfo	Boolean	Lorsque la valeur est "true", cela signifie que les informations relatives aux erreurs qui proviennent d'appels vers un système sous-jacent doivent être renvoyées, lorsqu'elles sont disponibles. La valeur "false" indique que ces informations ne doivent pas être renvoyées.
attributesToRead[]	Structure	Attributs à lire.
node	NodeSpecifier	Identifiant du Nœud qui contient l'Attribut à lire. Voir la définition du type NodeSpecifier en 5.1.9.3.2.
attributId	AttributId	Identifiant numérique de l'Attribut à lire. Voir 5.1.9.3.3.
indexRange	NumericRange	Ce paramètre est utilisé pour identifier un élément simple d'une matrice ou une plage simple d'indices pour les matrices. Si une plage d'éléments est spécifiée, les valeurs sont renvoyées sous forme de composés. Le premier élément est identifié par l'indice 0 (zéro). Ce paramètre est ignoré si l'Attribut spécifié n'est pas une matrice ou une structure. Cependant, si l'Attribut spécifié est une matrice ou une structure, et que ce paramètre est nul, alors tous les éléments doivent être inclus dans la plage. Pour obtenir une définition détaillée, voir 5.1.9.3.6.
maxAge	UInt32	Age maximal de la valeur à lire en millisecondes. Si le Serveur FDI® comporte une valeur plus récente que maxAge en mémoire cache, il renvoie la valeur placée en cache au lieu de demander une nouvelle valeur à l'appareil. Si maxAge est défini sur 0, le Serveur FDI® doit lire une nouvelle valeur dans la source de données. Les valeurs supérieures à $2^{31} - 1$ (0x7fff ffff) ne sont pas valides pour maxAge.
Réponse		
readResult []	DataValue	StatusCode, Valeur et Timestamps (Horodatages) pour chaque Attribut Nœud qui a été lu. L'ordre de cette liste correspond à l'ordre du paramètre de demande attributesToRead. La DataValue est définie en 5.1.9.3.3.
innerErrorInfos []	InnerErrorInfo	Liste des informations relatives aux erreurs, qui proviennent d'appels d'un système sous-jacent. Voir 5.1.9.3.4. Correspond à la taille et à l'ordre du paramètre de demande attributesToRead. Cette liste est vide si les informations d'erreurs internes n'ont pas été demandées ou lorsqu'aucune information n'a été rencontrée lors du traitement de la demande.

5.1.6.4.3 Résultats de service

Le Tableau 11 définit les valeurs pour le code de résultat de service. D'autres StatusCodes communs sont définis en 5.1.4.4.

Tableau 11 – Codes de résultat du service Read

Code de résultat	Description
Bad_MaxAgeInvalid	Le paramètre âge maximal n'est pas valide.

5.1.6.4.4 Codes de résultat de l'opération

Le Tableau 12 définit les valeurs pour le code de statut de niveau opération contenu dans la DataValue de chaque élément readResult. Tous les codes de statut opérationnel avec leur description sont présents dans l'IEC 62769-5.

Tableau 12 – Codes de résultat de l'opération Read

Code de résultat
Good
Good_LocalOverride
Good_PostActionFailed
Good_DependentValueChanged
Uncertain
Uncertain_NoCommunicationLastValue
Uncertain_LastUsableValue
Uncertain_SubstituteValue
Uncertain_InitialValue
Uncertain_SensorNotAccurate
Uncertain_EngineeringUnitsExceeded
Uncertain_SubNormal
Uncertain_DominantValueChanged
Bad
Bad_UserAccessDenied
Bad_ConfigurationError
Bad_NotConnected
Bad_DeviceFailure
Bad_SensorFailure
Bad_OutOfRange
Bad_OutOfService
Bad_NodeInvalid
Bad_AttributeInvalid
Bad_IndexRangeInvalid
Bad_NotReadable

5.1.6.5 CancelRead

5.1.6.5.1 Description

L'appel de CancelRead indique que l'UIP ne s'intéresse plus aux résultats de ce service. L'exécution est interrompue dès que possible.

Cancel (Annuler) est une suggestion pour le système. En raison de son exécution asynchrone, le service peut déjà être entièrement ou partiellement terminé.

5.1.6.5.2 Paramètres

Le Tableau 13 définit les paramètres du service.

Tableau 13 – Paramètres du Service CancelRead

Nom	Type	Description
Demande		
serviceId	<dépendant de la technologie>	Identifiant du service à annuler.
Réponse		

5.1.6.5.3 Résultats de service

Aucun code de résultat de Service spécifique n'est défini pour CancelRead. Les demandes de Read annulées avec succès doivent répondre à Bad_RequestCancelled. Les StatusCodes communs sont définis en 5.1.4.4.

5.1.6.6 Write

5.1.6.6.1 Description

Ce Service est utilisé pour écrire des valeurs dans une ou plusieurs Variables. Pour les valeurs matricielles, ce service autorise l'écriture de la matrice entière, l'écriture des éléments individuels ou l'écriture des plages d'éléments.

Le verrouillage explicite est exigé (voir 5.1.7). Si le Nœud n'est pas verrouillé, la demande est rejetée avec Bad_LockRequired.

La réponse de service n'est pas renvoyée avant l'exécution par le système de l'opération d'écriture. Le retour en arrière est du ressort du client FDI® / UIP.

Les valeurs doivent avoir le type de données correct.

NOTE Aucune traduction automatique du type de données n'est communiquée (voir le code de résultat de l'opération Bad_TypeMismatch).

5.1.6.6.2 Paramètres

Le Tableau 14 définit les paramètres du service.

Tableau 14 – Paramètres du Service Write

Nom	Type	Description
Demande		
returnInnerErrorInfo	Boolean	Lorsque la valeur est "true", cela signifie que les informations relatives aux erreurs qui proviennent d'appels vers un système sous-jacent doivent être renvoyées, lorsqu'elles sont disponibles. La valeur "false" indique que ces informations ne doivent pas être renvoyées.
variablesToWrite[]	structure	Liste des Variables à écrire. Il convient de ne poser aucune hypothèse sur l'ordre de traitement de cette liste. Si l'ordre a une importance, des demandes de service séparées doivent être utilisées.
node	NodeSpecifier	Identifiant du Nœud qui contient l'Attribut à écrire. Voir la définition du type NodeSpecifier en 5.1.9.3.2.
indexRange	NumericRange	Pour obtenir une définition détaillée, voir 5.1.9.3.6.
value	Variant	Valeur à écrire.
Réponse		
writeResult[]	UInt32	Les codes de statut pour les résultats d'opération sont définis dans le Tableau 15. L'ordre de cette liste correspond à l'ordre du paramètre de demande variablesToWrite.
innerErrorInfos []	InnerErrorInfo	Liste des informations relatives aux erreurs, qui proviennent d'appels d'un système sous-jacent. Voir 5.1.9.3.4. Correspond à la taille et à l'ordre du paramètre de demande variablesToWrite. Cette liste est vide si les informations d'erreurs internes n'ont pas été demandées ou lorsqu'aucune information n'a été rencontrée lors du traitement de la demande.

5.1.6.6.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.1.6.6.4 Codes de résultat de l'opération

Le Tableau 15 définit les valeurs pour le code de statut de niveau opération contenu dans les éléments writeResult. Tous les codes de statut opérationnel avec leur description sont présents dans l'IEC 62769-5.

Tableau 15 – Codes de résultat de l'opération Write

Code de résultat
Good
Good_PostActionFailed
Bad
Bad_UserAccessDenied
Bad_NodeInvalid
Bad_IndexRangeInvalid
Bad_TypeMismatch
Bad_OutOfRange
Bad_NotWritable

5.1.6.7 CancelWrite**5.1.6.7.1 Description**

L'appel de CancelWrite indique que l'UIP ne s'intéresse plus aux résultats de ce service. L'exécution est interrompue dès que possible.

Cancel (Annuler) est une suggestion pour le système. En raison de son exécution asynchrone, le service peut déjà être entièrement ou partiellement terminé.

5.1.6.7.2 Paramètres

Le Tableau 16 définit les paramètres du service.

Tableau 16 – Paramètres du Service CancelWrite

Nom	Type	Description
Demande		
serviceId	<dépendant de la technologie>	Identifiant du service à annuler.
Réponse		

5.1.6.7.3 Résultats de service

Aucun code de résultat de Service spécifique n'est défini pour CancelWrite. Les demandes de Write annulées avec succès doivent répondre à Bad_RequestCancelled. Les StatusCodes communs sont définis en 5.1.4.4.

5.1.6.8 Abonnements

5.1.6.8.1 Mécanisme d'Abonnement

Les Abonnements permettent à l'UIP de recevoir des rappels (callbacks) non sollicités de la part du Client FDI®, lorsque les Attributs Nœud d'abonnement varient. Les Abonnements permettent d'obtenir des mises à jour périodiques des données d'une manière plus efficace qu'en effectuant des appels répétés au service Read (c'est-à-dire par interrogation). L'UIP crée un abonnement en appelant le service CreateSubscription (voir 5.1.6.8.2). Lorsque le service CreateSubscription est appelé, l'UIP doit fournir un paramètre de rappel avec le service DataChangeCallback spécifique à l'UIP (voir 5.1.6.8.6). Après avoir reçu l'identifiant d'abonnement dans la réponse CreateSubscription, l'UIP doit ajouter les Attributs Nœud concernés à l'Abonnement en appelant le service Subscribe.

Lorsque les valeurs initiales ont été signalées, le service DataChangeCallback est appelé uniquement lorsque les Attributs Nœud varient et seuls les Attributs Nœud modifiés sont consignés dans le rappel. L'UIP contrôle la fréquence maximale pour laquelle il convient d'invoquer le rappel, en spécifiant une fréquence en millisecondes.

Après abonnement aux Attributs Nœud, leurs valeurs ne peuvent pas être disponibles immédiatement et peuvent le devenir à des moments différents. A cet effet, le rappel initial peut ne pas inclure tous les Attributs Nœud d'abonnement. En outre, le renvoi d'un StatusCode Bad ou Uncertain par la mise à jour initiale d'un Attribut Nœud d'abonnement est possible.

De plus, le délai entre une modification et le rappel dépend de l'emplacement où sont conservées les informations à modifier. Certaines valeurs sont gérées par le système, ce qui permet la notification immédiate; d'autres valeurs résident dans l'appareil physique de sorte qu'une communication est exigée pour accéder à ces valeurs.

5.1.6.8.2 Service CreateSubscription

5.1.6.8.2.1 Description

Ce Service est utilisé pour créer un abonnement.

5.1.6.8.2.2 Paramètres

Le Tableau 17 définit les paramètres du service.

Tableau 17 – Paramètres du Service CreateSubscription

Nom	Type	Description
Demande		
requestedUpdateRate	UInt32	La fréquence la plus rapide, en millisecondes, à laquelle l'UIP demande à être rappelé pour les modifications de données, spécifiée par la période la plus courte en millisecondes qui s'écoule entre les mises à jour. Un rappel est effectué uniquement si des données sont modifiées, indépendamment de la fréquence demandée. Une fréquence de "0" indique que l'appelant souhaite être averti des modifications dès que possible. Le service renvoie un résultat avec la fréquence la plus rapide possible de revisedUpdateRate.
dataChangeCallback	DataChangeCallback	Rappel pour l'envoi vers l'UIP de mises à jour de modifications de données. Voir 5.1.6.8.6. DataChangeCallback est un service mis en œuvre et fourni par l'UIP.
Réponse		
revisedUpdateRate	UInt32	La fréquence réelle que le Serveur FDI® utilise, exprimée par la période minimale en millisecondes qui s'écoule entre les mises à jour (si les données ont été modifiées depuis la dernière mise à jour).
subscriptionId	SubscriptionId	Identifiant assigné à l'appel pour l'abonnement. Le type SubscriptionId dépend de la technologie.

5.1.6.8.2.3 Résultats de service

Le Tableau 18 définit les valeurs pour le résultat de service. Les résultats communs sont définis en 5.1.4.4.

Tableau 18 – Codes de résultat du Service CreateSubscription

Code de résultat	Description
Bad_TooManySubscriptions	Le Serveur FDI® a atteint le nombre maximal d'abonnements.

5.1.6.8.3 Service Subscribe**5.1.6.8.3.1 Description**

Ce service est utilisé pour ajouter un ou plusieurs Attributs Nœud à un abonnement existant.

L'abonnement peut être utilisé pour tous les Attributs Nœud.

5.1.6.8.3.2 Paramètres

Le Tableau 19 définit les paramètres du service.

Tableau 19 – Paramètres du Service Subscribe

Nom	Type	Description
Demande		
subscriptionId	SubscriptionId	Identifiant d'un abonnement existant qui a été renvoyé par le service CreateSubscription.
returnInnerErrorInfo	Boolean	Lorsque la valeur est "true", cela signifie que les informations relatives aux erreurs qui proviennent d'appels vers un système sous-jacent doivent être transmises dans DataChangeCallbacks, lorsqu'elles sont disponibles. La valeur "false" indique que ces informations ne doivent pas être renvoyées.
monitoredItemsToAdd[]	structure	Attributs à ajouter à l'abonnement.
node	NodeSpecifier	Identifiant du Nœud qui contient l'Attribut auquel s'abonner. Voir la définition du type NodeSpecifier en 5.1.9.3.2.
attributeId	AttributeId	Identifiant numérique de l'Attribut auquel s'abonner. Voir 5.1.9.3.3.
indexRange	NumericRange	Ce paramètre est utilisé pour identifier un élément simple d'une matrice ou une plage simple d'indices pour les matrices. Si une plage d'éléments est spécifiée, les valeurs sont renvoyées sous forme de composés. Le premier élément est identifié par l'indice 0 (zéro). Ce paramètre est ignoré si l'Attribut spécifié n'est pas une matrice ou une structure. Cependant, si l'Attribut spécifié est une matrice ou une structure, et que ce paramètre est nul, alors tous les éléments doivent être inclus dans la plage. Pour obtenir une définition détaillée, voir 5.1.9.3.6.
samplingInterval	Int32	Intervalle qui définit la fréquence la plus rapide à laquelle il convient d'accéder et d'évaluer l'Attribut. Cet intervalle est défini en millisecondes. La valeur 0 indique qu'il convient que le Serveur FDI® utilise la fréquence pratique la plus rapide. La valeur -1 indique que l'intervalle d'échantillonnage par défaut défini par l'UpdateRate d'un Abonnement est utilisé. Voir 5.1.6.8.3.3 pour de plus amples informations sur l'intervalle d'échantillonnage.
uiPHandle	UInt32	Descripteur (identifiant) fourni par l'UIP pour l'Attribut Nœud d'abonnement. Ce descripteur est transmis avec les données dans le service DataChangeCallback, afin que l'UIP puisse facilement associer chaque valeur modifiée avec l'Attribut Nœud d'abonnement. L'uiPHandle est probablement un index dans un tableau situé quelque part. Il ne doit pas forcément être unique (plusieurs éléments d'abonnement peuvent pointer vers la même entrée de tableau).
Réponse		
subscribeResult []	structure	Liste des résultats pour les Attributs d'abonnement. La taille et l'ordre de la liste correspondent à la taille et à l'ordre du paramètre de demande attributesToSubscribe.
statusCode	UInt32	Code de statut pour l'Attribut correspondant auquel s'abonner, comme cela est défini dans le Tableau 20.
monitoredItemId	UInt32	Identifiant assigné au Serveur FDI® pour l'Attribut d'abonnement. Cet identifiant est unique au sein de l'Abonnement et doit être utilisé en appelant Unsubscribe. Ce paramètre est présent seulement si le statusCode indique que l'abonnement à l'Attribut s'est déroulé avec succès.
revisedSamplingInterval	Int32	Intervalle d'échantillonnage réel utilisé. Cette valeur est fondée sur plusieurs facteurs, y compris les capacités du système sous-jacent.

L'Abonnement est réussi même si l'utilisateur actuel n'est pas autorisé à accéder à l'Attribut Nœud. Si tel est le cas, le rappel initial renvoie le résultat d'opération "Bad_UserAccessDenied". Après traitement de ce refus (par exemple, après avoir fourni l'identité d'un utilisateur plus puissant), l'UIP reçoit les modifications de données pour cet Attribut Nœud.

Les abonnements sont possibles avec tout type d'Attribut, et pas uniquement la Valeur. Bien que cela puisse ne pas avoir de sens pour tous les Attributs, la surveillance de certains Attributs apporte des possibilités supplémentaires. Les exemples de surveillances comprennent:

- la surveillance du LockedStatus pour déterminer lorsque le verrou est retiré par un autre client;
- la surveillance du CurrentLabel des Enumérations pour recevoir un nom affichable, plutôt qu'une valeur numérique.

5.1.6.8.3.3 Intervalle d'échantillonnage

Chaque élément d'abonnement reçoit un intervalle d'échantillonnage qui lui est attribué et qui est hérité d'updateRate de l'Abonnement, ou alors défini spécifiquement pour se substituer à cette fréquence. L'intervalle d'échantillonnage indique la fréquence la plus rapide à laquelle il convient que la valeur soit échantillonnée dans l'appareil pour les modifications de données.

L'intervalle d'échantillonnage attribué définit une fréquence cyclique "optimale" qui est utilisée pour échantillonner l'élément à partir de sa source. Dans ce contexte, "optimal" signifie que le système fait de son mieux pour effectuer l'échantillonnage à cette fréquence. L'échantillonnage à des fréquences plus rapides que celle-ci est acceptable, mais n'est pas nécessaire pour satisfaire aux besoins de l'UIP. La façon dont le système traite la fréquence d'échantillonnage et la fréquence à laquelle il sonde effectivement ses sources de données en interne constituent un élément détaillé de mise en œuvre du système. Cependant, le délai entre les valeurs renvoyées vers l'UIP doit être supérieur ou égal à l'intervalle d'échantillonnage.

Le Client FDI® peut aussi spécifier 0 pour l'intervalle d'échantillonnage, ce qui indique qu'il convient pour le système d'utiliser la fréquence pratique la plus rapide. Il est prévu que les systèmes prennent en charge uniquement un jeu limité d'intervalles d'échantillonnage pour optimiser leur fonctionnement. Si l'intervalle exact demandé par l'UIP n'est pas pris en charge, l'intervalle le plus approprié, déterminé par le système, est alors attribué et renvoyé vers l'UIP.

Les données peuvent être recueillies selon un modèle d'échantillonnage ou générées selon un modèle piloté par des exceptions. L'intervalle d'échantillonnage pris en charge le plus rapide peut être égal à 0, ce qui implique que l'élément de données repose sur des exceptions au lieu d'être échantillonné périodiquement. Lorsqu'il repose sur des exceptions, le système sous-jacent n'exige pas d'échantillonnage.

Dans de nombreux cas, le système n'a pas connaissance de la logique de mise à jour des données. Dans ce cas, même si le système effectue l'échantillonnage à la fréquence négociée, les données peuvent être mises à jour par le système sous-jacent à une fréquence beaucoup plus lente. Dans ce cas, les modifications ne peuvent être détectées qu'à cette fréquence plus lente.

Il convient également que les UIP sachent que l'échantillonnage réalisé par le système et le cycle de mise à jour de l'appareil ne sont généralement pas synchronisés, ce qui peut induire des retards supplémentaires.

5.1.6.8.3.4 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.1.6.8.3.5 Codes de résultat de l'opération

Le Tableau 20 définit les valeurs pour le code de statut de niveau opération contenu dans les résultats. Tous les codes de statut opérationnel avec leur description sont présents dans l'IEC 62769-5.

Tableau 20 – Codes de résultat de l'opération Subscribe

Code de résultat
Good
Bad
Bad_NodeInvalid
Bad_AttributeInvalid
Bad_NotReadable
Bad_UserAccessDenied

5.1.6.8.4 Service Unsubscribe

5.1.6.8.4.1 Description

Ce service est utilisé pour se désabonner d'un ou de plusieurs Attributs Nœud.

5.1.6.8.4.2 Paramètres

Le Tableau 21 définit les paramètres du service.

Tableau 21 – Paramètres du Service Unsubscribe

Nom	Type	Description
Demande		
subscriptionId	SubscriptionId	Identifiant d'un abonnement existant qui a été renvoyé par le service CreateSubscription.
monitoredItemIds[]	UInt32	Identifiants pour les Attributs d'abonnement qui ont été renvoyés par le service Subscribe.
Réponse		
unsubscribeResult[]	UInt32	Les codes de statut pour les résultats d'opération sont définis dans le Tableau 22. L'ordre de cette liste correspond à l'ordre du paramètre de demande monitoredItemIds.

5.1.6.8.4.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.1.6.8.4.4 Codes de résultat de l'opération

Le Tableau 22 définit les valeurs pour le code de statut de niveau opération contenu dans l'élément unsubscribeResult. Tous les codes de statut opérationnel avec leur description sont présents dans l'IEC 62769-5.

Tableau 22 – Codes de résultat de l'opération Unsubscribe

Code de résultat
Good
Bad
Bad_UIPHandleInvalid

5.1.6.8.5 Service DeleteSubscription**5.1.6.8.5.1 Description**

Ce Service est utilisé pour supprimer un abonnement. En raison de la nature asynchrone des rappels, l'UIP peut recevoir des rappels supplémentaires pour un abonnement après la suppression de ce dernier.

5.1.6.8.5.2 Paramètres

Le Tableau 23 définit les paramètres du service.

Tableau 23 – Paramètres du Service DeleteSubscription

Nom	Type	Description
Demande		
subscriptionId	SubscriptionId	Identifiant d'un abonnement existant qui a été renvoyé par le service CreateSubscription.
Réponse		

5.1.6.8.5.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.1.6.8.6 Service DataChangeCallback**5.1.6.8.6.1 Description**

Ce service est utilisé pour envoyer des mises à jour de modification de données vers l'UIP. Ce service est mis en œuvre et fourni par l'UIP lors de l'appel du service CreateSubscription.

En raison de la nature asynchrone des rappels, l'UIP peut recevoir des rappels supplémentaires pour un abonnement après la suppression de ce dernier.

5.1.6.8.6.2 Paramètres

Le Tableau 24 définit les paramètres du service.

Tableau 24 – Paramètres du Service DataChangeCallback

Nom	Type	Description
Demande		
subscriptionId	SubscriptionId	Identifiant renvoyé par le service CreateSubscription.
dataChangeData[]	structure	Données qui ont été modifiées. Aucun ordre spécifique n'est assuré pour les éléments matriciels.
uiPHandle	UInt32	Descripteur fourni par l'UIP dans le service Subscribe.
value	DataValue	Le StatusCode, la Valeur et les horodatages de l'Attribut Nœud d'abonnement. La DataValue est définie en 5.1.9.3.3.
innerErrorInfos []	InnerErrorInfo	Liste des informations relatives aux erreurs, qui proviennent d'appels d'un système sous-jacent. Voir 5.1.9.3.4. Correspond à la taille et à l'ordre du paramètre de demande dataChangeData. Cette liste est vide si les informations d'erreurs internes n'ont pas été demandées ou lorsqu'aucune information n'a été rencontrée lors du traitement de la demande.
Réponse		

5.1.6.8.6.3 Codes de résultat de l'opération

Le Tableau 25 définit les valeurs pour le code de statut d'opération contenu dans la structure DataChangeData de chaque élément des valeurs. De plus, tous les codes de statut d'opération Read s'appliquent également (voir Tableau 12). Tous les codes de statut opérationnel avec leur description sont présents dans l'IEC 62769-5.

Tableau 25 – Codes de résultat de DataChangeCallback

Code de résultat
Bad_WaitingForInitialData

5.1.7 Services de Verrouillage

5.1.7.1 Vue d'ensemble

Le verrouillage est le moyen d'éviter des modifications simultanées sur un Appareil ou un Bloc et ses Paramètres. Les UIP doivent utiliser les Services de Verrouillage avant d'effectuer des modifications (opérations d'écriture et Services d'Accès Direct, par exemple).

Le verrou s'applique toujours à la fois sur les versions en ligne et hors-ligne.

Lors du verrouillage d'un Appareil Modulaire, le verrou s'applique à l'Appareil complet (y compris tous les modules). De la même manière, lors du verrouillage d'un Appareil Bloc, le verrou s'applique à l'Appareil complet (y compris tous les Blocs).

Si aucun verrou n'est appliqué à l'Appareil de niveau supérieur (pour Appareil Modulaire ou Appareil Bloc), les sous-Appareils ou les Blocs, respectivement, peuvent être verrouillés indépendamment.

Avec le verrouillage appliqué, les demandes qui proviennent d'autres Clients FDI® pour écrire des Paramètres, ou pour réaliser un Accès Direct, sont rejetées.

Le verrou est retiré en appelant ExitLock.

5.1.7.2 Service InitLock

5.1.7.2.1 Description

InitLock réserve l'Appareil ou le Bloc spécifié. Lorsqu'un verrou est appliqué, les autres Clients FDI® ne sont pas en mesure d'écrire les Paramètres de cet élément. Un verrou appliqué sur un élément déjà verrouillé par un autre Client FDI® est rejeté. Un UIP peut s'abonner à l'Attribut LockedStatus afin d'être informé lors du retrait du verrou par un autre Client.

Les Clients FDI® doivent permettre les appels InitLock "imbriqués" qui proviennent du même UIP. Le Client FDI® prévoit le même nombre d'appels ExitLock avant de retirer effectivement le verrou.

Les Clients FDI® sont chargés d'empêcher des verrous simultanés, vers un Appareil ou un Bloc, par des composants individuels hébergés par ce Client. De tels composants incluent le Client lui-même, des UIP indépendants ou l'interprète UID.

5.1.7.2.2 Paramètres

Le Tableau 26 définit les paramètres du service.

Tableau 26 – Paramètres du Service InitLock

Nom	Type	Description
Demande		
node	NodeSpecifier	Identifiant du Nœud (qui représente un appareil ou un bloc) à verrouiller. Voir la définition du type NodeSpecifier en 5.1.9.3.2.
context	String	Chaîne utilisée pour fournir les informations de contexte à propos de l'activité actuelle dans l'UIP. Elle est utilisée pour améliorer la piste de vérification.
Réponse		

5.1.7.2.3 Résultats de service

Le Tableau 27 définit les valeurs pour le code de résultat de service. D'autres StatusCodes communs sont définis en 5.1.4.4.

Tableau 27 – Codes de résultat du Service InitLock

Code de résultat	Description
Bad_NotSupported	Le Nœud ne prend pas en charge le verrouillage.
Bad_AlreadyLocked	Le Nœud est déjà verrouillé par un autre Client FDI® ou par un autre composant individuel au sein du Client FDI®.

5.1.7.3 Service ExitLock

5.1.7.3.1 Description

ExitLock supprime le verrou.

5.1.7.3.2 Paramètres

Le Tableau 28 définit les paramètres du service.

Tableau 28 – Paramètres du Service ExitLock

Nom	Type	Description
Demande		
node	NodeSpecifier	Identifiant du Nœud (qui représente un appareil ou un bloc) à déverrouiller. Voir la définition du type NodeSpecifier en 5.1.9.3.2.
Réponse		

5.1.7.3.3 Résultats de service

Le Tableau 29 définit les valeurs pour le code de résultat de service. D'autres StatusCodes communs sont définis en 5.1.4.4.

Tableau 29 – Codes de résultat du Service ExitLock

Code de résultat	Description
Bad_ InvalidState	Le Nœud n'est pas verrouillé.

5.1.8 Services d'Accès Direct

5.1.8.1 Vue d'ensemble

Les Services Direct Access (Accès Direct) fournissent la communication directe avec un Appareil. Ils peuvent être utilisés pour les opérations qui ne peuvent pas, ou difficilement, être effectuées par les Services du Modèle d'Appareil. Les cas d'utilisation comprennent la transmission de paquets de données de grande taille depuis ou vers l'Appareil, par exemple, des données historiques ou un microprogramme. Il convient que les Services d'Accès Direct ne compromettent pas l'intégrité de la structure et des données du Modèle d'Appareil. La prise en charge des Services d'Accès Direct est obligatoire pour les Hôtes FDI®. Néanmoins, les Systèmes Hôtes doivent fournir des moyens de désactiver/activer les Services d'Accès Direct sur demande. Les ingénieurs de mise en service ou les opérateurs d'usine peuvent alors interdire l'usage de l'Accès Direct dans certains cas. Cette interdiction peut être temporaire ou permanente, et peut s'appliquer à l'ensemble ou à des parties spécifiques de l'usine. Par conséquent, les UIP ne doivent pas dépendre de la disponibilité de l'Accès Direct pour la configuration initiale d'un Appareil (par exemple, nécessaire pour la mise en service).

Le comportement suivant s'applique lors de l'utilisation de l'Accès Direct:

- Seul un Client FDI® ou un UIP peut utiliser DirectAccess sur une période donnée. En mode Accès Direct, d'autres Clients FDI® ou OPC UA, d'autres UIP ou l'UID, ne sont pas en mesure d'accéder à cet Appareil (même en mode Lecture).
- L'Appareil doit être verrouillé avant d'entrer dans ce mode.
- Si les Attributs de Variable peuvent avoir été modifiés en raison de DirectAccess, l'UIP doit définir InvalidateCache sur "true" dans l'argument EndDirectAccess.

Les Services Direct Access comprennent:

- InitDirectAccess,
- Transfer,
- ExitDirectAccess.

Ligne directrice:

Ces services ne doivent pas être utilisés comme alternative à l'accès au Modèle d'Information. A la place, DirectAccess est utilisé pour le transfert de données qui ne sont pas réfléchies dans le Modèle d'Information.

5.1.8.2 InitDirectAccess

5.1.8.2.1 Description

Ce Service initialise l'Appareil pour l'utilisation de DirectAccess.

5.1.8.2.2 Paramètres

Le Tableau 30 définit les paramètres du Service.

Tableau 30 – Paramètres du Service InitDirectAccess

Nom	Type	Description
Demande		
context	String	Chaîne utilisée pour fournir les informations de contexte à propos de l'activité actuelle dans l'UIP. Elle est utilisée pour améliorer la piste de vérification.
Réponse		

5.1.8.2.3 Résultats de service

Le Tableau 31 définit les valeurs pour le code de résultat de Service. D'autres StatusCodes communs sont définis en 5.1.4.4.

Tableau 31 – Codes de résultat du Service InitDirectAccess

Code de résultat	Description
Bad_NotSupported	DirectAccess n'est (actuellement) pas pris en charge.
Bad_LockRequired	Le Nœud n'a pas été verrouillé.
Bad_InvalidState	DirectAccess est déjà initialisé.

5.1.8.3 ExitDirectAccess

5.1.8.3.1 Description

Ce Service met un terme à l'utilisation de DirectAccess.

5.1.8.3.2 Paramètres

Le Tableau 32 définit les paramètres du Service.

Tableau 32 – Paramètres du Service ExitDirectAccess

Nom	Type	Description
Demande		
InvalidateCache	Boolean	Si la valeur est "true", n'importe quelle valeur mise en cache pour les Paramètres de l'Appareil est invalidée. Cela signifie que ces Paramètres seront lus à nouveau depuis l'Appareil lors de leur prochaine utilisation.
Réponse		

5.1.8.3.3 Résultats de service

Le Tableau 33 définit les valeurs pour le code de résultat de service. D'autres StatusCodes communs sont définis en 5.1.4.4.

Tableau 33 – Codes de résultat du Service ExitDirectAccess

Code de résultat	Description
Bad_InvalidState	L'appareil n'est pas dans le mode DirectAccess.

5.1.8.4 Transfer

5.1.8.4.1 Description

Ce service est utilisé pour transmettre des données vers et depuis l'Appareil. Le format des données reçues ou envoyées est spécifique au protocole.

De par sa nature, Direct Access ne permet pas la génération automatique d'informations pour la Piste de vérification, conformes aux nombreuses réglementations. Ainsi, les UIP doivent appeler le service LogAuditTrailMessage (voir 5.2.2.5) afin de fournir des informations explicites sur les éléments transmis.

Pour les autres appels de service qui ont une incidence indirecte sur l'Appareil, par l'intermédiaire du Modèle d'Appareil (Write), les paramètres du service fournissent suffisamment d'informations.

5.1.8.4.2 Paramètres

Le Tableau 34 définit les paramètres du service.

Tableau 34 – Paramètres du Service Transfer

Nom	Type	Description
Demande		
sendData	String	Document XML fondé sur le TransferSendDataT comme cela est spécifié dans le schéma XML spécifique au profil de communication.
Réponse		
receiveData	String	Document XML fondé sur le TransferResultDataT comme cela est spécifié dans le schéma XML spécifique au profil de communication.

5.1.8.4.3 Résultats de service

Le Tableau 35 définit les valeurs pour le code de résultat de service. D'autres StatusCodes communs sont définis en 5.1.4.4.

Tableau 35 – Codes de résultat du Service Transfer

Code de résultat	Description
Bad_InvalidState	L'appareil n'est pas dans le mode DirectAccess.

5.1.9 Types de données

5.1.9.1 Généralités

Le Paragraphe 5.1.9 spécifie les types de données utilisés pour les paramètres de Service, les valeurs de Variable et les valeurs d'autres Attributs Nœud. Ces données peuvent prendre la forme scalaire ou de matrice.

5.1.9.2 Types de données de base

Le Tableau 36 répertorie les types de données de base, c'est-à-dire les types généralement pris en charge en mode natif par les langages de programmation.

Tableau 36 – Types de données de base

DataType	Description
Boolean	Définit une valeur "true" ou "false".
String	Représente du texte sous la forme de séries de caractères Unicode. La représentation réelle de la chaîne dépend du mapping de la technologie. Voir la série IEC 62769-6.
ByteString	Valeur qui représente une séquence de valeurs d'octets précédée par une longueur de 32 bits.
UtcTime	Valeur de DateTime (Date et Heure) utilisée pour définir le Temps Universel Coordonné (UTC). Toutes les valeurs de temps sont des valeurs UTC. Les Clients FDI® doivent fournir les éventuelles conversions entre UTC et heure locale. UtcTime est un entier signé de 64 bits qui représente le nombre d'intervalles de 100 ns depuis le 1er janvier 1601. Il correspond à la structure FILETIME de Windows.
Int8	Entier signé compris entre -128 et 127 inclus.
Int16	Entier signé compris entre -32 768 et 32 767 inclus.
Int32	Entier signé compris entre -2 147 483 648 et 2 147 483 647 inclus.
Int64	Entier signé compris entre -9 223 372 036 854 775 808 et 9 223 372 036 854 775 807 inclus.
Byte	Valeur dans une plage de 0 à 255.
UInt16	Entier non signé compris entre 0 et 65 535 inclus.
UInt32	Entier non signé compris entre 0 et 4 294 967 295 inclus.
UInt64	Entier non signé compris entre 0 et 18 446 744 073 709 551 615 inclus.
Float	Définit une valeur qui doit être conforme à la définition du type de données à simple précision de la norme IEEE Std 754.
Double	Définit une valeur qui doit être conforme à la définition du type de données à double précision de la norme IEEE Std 754.
Duration	Même représentation que Double.

5.1.9.3 Types spéciaux

5.1.9.3.1 AttributIds

Les AttributIds sont représentés sous la forme d'UInt32. Le Tableau 37 répertorie les Attributs et leurs identificateurs.

Tableau 37 – Identificateurs attribués aux Attributs

Attribut	Identificateur
Name	10
Label	11
Description	12
	...
LockedStatus	30
	...
Value	100
DataType	101
ValueRank	102
ArrayDimensions	103
AccessRights	105
UserAccessRights	106
ScalingFactor	107
	...
EURange	111
EngineeringUnits	112
	...
EnumValues	120
CurrentLabel	121
OptionNames	122
OpmgLabel	123

5.1.9.3.2 NodeSpécifier

Chaque Nœud dans le Modèle d'Appareil (voir 5.1.2) est adressable uniquement avec son nom de chemin d'accès qualifié par un spécificateur en ligne/hors-ligne. Pour la spécification en ligne, le service doit fonctionner dans la version en ligne du Modèle d'Appareil. Pour la spécification hors-ligne, il doit fonctionner dans le modèle hors-ligne.

Le nom de chemin d'accès suit la hiérarchie du Modèle d'Appareil décrit en 5.1.2. Il s'agit d'une concaténation des noms individuels séparés par des barres obliques ("/"). Voir 5.1.2 pour des exemples de noms de chemin d'accès. Tous les paramètres sont identifiés par l'intermédiaire de "/ParameterSet/<ParamName>", toutes les images par l'intermédiaire de "/ImageSet/<ImageName>", et ainsi de suite.

Les Paragraphes 5.1.3.4.3 et 5.1.3.4.5 spécifient la représentation des paramètres qui détiennent des valeurs d'enregistrement ou des matrices de valeurs d'enregistrement. Un nom de chemin d'accès pour les éléments d'enregistrement est construit en prolongeant le chemin jusqu'au Paramètre. Des exemples sont disponibles dans les paragraphes référencés. Les composants de ce paramètre sont définis dans le Tableau 38.

Tableau 38 – NodeSpecifier

Nom	Type	Description
NodeSpecifier	structure	Spécifie un Nœud dans le Modèle d'Appareil.
nodePath	String	Description du chemin qui permet de trouver un Nœud dans le Modèle d'Information.
useOnline	Boolean	Si la valeur est "true", le chemin adresse un Nœud dans le modèle en ligne; si la valeur est "false", un Nœud du modèle hors-ligne est référencé.

Un nom de chemin d'accès vide identifie la Racine.

5.1.9.3.3 DataValue

Ce type décrit la valeur d'un Attribut Nœud dans la réponse de Read et dans DataChangeCallback. Les composants de ce paramètre sont définis dans le Tableau 39.

Tableau 39 – DataValue

Nom	Type	Description
DataValue	structure	Valeur et informations associées.
value	Variant	Valeur de l'Attribut Nœud. Pour la définition de Variant, voir 5.1.9.4.
statusCode	UInt32	StatusCode qui définit la capacité à accéder à/fournir la valeur. Le type StatusCode est défini dans l'IEC 62541-4.
sourceTimestamp	UtcTime	Horodatage de la source pour la valeur.
serverTimestamp	UtcTime	Horodatage du serveur pour la valeur.

Le statusCode est utilisé pour indiquer les conditions dans lesquelles une valeur d'Attribut Nœud a été générée et, de ce fait, peut être utilisé comme un indicateur de validité de la valeur.

Une vérification du StatusCode (au minimum sa Sévérité) de tous les résultats est exigée avant d'accéder à sa valeur et de l'utiliser.

Le sourceTimestamp reflète l'horodatage qui a été appliqué par la source de données. Le sourceTimestamp est seulement renvoyé avec l'Attribut Value des Nœuds Variable. Pour tous les autres Attributs, le sourceTimestamp retourné est réglé sur Null.

Dans le cas d'un statut incertain ou mauvais, sourceTimestamp est utilisé pour refléter l'heure à laquelle la source a reconnu le statut autre que Good ou l'heure à laquelle le Serveur FDI® a tenté pour la dernière fois d'effectuer une reprise sur statut incertain ou mauvais.

Le serverTimestamp est utilisé pour refléter l'heure à laquelle le Serveur FDI® a reçu une valeur de Variable ou a su qu'elle était exacte. Dans le cas d'un statut incertain ou mauvais, serverTimestamp est utilisé pour refléter l'heure à laquelle le Serveur FDI® a reçu le statut ou l'heure correspondant à la dernière tentative du Serveur FDI® de reprise sur statut incertain ou mauvais.

Le serverTimestamp est mis à jour pour chaque nouvelle valeur reçue.

5.1.9.3.4 InnerErrorInfo

Les Services décrits en 5.1 renvoient des StatusCodes aux niveaux service et opération. Ces StatusCodes sont indépendants vis-à-vis du protocole et de l'appareil. Lorsqu'un StatusCode provient d'un appel vers le système sous-jacent (système ou appareil de communication, par exemple), l'état du système sous-jacent peut être indiqué par l'intermédiaire de InnerErrorInfo.

Les composants de ce paramètre sont définis dans le Tableau 40.

Tableau 40 – InnerErrorInfo

Nom	Type	Description
InnerErrorInfo	structure	Informations spécifiques à la communication ou à l'Appareil.
symbolicId	String	Cette chaîne doit être utilisée afin d'identifier le résultat de certaines opérations internes. La longueur maximale de cette chaîne est de 32 caractères. Il convient que les systèmes qui souhaitent renvoyer un code de retour numérique convertissent le code de retour en chaîne et utilisent cette chaîne en tant que symbolicId ("0xC0040007" ou "-4", par exemple).
errorText	LocalizedText	Représentation textuelle de l'identifiant symbolique. La longueur maximale de cette chaîne textuelle est de 256 caractères.

5.1.9.3.5 LocalizedText

Ce type de données définit une structure qui contient une Chaîne dans une traduction spécifique à un paramètre régional, définie dans l'identifiant du paramètre régional. Ses éléments sont définis dans le Tableau 41.

Tableau 41 – Définition de LocalizedText

Nom	Type	Description
LocalizedText	structure	—
text	String	Texte localisé.
locale	String	Identificateur du paramètre régional (par exemple "en-US").

Le paramètre régional de l'élément doit être une chaîne constituée d'un composant langue et d'un composant pays/région, conformément à la norme IETF RFC 3066. Le composant <pays/région> est toujours précédé d'un tiret. Le format de la chaîne de caractères de LocaleId est indiqué ci-dessous:

<langue>[-<pays/région>], dans lequel
 <langue> doit être un code à deux lettres qui identifie une langue conformément à l'ISO 639,
 <pays/région> doit être un code à deux lettres qui identifie le pays ou la région conformément à l'ISO 3166.

Les règles de construction des LocaleIds doivent être conformes à l'IETF RFC 3066 et doivent être limitées comme suit:

- La présente spécification permet uniquement l'utilisation du zéro ou d'un composant <pays/région> à la suite d'un composant <langue>.
- La spécification autorise également les codes <pays/région> à trois lettres "-CHS" et "-CHT" pour les paramètres régionaux chinois "Simplified" et "Traditional".
- La présente spécification permet également l'utilisation d'autres codes <pays/région> considérés comme nécessaires par le Client FDI® ou le Serveur FDI®.

Le Tableau 42 donne des exemples d'identifiants de paramètres régionaux.

Tableau 42 – Exemples de LocaleId

Paramètre régional	LocaleId OPC UA
Anglais	en
Anglais (Etats-Unis)	en-US
Allemand	de
Allemand (Allemagne)	de-DE
Allemand (Autrichien)	de-AT

Une chaîne de caractères vide ou nulle (NULL) indique que le paramètre régional est inconnu.

5.1.9.3.6 Plage Numérique

La Plage Numérique est représentée sous la forme d'une Chaîne (String). La syntaxe pour la Chaîne contient l'une des deux constructions suivantes. La première construction est la représentation sous forme de Chaîne d'un nombre entier individuel. Par exemple, "6" est valide, mais "6,0" et "3,2" ne le sont pas. Les valeurs minimales et maximales qui peuvent être exprimées sont définies par l'utilisation de ce paramètre, et non par la définition du type de ce paramètre. La seconde construction est une plage représentée par deux nombres entiers séparés par le caractère deux-points (":"). Le premier nombre entier doit toujours avoir une valeur inférieure à celle du deuxième. Par exemple, "5:7" est valide, alors que "7:5" et "5:5" ne le sont pas. Aucun autre caractère, y compris les caractères espace, n'est admis.

Tous les indices commencent à 0. L'indice maximal est inférieur de 1 à la longueur de la matrice.

Lors de la lecture avec une plage numérique en dehors des limites de la matrice, le Serveur FDI® doit renvoyer un résultat partiel si certains éléments existent au sein de la plage. Le Serveur FDI® doit renvoyer l'élément Bad_OutOfRange lorsqu'aucun élément n'existe dans la plage.

Lors de l'écriture d'une valeur, la plage numérique doit être comprise dans la matrice.

Une plage numérique peut aussi être utilisée pour spécifier des sous-chaînes pour les valeurs ByteString et String.

5.1.9.3.7 Range

Cette structure définit la structure de plage nécessaire pour l'Attribut EURange. Elle est définie dans le Tableau 43.

Tableau 43 – Structure du Type de Données Range

Nom	Type	Description
Range	structure	"low" et "high" peuvent contenir n'importe quel type de données adéquat pour le type de données de l'Attribut Variable Value.
low	Variant	Valeur la plus faible de la plage.
high	Variant	Valeur la plus élevée de la plage.

5.1.9.3.8 EUInformation

Cette structure contient les informations relatives aux EngineeringUnits (Unités techniques). Ses éléments sont définis dans le Tableau 44.

Tableau 44 – Structure du Type de Données EUInformation

Nom	Type	Description
EUInformation	structure	—
unitId	UInt32	Identifiant pour l'évaluation programmée. 0 est utilisé si un unitId n'est pas disponible.
displayName	LocalizedText	Le displayName de l'unité technique est généralement l'abréviation de l'unité technique, par exemple "h" pour heure ou "m/s" pour mètre par seconde.
description	LocalizedText	Contient le nom complet de l'unité technique, par exemple "heure" ou "mètre par seconde". Un champ textuel vide indique qu'aucune description n'est disponible.

5.1.9.3.9 EnumValueType

Ce Type de Données Structuré est utilisé pour représenter une Énumération lisible par l'homme. Ses éléments sont décrits dans le Tableau 45. Lorsque ce type est utilisé dans une matrice qui fournit des représentations d'une énumération lisible par l'homme, chaque valeur d'une IntegerRepresentation est unique dans cette matrice.

Tableau 45 – Définition d'EnumValueType

Nom	Type	Description
EnumValueType	structure	—
value	Int64	Représentation en nombres entiers d'une Énumération.
displayName	LocalizedText	Représentation lisible par l'homme de la représentation en nombres entiers d'une Énumération.
description	LocalizedText	Description localisée d'une valeur d'énumération. Ce champ peut contenir une Chaîne vide lorsqu'aucune description n'est disponible.

5.1.9.4 Variant

Une Variante est une réunion de tous les types de données. Les Variantes peuvent également contenir des matrices de ces différents types.

Les Variantes peuvent être vides. Une Variante vide est décrite comme ayant une valeur Nulle. Une valeur Nulle dans une Variante n'équivaut pas à une Chaîne Nulle.

Les Variantes peuvent contenir des matrices de Variantes, mais ne peuvent pas contenir directement une autre Variante.

5.2 Services d'Hébergement

5.2.1 Généralités

Les Services d'Hébergement sont fournis par le Client FDI® et sont utilisés par l'UIP. Les Services d'Hébergement comprennent les services relatifs à l'environnement du Client FDI®, qui permettent à l'UIP d'obtenir des informations sur l'environnement. Les Services d'Hébergement comprennent également des services pour lancer d'autres UIP ainsi que pour afficher un retour d'information.

5.2.2 Services

5.2.2.1 Généralités

L'accès programmé aux services peut être synchrone ou asynchrone.

5.2.2.2 GetClientTechnologyVersion

5.2.2.2.1 Description

Ce service renvoie la Version de Technologie du Client FDI® qui héberge l'UIP.

5.2.2.2.2 Paramètres

Le Tableau 46 définit les paramètres du service.

Tableau 46 – Paramètres du Service GetClientTechnologyVersion

Nom	Type	Description
Demande		
Réponse		
version	String	Version de Technologie FDI® prise en charge par le Client FDI®. Le format de la valeur est xx.yy.zz, comme cela est défini dans l'IEC 62769-4.

5.2.2.3 Service OpenUserInterface

5.2.2.3.1 Description

Ce service est utilisé par un UIP pour demander au client FDI® d'ouvrir un autre UIP. L'UIP est ouvert dans une fenêtre modale ou non modale de la manière suivante:

- Les UIP sont toujours appelés dans une fenêtre modale si l'UIP appelant est exécuté dans une fenêtre modale ou s'il est de type dialogue.
- Les UIP sont appelés dans une fenêtre non modale s'ils sont de type fenêtre, mais également si l'UIP appelant est exécuté en mode non modal.

NOTE Un mapping de technologies pourrait fournir la capacité de démarrer un UIP modal de manière explicite, même si le type est défini différemment.

Si l'UIP est déjà ouvert, ce service doit afficher la fenêtre respective au premier plan.

5.2.2.3.2 Paramètres

Le Tableau 47 définit les paramètres du service.

Tableau 47 – Paramètres du Service OpenUserInterface

Nom	Type	Description
Demande		
uiplD	String	Identification de l'UIP à ouvrir. Cette chaîne est un UUID qui définit un Nœud dans le Modèle d'information. La valeur de cet UUID est définie dans le Paquetage FDI® correspondant à l'UIP à ouvrir (voir l'IEC 62769-4).
Réponse		
uiHandle	UInt32	ID attribué par le Client FDI® pour l'UIP ouvert. Dans le cas d'un UIP modal ouvert, la valeur est nulle.

5.2.2.3.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4.

5.2.2.4 Service CloseUserInterface

5.2.2.4.1 Description

Ce service est utilisé par un UIP pour se fermer lui-même ou fermer d'autres UIP. L'UIP appelé doit terminer toutes les fonctions en attente ou en cours d'exécution qui sont encore ouvertes.

5.2.2.4.2 Paramètres

Le Tableau 48 définit les paramètres du service.

Tableau 48 – Paramètres du Service CloseUserInterface

Nom	Type	Description
Demande		
uiHandle	String	Identification de l'UIP à fermer. L'uiHandle est renvoyé par le service OpenUserInterface. Ce paramètre peut être nul si l'UIP souhaite se fermer lui-même.
Réponse		

5.2.2.4.3 Résultats de service

Il n'y a pas de résultat de service autre que les codes communs spécifiés en 5.1.4.4. Si l'UIP refuse la demande Close, il convient que Bad_RequestCancelled soit renvoyé.

5.2.2.5 Service LogAuditTrailMessage

5.2.2.5.1 Description

Ce service est utilisé par un UIP afin d'enregistrer un message de piste de vérification.

5.2.2.5.2 Paramètres

Le Tableau 49 définit les paramètres du service.

Tableau 49 – Paramètres du Service LogAuditTrailMessage

Nom	Type	Description
Demande		
message	String	Le message à enregistrer dans la piste de vérification.
Réponse		Aucune.

5.2.2.6 Service SaveUserSettings

5.2.2.6.1 Description

Ce service est utilisé par un UIP pour donner au client FDI® l'instruction de sauvegarder les paramètres utilisateur fournis. Les paramètres sont stockés par type d'UIP dans un magasin persistant contrôlé par le Client FDI®. Tous les paramètres utilisateur précédemment sauvegardés de ce type d'UIP sont remplacés. Le Client FDI® ne doit pas modifier les paramètres utilisateur demandés dans le stockage.

Les paramètres utilisateur incluent généralement des informations relatives à la structure de l'affichage ou d'autres préférences utilisateur. Ils ne sont pas conçus pour être utilisés pour des données spécifiques à une instance.

Les modifications partielles des paramètres utilisateur ne sont pas prises en charge. Un UIP doit charger tous les paramètres, les mettre à jour et sauvegarder l'ensemble complet.

La structure et le contenu de la chaîne paramètre utilisateur sont spécifiques au type d'UIP. Par exemple, un UIP peut utiliser des paires nom-valeur. Les problèmes de version de ces données sont sous la responsabilité de l'UIP. Différents UIP du même type peuvent remplacer leurs paramètres respectifs.

La structure des données est entièrement sous le contrôle de l'UIP. Par ailleurs, les problèmes de gestion des versions liés aux différentes versions d'UIP relèvent donc de la responsabilité de l'UIP.

5.2.2.6.2 Paramètres

Le Tableau 50 définit les paramètres du service.

Tableau 50 – Paramètres du Service SaveUserSettings

Nom	Type	Description
Demande		
userSetting[]	String	Liste des paramètres utilisateur. Le contenu de ces chaînes est spécifique au type d'UIP.
Réponse		

5.2.2.7 Service LoadUserSettings

5.2.2.7.1 Description

Ce service est utilisé par un UIP pour donner au client FDI® l'instruction de récupérer les paramètres utilisateur précédemment sauvegardés.

5.2.2.7.2 Paramètres

Le Tableau 51 définit les paramètres du service.

Tableau 51 – Paramètres du Service LoadUserSettings

Nom	Type	Description
Demande		
Réponse		
userSetting[]	String	Liste des paramètres utilisateur. Le contenu des chaînes est spécifique à l'UIP.

5.2.2.8 Service Trace

5.2.2.8.1 Description

Ce service doit être utilisé par l'UIP afin de fournir au Client FDI® les informations relatives aux événements internes à l'UIP. Les messages de trace sont généralement utilisés pour la recherche de panne. L'UIP doit appeler ce service en fonction des paramètres du niveau de traçage spécifiés dans le Service SetTraceLevel de l'UIP (voir 6.1.1.4).

5.2.2.8.2 Paramètres

Le Tableau 52 définit les paramètres du service.

Tableau 52 – Paramètres du Service Trace

Nom	Type	Description
Demande		
eventType	TraceLevel	Sévérité du message de trace. L'une des valeurs qui spécifient la sévérité des données de traçage (voir 6.1.2).
classification	String	Classification spécifique à l'UIP du message de trace.
message	String	Message de trace. La langue du message de trace doit être l'anglais. Le texte intégré peut être localisé.
Réponse		

5.2.2.9 Service ShowMessageBox

5.2.2.9.1 Description

Ce service ouvre une boîte de dialogue et attend que l'utilisateur presse l'un des boutons indiqués. Une boîte de dialogue ouverte doit bloquer toutes les activités liées à l'instance d'appareil. Il est recommandé de ne pas modifier les interactions simultanées avec d'autres instances d'Appareil.

5.2.2.9.2 Paramètres

Le Tableau 53 définit les paramètres du service.

Tableau 53 – Paramètres du Service ShowMessageBox

Nom	Type	Description
Demande		
acknStyle	AcknStyle	Voir Tableau 72.
message	String	Message à afficher pour l'utilisateur.
caption	String	Légende de la barre de titre à afficher.
buttonSet	ButtonSet	Voir Tableau 71.
defaultResult	Integer	Identificateur du bouton par défaut; voir Tableau 70.
Réponse		
buttonSelected	Integer	Identificateur du bouton sélectionné; voir Tableau 70.

5.2.2.10 Service ShowProgressBar

5.2.2.10.1 Description

Ce service ouvre une barre de progression. La barre de progression reste sur l'interface utilisateur après que le service a renvoyé un résultat. Les informations affichées peuvent être mises à jour avec le service UpdateShowProgressBar (voir 5.2.2.11). La barre de progression peut être fermée avec le service EndShowProgressBar (voir 5.2.2.12).

Une seule barre de progression par UIP peut apparaître à la fois.

5.2.2.10.2 Paramètres

Le Tableau 54 définit les paramètres du service.

Tableau 54 – Paramètres du Service ShowProgressBar

Nom	Type	Description
Demande		
message	String	Message à afficher pour l'utilisateur.
callback	CancelCallback	Service appelé par le Client afin d'informer l'UIP que l'utilisateur a annulé l'opération. Voir 5.2.2.13. Le service CancelCallback est mis en œuvre et fourni par l'UIP.
Réponse		

5.2.2.11 Service UpdateShowProgressBar

5.2.2.11.1 Description

Ce service met à jour une barre de progression déjà ouverte.

5.2.2.11.2 Paramètres

Le Tableau 55 définit les paramètres du service.

NOTE Un appel de ce service est rejeté si le service ShowProgressBar n'a pas été appelé auparavant.

Tableau 55 – Paramètres du Service UpdateShowProgressBar

Nom	Type	Description
Demande		
message	String	Message mis à jour à afficher pour l'utilisateur.
percentage	Integer	Pourcentage mis à jour de la progression à afficher pour l'utilisateur.
Réponse		

5.2.2.12 Service EndShowProgressBar

5.2.2.12.1 Description

Ce service ferme une barre de progression ouverte. Ce service attend que l'utilisateur presse un bouton ou renvoie immédiatement un résultat si l'utilisateur a déjà pressé le bouton.

5.2.2.12.2 Paramètres

Le Tableau 56 définit les paramètres du service.

Tableau 56 – Paramètres du Service EndShowProgressBar

Nom	Type	Description
Demande		
message	String	Message mis à jour à afficher pour l'utilisateur.
percentage	Integer	Pourcentage mis à jour de la progression à afficher pour l'utilisateur.
Réponse		

5.2.2.13 Service CancelCallback

5.2.2.13.1 Description

Avec ce service, le Client informe l'UIP que l'Utilisateur a demandé l'annulation de l'opération. Ce service est mis en œuvre et fourni par l'UIP lors de l'appel du service ShowProgressBar. L'UIP est chargé de fermer l'élément ProgressBar.

En raison de la nature asynchrone des rappels, le service CancelCallback peut être appelé, même lorsque l'UIP a appelé le service EndShowProgressBar.

5.2.2.13.2 Paramètres

Il n'y a pas de paramètre spécifique pour le service.

5.2.2.14 Service StandardUIActionItemsChangeCallback

5.2.2.14.1 Description

Ce service est utilisé par l'UIP afin d'informer le Client FDI® des modifications de l'état des éléments d'action UI normalisés (activé/désactivé). Voir 6.1.2.2 pour des éléments d'action UI normalisée.

5.2.2.14.2 Paramètres

Le Tableau 57 définit les paramètres du service.

Tableau 57 – Paramètres du Service StandardUIActionItemsChange

Nom	Type	Description
Demande		
Réponse		
StandardUIActionItems[]	StandardUIActionItem	Liste mise à jour des Actions Normalisées fournies par l'UIP.

5.2.2.15 Service SpecificUIActionItemsChangeCallback

5.2.2.15.1 Description

Ce service est utilisé par l'UIP afin d'informer le Client FDI® des modifications des éléments d'action UI spécifiques à cet UIP. L'UIP doit utiliser ce rappel pour chaque ajout ou retrait d'éléments d'action ou à chaque changement de l'état d'un élément d'action (c'est-à-dire, activé/désactivé). Voir 6.1.2.4 pour des actions UI spécifiques.

5.2.2.15.2 Paramètres

Le Tableau 58 définit les paramètres du service.

Tableau 58 – Paramètres du Service SpecificUIActionItemsChange

Nom	Type	Description
Demande		
Réponse		
SpecificUIActionItems[]	SpecificUIActionItem	Liste mise à jour des éléments d'action UI spécifiques à l'UIP.

5.2.2.16 Service InitExportFile

5.2.2.16.1 Description

Ce service est utilisé par l'UIP pour sauvegarder un fichier avec les droits d'accès du Client FDI®. Le Client FDI® ouvre une boîte de dialogue Fichier pour la saisie du chemin d'accès et du nom du fichier. Le chemin d'accès et le nom de fichier choisis sont renvoyés avec un descripteur. Le descripteur doit être utilisé dans les services WriteExportFile et FinishExportFile pour transférer le contenu du fichier vers le Client FDI® et terminer ou annuler l'opération.

5.2.2.16.2 Paramètres

Le Tableau 59 définit les paramètres du service.

Tableau 59 – Paramètres du Service InitExportFile

Nom	Type	Description
Demande		
SuggestedFileName	String	Nom du fichier à sauvegarder. Peut être modifié par l'utilisateur. Le SuggestedFileName (nom de fichier suggéré) n'est pas complètement qualifié, et l'hôte gère le répertoire par défaut dans lequel il convient de stocker le fichier. L'utilisateur peut modifier le nom et le chemin d'accès. Cette action est renvoyée en tant que FullyQualifiedFileName.
Filter	String	Filter (Filtre) contient une liste d'extensions de fichiers et de types de fichiers possibles. L'utilisateur peut choisir l'une des options pendant l'exportation. Le filtre choisi est renvoyé par l'intermédiaire de SelectedFilterIndex. Pour chaque extension de fichier et type de fichier, la chaîne de filtre contient une description, suivie d'une barre verticale () et du modèle du filtre. Les chaînes pour les différentes options de filtre sont séparées par la barre verticale. Par exemple: "Document Word (*.docx) *.docx PDF (*.pdf) *.pdf"
SuggestedFilterIndex	Integer	Index vers le filtre choisi comme valeur par défaut.
Réponse		
FullyQualifiedFileName	String	Nom de fichier complètement qualifié lors du stockage du fichier.
SelectedFilterIndex	Integer	Filtre sélectionné
FileHandle	<dépendant de la technologie>	Descripteur utilisé dans WriteExportFile et FinishExportFile pour identifier l'opération globale.

5.2.2.17 Service WriteExportFile

5.2.2.17.1 Description

Ce service est utilisé pour transférer des données vers le fichier à exporter. Les UIP appellent généralement ce service plusieurs fois pour fournir l'intégralité du contenu du fichier.

5.2.2.17.2 Paramètres

Le Tableau 60 définit les paramètres du service.

Tableau 60 – Paramètres du Service WriteExportFile

Nom	Type	Description
Demande		
FileHandle	<dépendant de la technologie>	Descripteur du fichier renvoyé dans le service InitExportFile.
Data	Byte[]	Matrice d'octets qui contient des données à écrire dans le fichier. Le fichier créé avec InitExportFile est vide et le premier appel WriteExportFile pour le fichier commence à remplir le fichier depuis le début. Tous les appels supplémentaires ajoutent les données à la fin du fichier. L'écriture d'un tableau d'Octets vide renvoie un code de résultat Good sans effet sur le fichier.
Réponse		

5.2.2.18 Service FinishExportFile

5.2.2.18.1 Description

Ce service finalise l'opération d'exportation du fichier. Il annule ou finalise l'exportation du fichier.

5.2.2.18.2 Paramètres

Le Tableau 61 définit les paramètres du service.

Tableau 61 – Paramètres du Service FinishExportFile

Nom	Type	Description
Demande		
FileHandle	<dépendant de la technologie>	Descripteur du fichier renvoyé dans le service InitExportFile. Après l'appel de ce service, le FileHandle devient invalide et ne doit plus être utilisé.
DoSave	Boolean	Détermine s'il convient de finaliser l'exportation du fichier, auquel cas le fichier est stocké sur un disque par le Client FDI®, ou s'il convient d'abandonner l'exportation.
Réponse		

5.2.2.19 Service InitImportFile

5.2.2.19.1 Description

Ce service est utilisé par l'UIP pour charger un fichier avec les droits d'accès du Client FDI®. Le Client FDI® ouvre une boîte de dialogue Fichier pour la sélection du chemin d'accès et du nom du fichier. Le chemin d'accès et le nom de fichier choisis sont renvoyés avec un descripteur. Le descripteur doit être utilisé dans les services ReadImportFile et FinishImportFile pour transférer le contenu du fichier vers l'UIP et terminer ou annuler l'opération.

5.2.2.19.2 Paramètres

Le Tableau 62 définit les paramètres du service.

Tableau 62 – Paramètres du Service InitImportFile

Nom	Type	Description
Demande		
SuggestedFileName	String	Nom du fichier à charger. Peut être modifié par l'utilisateur. Le SuggestedFileName n'est pas complètement qualifié, et l'hôte gère le répertoire par défaut dans lequel il convient de charger le fichier. L'utilisateur peut modifier le nom et le chemin d'accès. Cette action est renvoyée en tant que FullyQualifiedFileName.
Filter	String	Filter (Filtre) contient une liste d'extensions de fichiers et de types de fichiers possibles. L'utilisateur peut choisir l'une des options pendant l'exportation. Le filtre choisi est renvoyé par l'intermédiaire de SelectedFilterIndex. Pour chaque extension de fichier et type de fichier, la chaîne de filtre contient une description, suivie d'une barre verticale () et du modèle du filtre. Les chaînes pour les différentes options de filtre sont séparées par la barre verticale. Par exemple: "Document Word (*.docx) *.docx PDF (*.pdf) *.pdf"
SuggestedFilterIndex	Integer	Index vers le filtre choisi comme valeur par défaut.
Réponse		
FullyQualifiedFileName	String	Nom de fichier complètement qualifié à partir duquel le fichier a été chargé.
SelectedFilterIndex	Integer	Filtre sélectionné.
FileHandle	<dépendant de la technologie>	Descripteur utilisé dans WriteExportFile et FinishExportFile pour identifier l'opération globale.

5.2.2.20 Service ReadImportFile

5.2.2.20.1 Description

Ce service est utilisé pour transférer des données à partir du fichier à importer. Il est généralement nécessaire que les UIP appellent ce service plusieurs fois pour obtenir l'intégralité du contenu du fichier.

5.2.2.20.2 Paramètres

Le Tableau 63 définit les paramètres du service.

Tableau 63 – Paramètres du Service ReadImportFile

Nom	Type	Description
Demande		
FileHandle	<dépendant de la technologie>	Descripteur du fichier renvoyé dans le service InitExportFile.
MaxLength	Integer	Définit la longueur, en octets, qu'il convient de renvoyer dans Data. Si la fin du fichier est atteinte, toutes les données jusqu'à la fin du fichier sont renvoyées. Il est admis que le Client FDI® renvoie une quantité de données inférieure à la longueur spécifiée. Seules les valeurs positives sont admises.
Réponse		
Data	Byte[]	Contient les données renvoyées du fichier. Si la matrice d'octets est vide, cela signifie que la fin du fichier est atteinte.

5.2.2.21 Service FinishImportFile

5.2.2.21.1 Description

Ce service finalise l'opération d'importation du fichier. Les UIP peuvent appeler ce service avant d'atteindre la fin du fichier afin d'annuler l'opération d'importation.

5.2.2.21.2 Paramètres

Le Tableau 64 définit les paramètres du service.

Tableau 64 – Paramètres du Service FinishImportFile

Nom	Type	Description
Demande		
FileHandle	<dépendant de la technologie>	Descripteur du fichier renvoyé dans le service InitImportFile. Après l'appel de ce service, le FileHandle devient invalide et ne doit plus être utilisé.
Réponse		

5.2.2.22 Service InitOpenDefaultApplication

5.2.2.22.1 Description

Ce service est utilisé par l'UIP pour conseiller au Client FDI® d'ouvrir un fichier avec son application par défaut enregistrée (par exemple, PDF, Excel). Le Client FDI® peut limiter les applications qu'il est autorisé à utiliser. L'opération est répartie en trois services. Tout d'abord, il est nécessaire que l'UIP appelle InitOpenDefaultApplication, puis qu'il appelle WriteOpenDefaultApplication potentiellement plusieurs fois pour transférer les données du fichier au Client FDI®, et enfin qu'il appelle FinishOpenDefaultApplication pour annuler l'opération ou indiquer que le fichier complet a été transféré et que le Client FDI® doit ouvrir l'application par défaut pour celui-ci. La manière dont le Client FDI® gère le fichier est spécifique à l'hôte, par exemple dans un dossier temporaire. Les UIP ne doivent pas s'attendre à ce que le Client FDI® stocke le fichier transféré de manière permanente.

5.2.2.22.2 Paramètres

Le Tableau 65 définit les paramètres du service.

Tableau 65 – Paramètres du Service InitOpenDefaultApplication

Nom	Type	Description
Demande		
SuggestedFileName	String	Nom du fichier à sauvegarder. Peut être modifié par le Client FDI®. Le SuggestedFileName n'est pas complètement qualifié, et Client FDI® est responsable de la gestion du fichier.
Réponse		
FileHandle	<dépendant de la technologie>	Descripteur utilisé dans WriteOpenDefaultApplication et FinishOpenDefaultApplication pour identifier l'opération globale.

5.2.2.23 Service WriteOpenDefaultApplication

5.2.2.23.1 Description

Ce service est utilisé pour transférer des données sur le fichier à ouvrir par les applications par défaut. Les UIP appellent généralement ce service plusieurs fois pour fournir l'intégralité du contenu du fichier.

5.2.2.23.2 Paramètres

Le Tableau 66 définit les paramètres du service.

Tableau 66 – Paramètres du Service WriteOpenDefaultApplication

Nom	Type	Description
Demande		
FileHandle	<dépendant de la technologie>	Descripteur du fichier renvoyé dans le service InitOpenDefaultApplication.
Data	Byte[]	Matrice d'octets qui contient des données à écrire dans le fichier. Le fichier créé avec InitOpenDefaultApplication est vide et le premier appel WriteOpenDefaultApplication pour le fichier commence à remplir le fichier depuis le début. Tous les appels supplémentaires ajoutent les données à la fin du fichier. L'écriture d'un tableau d'Octets vide renvoie un code de résultat Good sans effet sur le fichier.
Réponse		

5.2.2.24 Service FinishOpenDefaultApplication

5.2.2.24.1 Description

Ce service finalise l'opération d'ouverture de l'application par défaut. Il annule ou finalise l'opération lorsque le contenu du fichier à ouvrir est entièrement écrit à l'aide du service WriteOpenDefaultApplication.

5.2.2.24.2 Paramètres

Le Tableau 67 définit les paramètres du service.

Tableau 67 – Paramètres du Service FinishOpenDefaultApplication

Nom	Type	Description
Demande		
FileHandle	<dépendant de la technologie>	Descripteur du fichier renvoyé dans le service InitOpenDefaultApplication. Après l'appel de ce service, le FileHandle devient invalide et ne doit plus être utilisé.
DoOpen	Boolean	Définit si l'application par défaut doit être ouverte par le Client FDI® ou s'il convient d'abandonner l'opération.
Réponse		

5.2.2.25 Service GetHostingProperties

5.2.2.25.1 Description

Ce service est utilisé par l'UIP pour obtenir des propriétés d'environnement d'hébergement sous forme de liste de paires clé/valeur. Le contenu de cette liste doit être constant pendant le cycle de vie de l'UIP. Pour une propriété obligatoire, la clé doit exister à tout moment. Une propriété non obligatoire peut être complètement manquante (aucune clé). Pour toute clé existante, il existe toujours une valeur valide qui doit pouvoir être utilisée comme cela est défini dans la description.

5.2.2.25.2 Paramètres

Le Tableau 68 définit les paramètres du service.

Tableau 68 – Paramètres du Service GetHostingProperties

Nom	Type	Description
Demande		
Réponse		
PropertyList	<dépendant de la technologie>	Liste des paires de chaînes (clé, valeur)

5.2.2.25.3 Paires Clé/Valeur

Le Tableau 69 définit les paramètres du service.

Tableau 69 – Paires Clé/Valeur GetHostingProperties

Clé	Valeur	Obligatoire	Description
LocalClientDataPath	<Chemin d'accès au dossier complètement qualifié>	Non	Le Client FDI® fournit un chemin d'accès complètement qualifié vers un dossier à partir duquel l'UIP a la permission directe: • d'ouvrir des fichiers; • de sauvegarder des fichiers; • d'ajouter des sous-dossiers; • de supprimer des sous-dossiers. Le dossier doit être persistant et doit être accessible par l'UIP. Tous les UIP doivent avoir le même LocalClientDataPath à partir du Client FDI®, ce qui permet à différents UIP ou à différentes instances de l'UIP de partager des données. Il est nécessaire que les développeurs d'UIP le sachent. Un fichier peut être bloqué par le système d'exploitation, car il est ouvert par un autre UIP, et d'autres UIP peuvent créer, manipuler, ou supprimer des fichiers et des dossiers par l'intermédiaire du LocalClientDataPath. Il est recommandé de créer un sous-dossier pour un UIP et de gérer toutes les données de l'UIP dans ce sous-dossier. Les installations hôtes peuvent choisir un dossier réseau partagé par tous les Clients FDI® pour gérer les données persistantes. Cependant, le LocalClientDataPath peut également être un dossier local du Client FDI®. Par conséquent, les données stockées peuvent uniquement être accessibles sur un Client FDI® spécifique et différent d'un autre Client FDI® du même hôte FDI®. Il est recommandé de stocker les données spécifiques à un appareil dans le modèle d'information de l'appareil, où elles sont synchronisées entre des Clients FDI®. Les paramètres utilisateur doivent être gérés avec les services LoadUserSettings et SaveUserSettings, et non pas dans le système de fichiers, afin de fournir les mêmes réglages entre les différents Clients FDI® du même hôte FDI®. Ces informations peuvent n'être disponibles que pour certains mappings de technologies UIP.
Context	{Online, Offline}	Oui	Définit le contexte (en ligne ou hors-ligne) dans lequel l'UIP est appelé.
currentCountry	<dépendant de la technologie>	Oui	Informations de description du pays actuel qui doivent être examinées par l'UIP à des fins de globalisation internes. Le type de données de la valeur dépend de la technologie.
currentCulture	<dépendant de la technologie>	Oui	Informations de description de la culture actuelle qui doivent être examinées par l'UIP à des fins de localisation internes. Le type de données de la valeur dépend de la technologie.

5.2.3 Définitions du type Paramètre

5.2.3.1 Définition de DefaultResult

Les composants de ce paramètre sont définis dans le Tableau 70.

Tableau 70 – Définition de DefaultResult

Nom	Type	Description
DefaultResult	Integer	Définition d'un bouton dans une boîte de dialogue. Utilisé pour spécifier le bouton par défaut et le bouton sélectionné par l'utilisateur. Cette valeur est une énumération avec l'une des valeurs suivantes: BUTTONNONE_0 BUTTONOK_1 BUTTONCANCEL_2 BUTTONYES_3 BUTTONNO_4

5.2.3.2 ButtonSet

Les composants de ce paramètre sont définis dans le Tableau 71.

Tableau 71 – Définition de CommunicationGatewayType

Nom	Type	Description
ButtonSet	Integer	Définition des boutons dans une boîte de dialogue ou de la barre de progression affichée pour l'utilisateur. Cette valeur est une énumération avec l'une des valeurs suivantes: BUTTONSETOK_0 Seul le bouton OK est affiché. BUTTONSETOKCANCEL_1 Les boutons Ok et Cancel (annuler) sont affichés. BUTTONSETYESNOCANCEL_2 Les boutons Yes, No et Cancel sont affichés. BUTTONSETYESNO_3 Les boutons Yes et No sont affichés.

5.2.3.3 AcknStyle

Les composants de ce paramètre sont définis dans le Tableau 72.

Tableau 72 – Définition de AcknStyle

Nom	Type	Description
AcknStyle	Integer	Style de la boîte de dialogue ou de la barre de progression affichée pour l'utilisateur. Par exemple, ce paramètre peut influencer l'icône de la boîte de dialogue. Cette valeur est une énumération avec l'une des valeurs suivantes: ACKNSTYLEINFO_0 Type information ACKNSTYLEWARNING_1 Type avertissement ACKNSTYLEERROR_2 Type erreur

6 UIP

6.1 Services d'UIP

6.1.1 Services

6.1.1.1 Service Activate

6.1.1.1.1 Description

Ce service est utilisé par le Client FDI® afin d'initialiser un UIP (voir 6.1.2). Le Client FDI® doit appeler ce service après la création d'une instance d'UIP. Les règles suivantes définissent le type de fenêtre:

- Une fenêtre modale est utilisée si l'UIP est de type dialogue ou si le parent appelé (UID ou UIP) est modal.
- Une fenêtre non modale est utilisée si l'UIP est de type fenêtre, mais également si le parent appelé est exécuté dans un mode non modal.

6.1.1.1.2 Paramètres

Le Tableau 73 définit les paramètres du service.

Tableau 73 – Paramètres du Service Activate

Nom	Type	Description
Demande		
hostingInterface	Interface	Client FDI® qui héberge l'interface à utiliser par l'UIP (voir 5.2).
deviceAccessInterface	Interface	Interface d'accès à l'appareil du Client FDI® à utiliser par l'UIP (voir 5.1).
context	UInteger	Spécifie le contexte dans lequel l'UIP est activé: 0_ONLINE 1_OFFLINE Le Client doit obtenir le contexte à partir du FunctionalGroup dans lequel cet UIP a été extrait; c'est-à-dire, si le FunctionalGroup fait partie de la représentation d'appareil Hors-ligne ou En ligne. Si un UIP est appelé par un autre UIP avec le service OpenUserInterface, le contexte est hérité.
localeSetting	<dépendant de la technologie>	La description d'un paramètre régional est constituée au minimum d'un identifiant de langue et d'un pays. Le format de la valeur d'une propriété dépend de la technologie.
Réponse		

Le localeSetting (Réglage du paramètre régional) ne doit pas dépendre des paramètres du système d'exploitation. Les paramètres du système d'exploitation peuvent être utilisés par défaut, mais ils doivent être modifiables par l'utilisateur.

L'identifiant de langue doit indiquer la langue des informations textuelles localisées.

Le paramètre Pays doit être utilisé pour appliquer la réglementation spécifique aux différents pays, comme les unités techniques admises. Pour ce faire, l'UIP modifie l'Attribut EngineeringUnit des Nœuds de Variable associés, afin de correspondre au pays spécifié. Le Serveur FDI® est alors responsable du reformatage des valeurs en conséquence.

6.1.1.2 Service Deactivate (Désactiver)

6.1.1.2.1 Description

Ce service est utilisé par le Client FDI® afin de désactiver un UIP. L'UIP doit libérer toutes les références à d'autres composants et terminer toutes les fonctions en attente ou en cours d'exécution, y compris les UIP encore ouverts.

L'UIP peut indiquer qu'il n'est pas prêt à être désactivé. Ce service doit être utilisé si l'annulation de fonctions en attente ou en cours d'exécution implique des effets secondaires importants.

6.1.1.2.2 Paramètres

Le Tableau 74 définit les paramètres du service.

Tableau 74 – Paramètres du Service Deactivate

Nom	Type	Description
Demande		
Réponse		
deactivateCancelled	Boolean	Indication qui permet de savoir si l'UIP a refusé la demande Deactivate. deactivateCancelled = "true" indique que l'UIP a refusé la demande Deactivate. deactivateCancelled = "false" indique que l'UIP a accepté la demande Deactivate.

6.1.1.3 Service SetSystemLabel

6.1.1.3.1 Description

Ce service est utilisé par le Client FDI® afin de déterminer un identifiant lisible par l'homme de l'instance d'UIP au sein du Client FDI®.

L'étiquette doit être utilisée pour les éléments d'interface utilisateur affichés et gérés par l'UIP (par exemple, boîte de dialogue) et assure que l'utilisateur peut identifier de manière unique l'Appareil vers lequel est dirigé l'élément d'interface utilisateur. L'UIP peut étendre cette étiquette avec des informations spécifiques, le cas échéant.

Le Client FDI® doit appeler ce service avant le service Activate (voir 6.1.1.1). S'il n'a pas été appelé, l'UIP doit utiliser la partie textuelle par défaut de l'Attribut Label de l'Appareil (voir 5.1.3.2).

6.1.1.3.2 Paramètres

Le Tableau 75 définit les paramètres du service.

Tableau 75 – Paramètres du Service SetSystemLabel

Nom	Type	Description
Demande		
systemLabel	String	Etiquette lisible par l'homme qui identifie l'UIP au sein du Client FDI®.
Réponse		Aucune.

6.1.1.4 Service SetTraceLevel

6.1.1.4.1 Description

Ce service est utilisé par le Client FDI® afin d'informer l'UIP des types de messages Trace qu'il convient d'enregistrer par l'intermédiaire du service Trace (voir 5.2.2.8). Plusieurs types peuvent être définis, par exemple: Critical (Critique), Error (Erreur) et Warning (Avertissement).

6.1.1.4.2 Paramètres

Le Tableau 76 définit les paramètres du service.

Tableau 76 – Paramètres du Service SetTraceLevel

Nom	Type	Description
Demande		
traceLevel	TraceLevel	Niveau de trace qui doit contrôler le type d'information (voir Tableau 81).
Réponse		

6.1.1.5 Service GetStandardUIActionItems

6.1.1.5.1 Description

Ce service est utilisé par le Client FDI® pour obtenir les actions UI normalisées disponibles dans l'UIP (par exemple: Fermer, Appliquer, Aide). Le Client FDI® fournit la représentation uniforme de ces actions UI normalisées, dans la partie UI du Client FDI®.

6.1.1.5.2 Paramètres

Le Tableau 77 définit les paramètres du service.

Tableau 77 – Paramètres du Service GetStandardUIActionItems

Nom	Type	Description
Demande		
Réponse		
StandardUIActionItems[]	StandardUIActionItem	Liste des Actions Normalisées fournies par l'UIP.

6.1.1.6 Service GetSpecificUIActionItems

6.1.1.6.1 Description

Ce service est utilisé par le Client FDI® pour obtenir les actions UI disponibles et spécifiques à l'UIP. Le Client FDI® fournit la représentation uniforme de ces actions UI, dans la partie UI du Client FDI®.

6.1.1.6.2 Paramètres

Le Tableau 78 définit les paramètres du service.

Tableau 78 – Paramètres du Service GetSpecificUIActionItems

Nom	Type	Description
Demande		
Réponse		
SpecificUIActionItems[]	SpecificUIActionItem	Liste d'actions UI spécifiques à l'UIP.

6.1.1.7 Service InvokeStandardUIAction

6.1.1.7.1 Description

Ce service est utilisé par le Client FDI® pour demander à l'UIP d'exécuter une action normalisée (par exemple: Fermer, Appliquer, Aide). Le Client FDI® transmet le type de l'action normalisée à exécuter dans ce service.

6.1.1.7.2 Paramètres

Le Tableau 79 définit les paramètres du service.

Tableau 79 – Paramètres du Service InvokeStandardUIAction

Nom	Type	Description
Demande		
actionId	StandardUIAction	L'une des valeurs définies en 6.1.2.2.
Réponse		

6.1.1.8 Service InvokeSpecificUIAction

6.1.1.8.1 Description

Ce service est utilisé par le Client FDI® pour demander à l'UIP d'exécuter une action UI spécifique à cet UIP. Le Client FDI® transmet l'identifiant de l'action à exécuter dans ce service.

6.1.1.8.2 Paramètres

Le Tableau 80 définit les paramètres du service.

Tableau 80 – Paramètres du Service InvokeSpecificUIAction

Nom	Type	Description
Demande		
actionId	UInteger	Il s'agit de l'identifiant de l'action UI spécifique à exécuter.
Réponse		

6.1.2 Définitions du type Paramètre

6.1.2.1 TraceLevel

TraceLevel est défini dans le Tableau 81.

Tableau 81 – Définition de TraceLevel

Nom	Type	Description												
TraceLevel	UInteger	Niveau de sévérité qui contrôle le type d'informations transmises au service Trace (voir 5.2.2.8). Cette valeur est une énumération de bits avec l'une des valeurs suivantes: <table><tr><td>NONE_0</td><td>Désactivation complète du traçage</td></tr><tr><td>CRITICAL_1</td><td>Erreur fatale ou échec total de l'application</td></tr><tr><td>ERROR_2</td><td>Erreur récupérable</td></tr><tr><td>WARNING_4</td><td>Erreur non critique</td></tr><tr><td>INFO_8</td><td>Message d'information</td></tr><tr><td>VERBOSE_16</td><td>Trace de débogage</td></tr></table>	NONE_0	Désactivation complète du traçage	CRITICAL_1	Erreur fatale ou échec total de l'application	ERROR_2	Erreur récupérable	WARNING_4	Erreur non critique	INFO_8	Message d'information	VERBOSE_16	Trace de débogage
NONE_0	Désactivation complète du traçage													
CRITICAL_1	Erreur fatale ou échec total de l'application													
ERROR_2	Erreur récupérable													
WARNING_4	Erreur non critique													
INFO_8	Message d'information													
VERBOSE_16	Trace de débogage													

6.1.2.2 StandardUIAction

Les actions normalisées sont définies afin de permettre l'uniformité de la présentation et du traitement. Elles sont demandées par le Client d'hébergement. Ces actions ne sont pas réputées être mappées en 1:1 avec les boutons de l'interface utilisateur. Il est préférable pour le Client d'afficher OK, CANCEL (Annuler) et APPLY (Appliquer).

En cliquant sur OK, CANCEL ou APPLY, l'utilisateur provoque l'appel de ces actions.

- OK déclenche un appel de l'action Apply suivi par un appel de l'action Close (Fermer).
- APPLY déclenche un appel de l'action Apply.
- CANCEL déclenche un appel vers l'action Close. Si des modifications sont toujours en suspens, l'UIP doit ouvrir une boîte de dialogue demandant la confirmation de l'utilisateur.

L'énumération StandardUIAction est définie dans le Tableau 82.

Tableau 82 – Définition de StandardUIAction

Nom	Type	Description
StandardUIAction	UInteger	Identifiant pour l'élément d'action UI normalisée avec l'une des valeurs suivantes: APPLY_0 Apply Standard UI Action (Appliquer l'action d'UI normalisée) - Avec cette action, le Client demande que les modifications de paramètres dans l'interface utilisateur soient appliquées à la source. CLOSE_1 Close Standard UI Action (Fermer l'Action UI Normalisée) - Avec cette action, le Client demande que l'UIP soit fermé. Si des modifications apportées aux paramètres n'ont pas été appliquées, l'UIP doit ouvrir une boîte de dialogue qui demande la confirmation de l'utilisateur. HELP_2 Help Standard UI Action (Aide de l'action d'UI normalisée) - Demande l'affichage d'une aide en ligne qui décrit la fonctionnalité de l'UIP (un document d'aide). Elle ne se substitue pas à une aide contextuelle, qui est généralement fournie par l'intermédiaire d'infobulles.

6.1.2.3 StandardUIActionItem

Les composants de ce paramètre sont définis dans le Tableau 83.

Tableau 83 – Définition de StandardUIActionItem

Nom	Type	Description
StandardUIActionItem	Structure	
actionId	StandardUIAction	Identifiant de l'élément d'action UI normalisée.
enabled	Boolean	Indique l'état de l'élément d'action. "true" indique que l'élément est activé. "false" indique que l'élément est désactivé.

6.1.2.4 SpecificUIActionItem

Les composants de ce paramètre sont définis dans le Tableau 84.

Tableau 84 – Définition de SpecificUIActionItem

Nom	Type	Description
SpecificUIActionItem	structure	
actionId	UInteger	Identifiant de l'élément d'action spécifique à l'UIP.
descriptor	String	Chaîne lisible par l'homme qui fournit des informations à propos de l'action.
enabled	Boolean	Indique l'état de l'élément d'Action. "true" indique que l'élément est activé. "false" indique que l'élément est désactivé.
label	String	Etiquette de l'élément action.


6.2 Règles d'instanciation de l'UIP

Chaque instance d'appareil peut contenir au maximum deux instances du même type d'UIP, une pour la version hors-ligne et une pour la version en ligne.

6.3 Diagramme d'états de l'UIP

6.3.1 Etats

La Figure 7 représente le diagramme d'états de l'UIP. Si les Services UIP (voir 6.1) déclenchent des modifications d'état, celles-ci sont mentionnées sur les côtés du diagramme d'états.

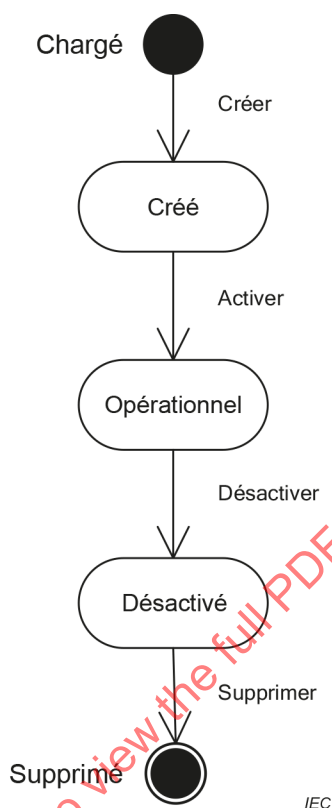

NOTE Create (Créer) et Dispose (Supprimer) sont des services qui dépendent de la technologie décrits dans la série IEC 62769-6. Create utilise la Propriété StartElementName (voir l'IEC 62769-5) de l'UIP afin de créer l'UIP approprié.

Figure 7 – Diagramme d'états de l'UIP

Les états de l'UIP sont spécifiés dans le Tableau 85.

Tableau 85 – Etats de l'UIP

Etat	Description
Created	Etat initial après la création de l'instance d'UIP par le Serveur FDI®.
Operational	Etat normal d'exécution.
Deactivated	Etat final avant qu'un UIP soit supprimé.

6.3.2 Transitions d'état

Les transitions d'états de l'UIP sont spécifiées dans le Tableau 86.

Tableau 86 – Transitions d'états de l'UIP

Etat source	Evénement	Etat de destination
Loaded	Le Client FDI® a créé l'instance UIP.	Created
Created	Le service Activate (Activer) a été appelé pour l'instance UIP.	Operational
Operational	Le service Deactivate (Désactiver) a été appelé avec succès pour l'instance UIP.	Deactivated
Deactivated	Le Client FDI® a supprimé l'instance UIP.	Disposed

6.4 Permissions et restrictions de l'UIP

6.4.1 Vue d'ensemble

Les permissions qu'un Client FDI® doit accorder à un UIP sont spécifiées dans le présent paragraphe.

Les permissions obligatoires doivent être accordées par le Client FDI® à l'UIP, puisque celles-ci sont accordées par le système d'exploitation. Cela ne signifie pas qu'un UIP dispose d'un accès libre au système complet de fichiers. Les permissions pour accéder au système de fichiers et aux imprimantes sont définies par la configuration système.

NOTE Le paramétrage des permissions pour les ressources du système d'exploitation d'une configuration système ne relève pas du domaine d'application du présent document.

Les permissions facultatives peuvent être limitées par rapport aux permissions données par la configuration système. Les moyens par lesquels un Client FDI® peut restreindre les permissions sont spécifiés dans la série IEC 62769-6.

Les UIP ne doivent jamais bloquer le Client, par exemple en effectuant des appels synchrones afin de potentiellement bloquer les ressources du système d'exploitation. Les fils de travail sont un moyen commun d'éviter les situations de blocage. Un UIP ne doit pas mettre en œuvre de contraintes de permissions d'accès fondées sur les rôles.

6.4.2 Accès au système local de fichiers

Un UIP doit avoir un accès en lecture et écriture à un répertoire spécifique sur l'ordinateur client. Ce répertoire UIP est partagé par tous les UIP. L'UIP utilise le service d'hébergement Service GetHostingProperties pour obtenir les informations (chemin d'accès) du répertoire auprès du Client FDI®. Le répertoire UIP doit être persistant, c'est-à-dire que ni l'hôte ni l'environnement d'hébergement ne doivent supprimer de fichier dans le répertoire UIP.

L'UIP peut créer/supprimer des sous-répertoires dans le répertoire UIP et doit organiser les données dans le répertoire selon sa propre responsabilité.

Les données stockées dans le répertoire UIP sont accessibles aux autres UIP et éventuellement aux autres utilisateurs. Par conséquent, s'il existe des données de nature sensible, les UIP doivent mettre en œuvre des mécanismes supplémentaires de protection (voir l'IEC 62443-3-3, SR 4.1, Confidentialité des informations). Il convient que les données lues à partir du répertoire UIP soient soumises à une validation d'entrée et soient éventuellement authentifiées. En outre, il convient de supprimer les données stockées dans le répertoire UIP lors de la fermeture de l'UIP (voir l'IEC 62443-3-3, SR 4.2). Les permissions système de fichiers peuvent être utilisées pour limiter l'accès aux fichiers par l'utilisateur de l'UIP.

6.4.3 Exportation/Importation de fichiers

En utilisant les services d'hébergement ExportFile/ImportFile, l'UIP peut respectivement sauvegarder des données vers un emplacement sélectionnable par l'utilisateur dans le système de fichiers du Client FDI® et importer des fichiers à partir d'un emplacement sélectionnable par l'utilisateur dans le système de fichiers du Client FDI®.

Les UIP doivent effectuer une validation du fichier importé pour s'assurer que le fichier est correct.

NOTE La sécurité du système local de fichiers et éventuellement des lecteurs réseau mappés ne relève pas du domaine d'application du présent document. Il est admis par hypothèse que l'administrateur de l'ordinateur sur lequel le Client FDI® est exécuté la gère.

6.4.4 Communication interprocessus (IPC)

Un processus UIP peut utiliser la communication interprocessus (IPC, *Inter-Process Communication*) pour communiquer avec d'autres processus exécutés sur le même ordinateur. Le processus UIP n'est pas autorisé à communiquer avec des processus sur d'autres ordinateurs, c'est-à-dire que l'UIP ne doit pas avoir d'accès au réseau. L'UIP n'est pas autorisé à démarrer de nouveaux processus. L'UIP peut en revanche interagir avec un processus en cours d'exécution qui fournit des services. La manière dont le processus est géré ne relève pas du domaine d'application du présent document.

Il convient que l'UIP ne parte pas de l'hypothèse selon laquelle l'authentification de l'autre processus est effectuée par le Client FDI®. Par conséquent, l'utilisation de l'IPC par l'UIP doit authentifier les processus homologues, le cas échéant.

Il convient qu'un UIP effectue des contrôles d'intégrité concernant les actions à effectuer par l'UIP, comme demandé par les autres processus.

Un UIP ne doit pas exposer de services à d'autres services.

NOTE La fiabilité des applications externes ne relève pas du domaine d'application du présent document. Des mécanismes comme la mise en liste verte d'applications, la signature du code et le contrôle d'accès peuvent être appliqués pour réduire le risque d'applications externes malveillantes (voir l'IEC 62443-3-3, SR 3.4).

6.4.5 Ouverture des fichiers de type MIME

En utilisant le service d'hébergement Service InitOpenDefaultApplication, un UIP peut ouvrir un fichier dans l'application enregistrée pour ce type MIME. L'application est démarrée par le Client FDI® et le fichier est ouvert. Le Client FDI® peut limiter les types MIME avec lesquels les UIP peuvent fonctionner.

NOTE La fiabilité des applications externes ne relève pas du domaine d'application de la présente spécification. Il incombe à l'utilisateur d'enregistrer l'application externe appropriée pour le traitement des types de fichiers MIME (voir l'IEC 62443-3-3 SR 3.4).

6.4.6 Accès aux ressources

L'UIP doit avoir accès aux imprimantes, qui sont disponibles dans l'environnement d'hébergement. L'accès à Internet ne doit pas être établi par un exécutable de l'UIP.

L'accès à un réseau local (LAN) ne doit pas être effectué par un exécutable de l'UIP.

6.5 Déploiement de l'UIP

6.5.1 Téléchargements de l'UIP à partir du Serveur FDI®

Les scénarios suivants exigent qu'un Client FDI® récupère un UIP.

- L'UID spécifie un UIP dans son Plugiciel d'élément XML (voir Annexe A).
- L'UIP ouvre un autre UIP avec le service OpenUserInterface (voir 5.2.2.3).

Dans tous les scénarios, le Client FDI® obtient un UipId comme identifiant pour l'UIP. Un UipId est un UUID (identificateur unique universel). Un UIP peut avoir plusieurs Variantes UIP, qui diffèrent dans leur plateforme et leur support d'exécution (voir l'IEC 62769-4).

NOTE Un UipId ne contient pas d'information de version. La résolution d'un UipId pour la version appropriée de l'UIP est effectuée par le Serveur FDI® à partir des informations du Paquetage FDI®.

Le même UipId peut être résolu pour différentes versions UIP pour différents Appareils. A différents moments dans le temps et pour le même Appareil, le même UipId peut être résolu de façon différente si une mise à jour de l'UIP s'est produite dans le Serveur FDI® entre-temps.

Avec l'UipId, le Client FDI® peut récupérer les informations suivantes à propos de toutes les Variantes UIP correspondantes (voir l'IEC 62769-5), depuis le Serveur FDI®.

- RuntimeId et PlatformId
- UIPVariantVersion
- FDITechnologyVersion

Pour ce faire, le Client FDI® appelle le service OPC UA TranslateBrowsePathToNodeIds avec la liste suivante de noms relatifs:

```
"UIPSet/<UipId>"
"UIPSet/<UipId >/RuntimeId"
"UIPSet/<UipId >/PlatformId"
"UIPSet/<UipId >/FDITechnologyVersion"
"UIPSet/<UipId >/Style"
"UIPSet/<UipId >/StartElementName"
"UIPSet/<UipId >/UIPVariantVersion"
```

Le Serveur FDI® renvoie des matrices de NodeIds pour chaque nom relatif. Le nombre d'entrées dans chaque matrice correspond au nombre de Variantes d'UIP pour l'UipId. Le Client FDI® peut ensuite lire les valeurs de propriété.

Si plusieurs Variantes d'UIP sont disponibles, le Client FDI® choisit la Variante d'UIP la plus appropriée en fonction de FDITechnologyVersion, RuntimeId et PlatformId.

Le Client FDI® peut stocker en mémoire cache les Variantes d'UIP déjà téléchargées à partir du Serveur FDI®. Si UipId, RuntimeId, PlatformId, FDITechnologyVersion et UIPVariantVersion qui proviennent de la Variante d'UIP choisie, correspondent à une Variante d'UIP parmi celles en mémoire cache, cette Variante d'UIP peut être utilisée et aucun téléchargement à partir du Serveur FDI® n'est exigé.

Lorsqu'aucune mémoire cache n'est gérée ou qu'aucune Variante d'UIP correspondante n'est trouvée dans la mémoire cache, le Client FDI® doit lire l'élément FDITechnologyVersion (voir l'IEC 62769-5) de la Variante d'UIP choisie. Le paramètre FDITechnologyVersion permet d'aider le Client FDI® à déterminer s'il peut prendre en charge l'exécution de l'UIP. Le Client FDI® doit exécuter un UIP de la même version majeure, indépendamment de la version mineure ou de révision.

Enfin, le Client FDI® peut télécharger l'UIP choisie à partir du Serveur FDI® en lisant la valeur de la Variante d'UIP.

Un Client FDI® peut mettre en œuvre une autre séquence que celle décrite ici. Par exemple, il peut d'abord vérifier FDITechnologyVersion afin de déterminer s'il peut exécuter l'UIP. FDITechnologyVersion est le même pour toutes les Variantes d'UIP d'une version spécifique d'un UIP.

Le Client FDI® peut mettre en œuvre des stratégies d'optimisation. Par exemple, il peut mettre en mémoire cache les versions des UIP (en plus des versions des Variantes d'UIP). Si la version de l'UIP est identique à la version de l'UIP en mémoire cache, il n'est pas nécessaire de lire les versions des Variantes d'UIP, car elles doivent être les mêmes pour une version d'UIP identique (voir l'IEC 62769-4).

6.5.2 Gestion de l'UIP sur le Client FDI®

L'installation de l'UIP est effectuée par copie de fichiers uniquement. L'UIP est installé dans une structure de dossiers, qui est appelée "structure de dossiers UIP". Le Client FDI® doit gérer la structure de dossiers UIP. La structure de dossiers UIP doit séparer les Variantes d'UIP afin d'éviter des conflits au niveau des noms des fichiers. Les exécutables de l'UIP doivent être installés dans un chemin qui donne un droit de navigation et de lecture. Etant donné que le Client FDI® gère la structure de dossiers, l'UIP ne doit effectuer aucun accès à un chemin absolu. Tout accès aux fichiers doit être effectué par rapport à la racine d'installation de l'UIP. Les bases de données et les fichiers d'aide (données UIP supplémentaires) de référence doivent être fournis avec l'UIP et stockés dans le dossier d'installation de l'UIP sur le Client FDI®. L'autorisation d'accès à ce dossier est en lecture seule.

Conformément à la gestion des versions décrite dans l'IEC 62769-4, la coexistence de modifications de la version majeure de l'UIP de même type doit être prise en charge. Cette prise en charge doit être effectuée en installant un UIP plus récent dans un dossier séparé.

7 Actions

7.1 Généralités

L'EDD contenue dans le Paquetage FDI®, comme cela est défini dans l'IEC 62769-4, peut comporter des méthodes EDD. Certaines méthodes EDD peuvent être exposées au Client FDI® en tant qu'Actions et peuvent être déclenchées par les Clients FDI®.

NOTE Ces Actions n'ont aucune relation avec la construction EDD ACTION.

Les Actions sont exécutées dans le Serveur FDI®. Le diagramme d'états Action est défini dans l'IEC 62769-3.

Un Client FDI® peut appeler une Action en appelant la méthode InvokeAction OPC UA (voir l'IEC 62769-5). Les changements d'état du diagramme d'états d'Action correspondant sont envoyés au Client FDI® par l'intermédiaire du mécanisme d'abonnement (voir l'IEC 62541-4). Des données supplémentaires, qui peuvent provenir d'un changement d'état, sont transférées sous la forme d'un document XML.

Une Action peut impliquer des interactions de l'utilisateur. Le résultat d'une interaction de l'utilisateur est envoyé au Serveur FDI® avec le service RespondAction (voir l'IEC 62769-5). Les données envoyées avec ce service sont transférées sous la forme d'un document XML.

Une Action peut être abandonnée par le Client ou par le Serveur.

Si le Serveur abandonne une Action, il envoie dans un premier temps une `AbortingNotification` (Notification d'Abandon). Le Client doit répondre avec une `AbortNotificationConfirmation`, mais il continue de traiter les `ActionRequests`. Dès la réception de l'élément `AbortNotification`, le Client doit désactiver le `CancelButton`. A la fin du processus d'abandon, le Serveur envoie un élément `AbortRequest` (Demande d'Abandon) au Client. Le Client répond avec un élément `AbortResponse` (Réponse à un Abandon) et ferme l'élément `ActionWindow` (Fenêtre Action).

Un Client FDI® peut abandonner une Action en procédant de la manière suivante:

- 1) Envoyer une demande au service `AbortAction` (Abandon de l'Action) (voir l'IEC 62769-5).
- 2) Répondre à une `ActionRequest` (Demande d'action) existante par l'envoi d'une `ActionResponse` (Réponse à une Action) valide.
- 3) Continuer le traitement des `ActionRequests`.
- 4) Le Serveur envoie une `AbortingNotification` après avoir démarré le processus d'abandon. Le Client doit répondre avec une `AbortNotificationConfirmation`, mais il continue de traiter les `ActionRequests`. Dès la réception de l'élément `AbortNotification`, le Client doit désactiver le `CancelButton`.
- 5) L'Action est abandonnée à la réception d'un élément `AbortingRequest` (Demande d'Abandon) envoyé par le Serveur. Le Client doit répondre avec un élément `AbortResponse` et ferme l'élément `ActionWindow`.

L'Annexe B donne un exemple d'une méthode EDD exécutée par un Serveur FDI® ainsi que l'interaction qui en résulte avec un Client FDI®. Cet exemple inclut des diagrammes d'états et les messages échangés (extraits XML).

7.2 Diagramme de séquences

Le diagramme de séquences de la Figure 8 représente l'interaction client/serveur d'un appel d'Action. Dans ce diagramme, une condition préalable selon laquelle l'Action peut être démarrée depuis une interface utilisateur affichée par le Client FDI® est admise par hypothèse.

NOTE 1 Le diagramme représente `UIDInterpreter`, `ActionWindow` et `AcknowledgeWindow` en tant que sous-systèmes du Client FDI®. Il représente également `EDDMethodExecution` en tant que sous-système du Serveur FDI®. Ces représentations sont données uniquement à des fins explicatives.

L'Action est initiée depuis l'interface utilisateur. S'il n'est pas déjà verrouillé, l'élément `InitLock` doit d'abord être appelé. Le Client FDI® appelle alors la méthode `InvokeAction` OPC UA (voir l'IEC 62769-5). Le nom de l'Action à appeler, ainsi que tous les arguments de l'Action nécessaires, sont donnés en tant qu'arguments de la méthode OPC UA.

Le Serveur FDI® répond à l'appel `InvokeAction` en créant un diagramme d'états d'exécution de l'Action et répond au Client FDI® en renvoyant un `ActionNodeId` qui représente le diagramme d'états dans le Modèle d'Information.

Le Serveur FDI® est responsable de l'exécution du diagramme d'états (comme cela est défini dans l'IEC 62769-3) et de la mise à jour de ses états dans le Modèle d'Information à l'aide de l'`ActionNodeId` fourni. L'`ActionNodeId` est également utilisé par le Client FDI® afin d'établir les abonnements avec le Serveur FDI®, dans le but de surveiller l'exécution de l'Action. Pendant que l'Action est en cours d'exécution, le Serveur FDI® met à jour le diagramme d'états et le Nœud correspondant dans le Modèle d'Information. S'il existe des abonnements pour l'`ActionNodeId`, le Serveur FDI® traite ces modifications et prévient le Client FDI® de ces dernières.

Pendant l'exécution de l'Action, les opérations telles que les notifications, la lecture et l'écriture (également vers d'autres Nœuds que celui qui comporte l'`ActionNodeId`) ne sont pas bloquées.

Le Serveur FDI® commence une Action en réglant l'état sur "Running" (En cours), puis exécute la méthode EDD. Le Client FDI® utilise le service AddMonitoredItem OPC UA (voir l'IEC 62541-4) afin d'établir un abonnement à l'aide de l'ActionNodeId fourni. Le Serveur FDI® répond à l'abonnement nouvellement créé en prévenant le Client FDI® de l'état actuel du diagramme d'états de l'Action. Dans ce diagramme de séquences, l'abonnement a été établi alors que l'exécution de l'Action n'a pas atteint un état notable, comme l'état TimeDelay. Par conséquent, la première notification au Client FDI® indique "Running". Si l'Action avait atteint l'état TimeDelay avant l'établissement de l'abonnement, la première notification au Client FDI® indiquerait "TimeDelay" puisqu'il s'agirait de l'état actuel.

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

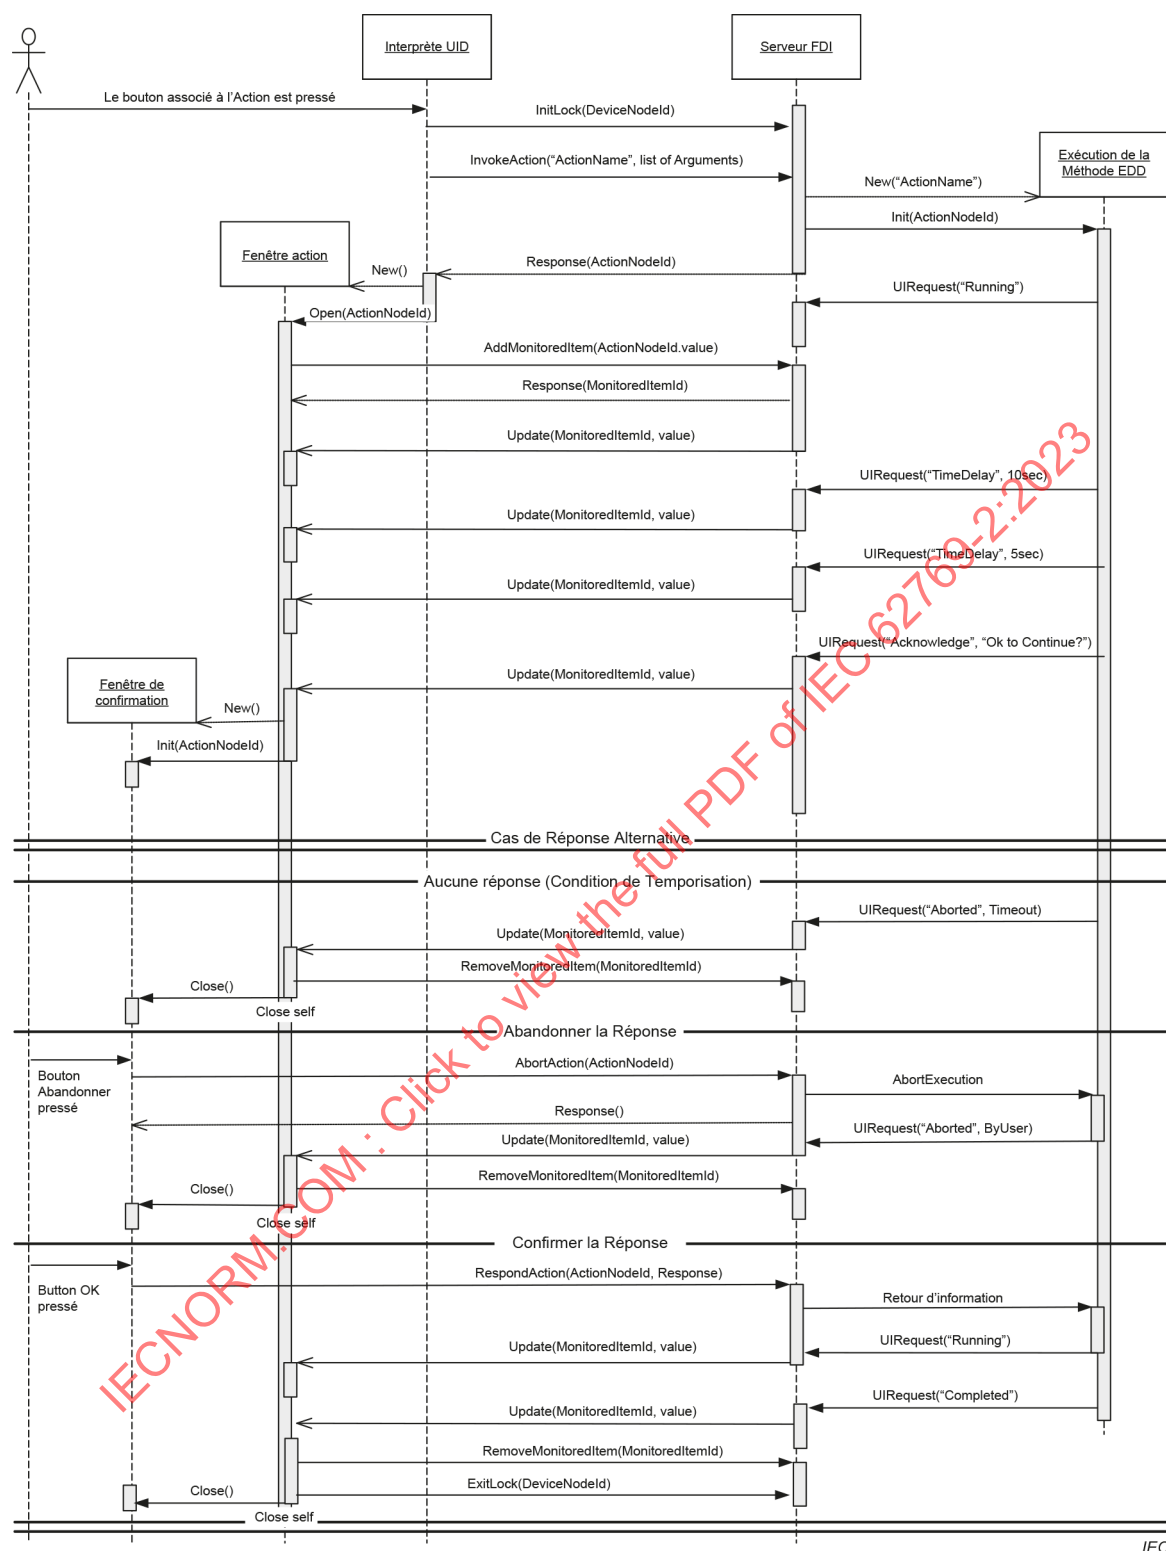


Figure 8 – Diagramme de séquences d'Action FDI®

Le Client FDI® ne doit pas maintenir un diagramme d'états d'Action.

NOTE 2 Les informations envoyées au Client FDI® comprennent les informations d'états et la dernière demande UI. Il n'y a donc pas de situation de compétition en fonction du moment auquel le Client FDI® ajoute le Nœud d'état en tant qu'élément surveillé. Même si le diagramme d'états d'Action a connu plusieurs transitions d'état, il n'est pas nécessaire que le Client FDI® les connaisse. Le comportement OPC UA normalisé veut que les informations actuelles soient envoyées lorsqu'un Nœud est ajouté en tant qu'élément surveillé.

Lorsque le Serveur FDI® entre dans l'état TimeDelay, l'ActionNodeId est mis à jour au début du retard puis à l'expiration du retard. Des mises à jour intermédiaires peuvent également être appliquées en fonction du délai de retard. La fréquence réelle des mises à jour intermédiaires est déterminée par la conception du Serveur FDI® et correspond généralement à quelques secondes. Toutes les mises à jour d'ActionNodeId sont soumises au Client FDI® par l'intermédiaire du mécanisme d'abonnement.

Dans le premier exemple de la Figure 8, le Serveur FDI® a saisi un délai de 10 secondes et envoie des mises à jour toutes les 5 secondes. Lorsque le Serveur FDI® passe à l'état WaitingForFeedback, le Modèle d'information est mis à jour, y compris l'invite utilisateur. Le diagramme d'états met en pause l'exécution de l'Action jusqu'à ce qu'une réponse de l'utilisateur soit fournie ou jusqu'à expiration d'une temporisation. Une modification du diagramme d'états donne lieu à l'envoi d'une notification au Client FDI®. Lorsque le Client FDI® détecte que le nouvel état est WaitingForFeedback, il ouvre une boîte de dialogue présentant l'invite fournie dans l'information d'état, ainsi que les moyens de délivrer un retour d'information.

Dans le deuxième exemple de la Figure 8, le Client FDI® affiche les boutons "OK" et "Abort", qui permettent de confirmer ou d'abandonner la méthode, respectivement.

Cas d'une réponse "Timeout": si l'utilisateur ne répond pas à l'invite avant l'expiration du délai du serveur, le Serveur FDI® abandonne l'exécution de l'Action. L'état dans le Modèle d'Information est défini sur "Aborted" (Abandonné), avec une indication expliquant que cela est dû à l'expiration d'une temporisation. L'exécution de l'Action se termine à cet instant, mais le Serveur FDI® maintient le Nœud d'état et l'état final jusqu'à ce que les abonnements soient résiliés, soit par le Client FDI® par la suppression de l'élément surveillé, soit par l'expiration générale de la session du Client FDI® avec le Serveur FDI®.

Cas d'une réponse "Abort": si l'utilisateur répond au Serveur FDI® par un abandon, l'exécution de la méthode est abandonnée. L'état dans le Modèle d'Information est défini sur "Aborted" (abandonné), avec une indication expliquant que cela est dû à une action de l'utilisateur. Le Serveur FDI® gère le Nœud d'état et l'état final jusqu'à ce que les abonnements soient résiliés lorsque le Client FDI® supprime l'élément surveillé ou dès l'expiration générale de la session du Client FDI® sur le Serveur FDI®. Le Nœud d'état est également préservé si l'état "Completed" ou "Aborted" du diagramme d'états de l'Action est atteint avant que le Client FDI® ait établi un abonnement ou ait ajouté le Nœud d'état comme élément surveillé.

Cas de réponse "Positive feedback": si l'utilisateur répond au Serveur FDI® par l'affirmative, l'exécution de l'Action rétablit l'état "Running" dans le Modèle d'information et continue l'exécution normale de l'Action.

Dans le troisième exemple de la Figure 8, aucun changement d'état ne survient avant la fin de l'Action et l'état qui résulte de la prochaine transition est donc l'état final "Completed". Le diagramme d'états se termine après établissement de l'état final. Le Serveur FDI® gère le Nœud d'état et l'état final jusqu'à ce que les abonnements soient résiliés lorsque le Client FDI® supprime l'élément surveillé ou dès l'expiration générale de la session du Client FDI® sur le Serveur FDI®.

NOTE 3 Aucune méthode KeepAlive séparée n'est nécessaire. La supervision de la session indique au Serveur FDI® que le Client FDI® est actif.

Dès lors que l'exécution de l'Action est terminée et que l'élément surveillé a été supprimé, le verrou peut être retiré.

7.3 Définition du schéma d'Action FDI®

Le schéma XML du XML envoyé entre le Client FDI® et le Serveur FDI® est défini à l'Annexe A.

NOTE Le schéma XML de l'Annexe A inclut également les définitions des UID.

ActionRequest est l'élément racine des documents XML échangés depuis le Serveur FDI® vers le Client FDI®, lors de l'exécution de l'Action. Ces documents XML sont envoyés au Client FDI® avec le service Update (voir l'IEC 62541-4). La partie obligatoire de ces documents est l'élément ActionState, qui spécifie l'état actuel du diagramme d'états de l'Action correspondante (voir l'IEC 62769-3). Des données supplémentaires sont spécifiées si le Client FDI® doit présenter une interface utilisateur de la part de l'Action. Le style et le contenu de l'interface utilisateur sont spécifiés dans ces données supplémentaires.

ActionResponse est l'élément racine des documents XML échangés depuis le Client FDI® vers le Serveur FDI®. Ces documents sont utilisés lorsque l'utilisateur fournit un retour d'information pour une demande d'UI. Le diagramme d'états de l'Action (comme cela est défini dans l'IEC 62769-3) doit être à l'état WaitingForFeedback ou WaitingForFeedbackA. Le Serveur FDI® remet l'état sur Running ou Aborting après réception du retour d'information de l'utilisateur. Ces documents XML sont envoyés avec le service RespondAction (comme cela est défini dans l'IEC 62769-5).

Les arguments des Actions sont également spécifiés par des documents XML. Les arguments sont spécifiés avec le type ListOfActionArguments sous la forme de paires nom-valeur.

7.4 Transfert interactif vers l'appareil

L'EDD contenue dans le Paquetage FDI®, comme cela est défini dans l'IEC 61804-4, peut comporter un menu interactive_download_to_device_root_menu. La fonctionnalité intégrale du transfert interactif vers l'appareil est exposée au Client FDI® sous forme d'action INTERACTIVE_TRANSFER_TO_DEVICE_ACTION. Cette action peut être déclenchée par les Clients FDI®. L'action est exécutée dans le Serveur FDI®. L'action INTERACTIVE_TRANSFER_TO_DEVICE_ACTION utilise le diagramme d'états Action défini dans l'IEC 62769-3.

Comme cela est défini dans l'IEC 61804-4, une action INIT_ACTION dans le menu interactive_transfer_to_device_root_menu doit être utilisée pour mettre en œuvre tout type d'interaction utilisateur avant le démarrage du téléchargement des paramètres vers l'appareil. A la fin du téléchargement, les interactions utilisateur doivent être mises en œuvre à l'aide d'une action EXIT_ACTION dans le menu interactive_download_to_device_root_menu.

Le diagramme de séquences de la Figure 9 représente l'interaction client/serveur du transfert interactif vers l'appareil.

Le Client FDI® démarre le transfert interactif vers l'appareil en appelant l'action INTERACTIVE_TRANSFER_TO_DEVICE_ACTION à l'aide du service InvokeAction. Les actions INIT/EXIT_ACTION sont exécutées par le Serveur FDI® dans le cadre de l'exécution de l'action INTERACTIVE_TRANSFER_TO_DEVICE_ACTION. A l'issue de l'action INIT_ACTION, le Serveur FDI® doit vérifier si l'ensemble de données à télécharger est cohérent conformément à l'IEC 61804-4. Si tel est le cas, le Serveur FDI® exécute le transfert vers l'appareil. Si l'ensemble de données n'est pas cohérent, le Serveur FDI® peut engager un dialogue pour demander à l'utilisateur si le téléchargement doit être abandonné ou exécuté.

En cas d'abandon de l'action INIT_ACTION, la procédure de transfert interactif vers l'appareil est abandonnée, ce qui signifie que le Serveur FDI® ne doit pas exécuter le transfert vers l'appareil.

Le Client FDI® peut collecter le statut et les résultats de l'exécution lors de l'exécution de l'action INTERACTIVE_TRANSFER_TO_DEVICE_ACTION en surveillant l'ActionNodeId.

Dès lors que la méthode InteractiveTransferToDevice est terminée, le Serveur FDI® exécute l'action EXIT_ACTION.

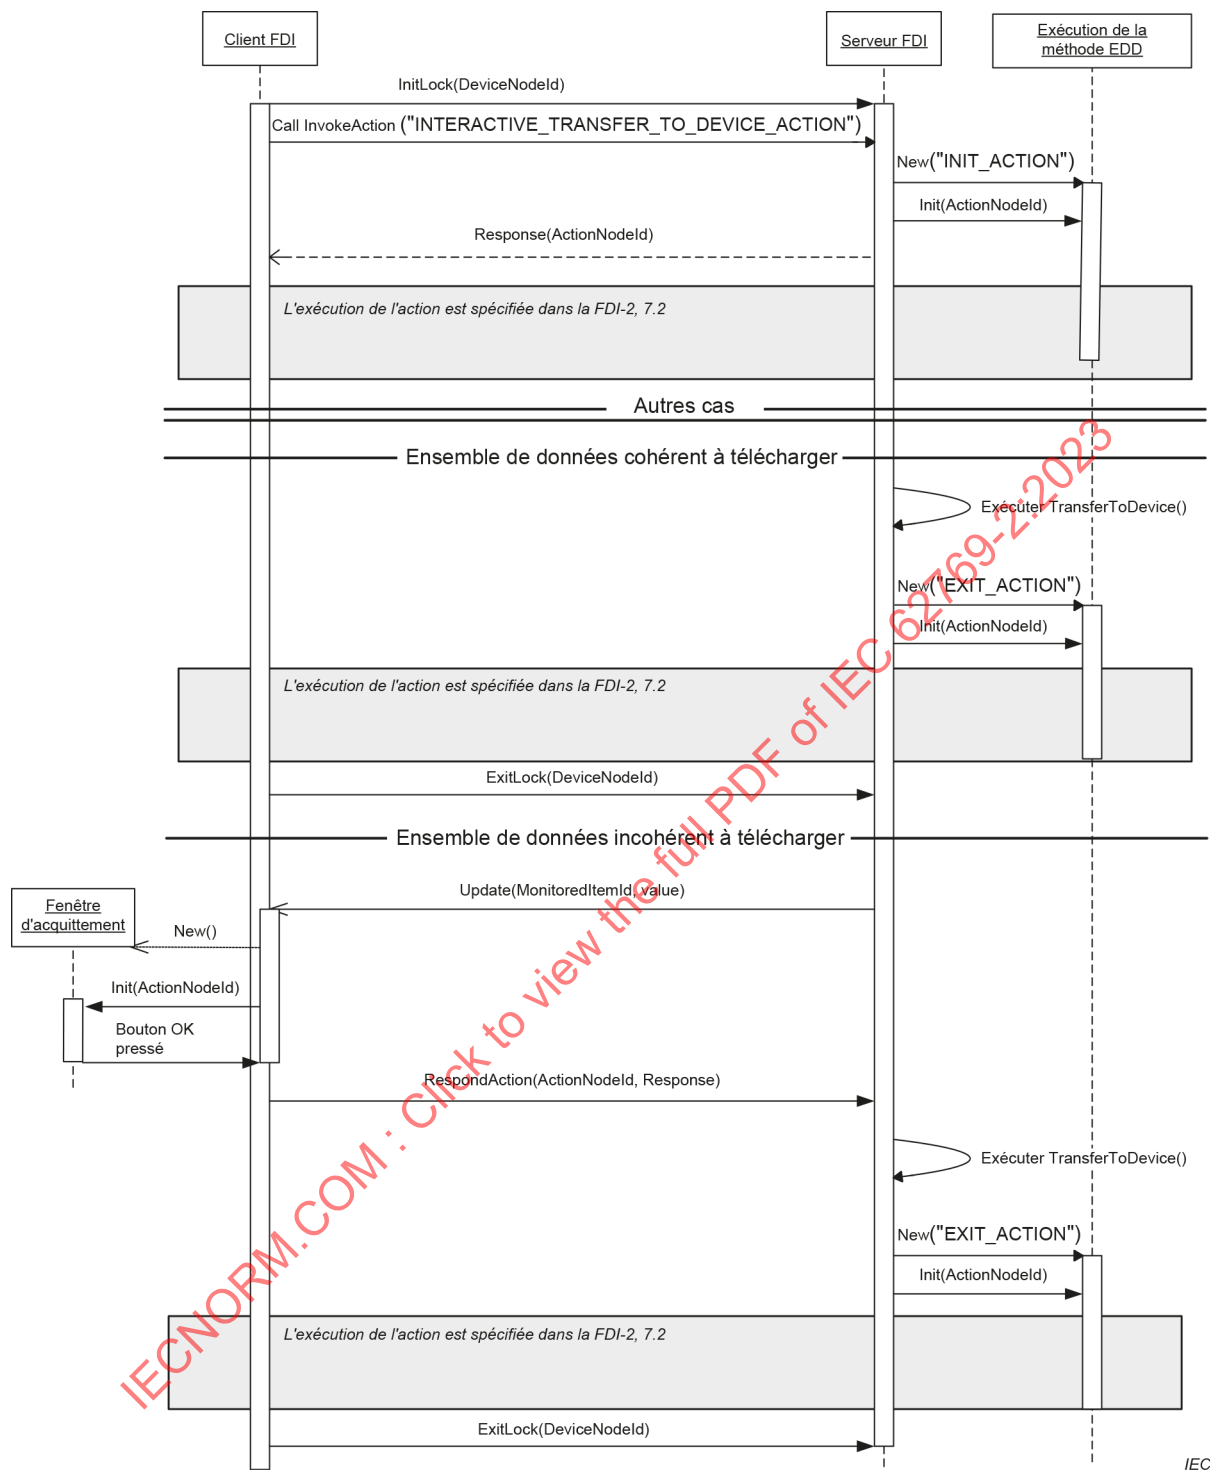


Figure 9 – Diagramme de séquences du transfert interactif vers l'appareil

8 Description d'Interface Utilisateur (UID)

8.1 Vue d'ensemble

Comme cela est défini dans l'IEC 62769-5, le FunctionalGroup (groupe fonctionnel) de niveau supérieur dans le Modèle d'Information peut contenir un Nœud UIDescription (UID) ou un ensemble de Nœuds UIPlugin (UIP). L'Attribut Value d'un Nœud UID est une chaîne et le Schéma XML de l'UID définit le contenu de ladite chaîne. Le schéma XML correspondant est défini à l'Annexe A.

NOTE 1 Le schéma XML de l'Annexe A inclut également les définitions des Actions FDI®.

En plus des Nœuds UID exposés dans le Modèle d'Information par l'intermédiaire des FunctionalGroups, des Nœuds UID non consultables peuvent être rencontrés. Comme cela est représenté à la Figure 10, les Nœuds UID non consultables sont liés à un Nœud UID parent par l'intermédiaire de l'attribut NodePath. Le Nœud UID parent peut être soit un Nœud consultable soit un Nœud non consultable.

L'élément racine de l'Attribut Value d'un nœud UID d'un FunctionalGroup doit être un élément Window, Dialog, Menu ou Table. L'élément racine de l'Attribut Value d'un Nœud UID non consultable doit être un élément Window, Dialog, Page, Menu ou Table.

L'Attribut Value du Nœud UID d'un FunctionalGroup doit contenir suffisamment d'informations pour permettre au Client FDI® de restituer les parties visibles de la vue. Le Serveur FDI® peut omettre les parties de la vue qui ne sont pas visibles. En lieu et place des informations omises, le Serveur FDI® doit fournir une référence (par l'intermédiaire de l'attribut NodePath) vers un Nœud UID non consultable qui contient les informations manquantes. Le Client FDI® peut utiliser le NodePath spécifié afin d'obtenir les informations manquantes à partir du Serveur FDI®, si cela est jugé nécessaire.

NOTE 2 La deuxième page d'une boîte de dialogue à onglets est un exemple de partie non visible d'une fenêtre. L'étiquette de la deuxième page est visible, mais le contenu de cette page ne l'est pas.

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

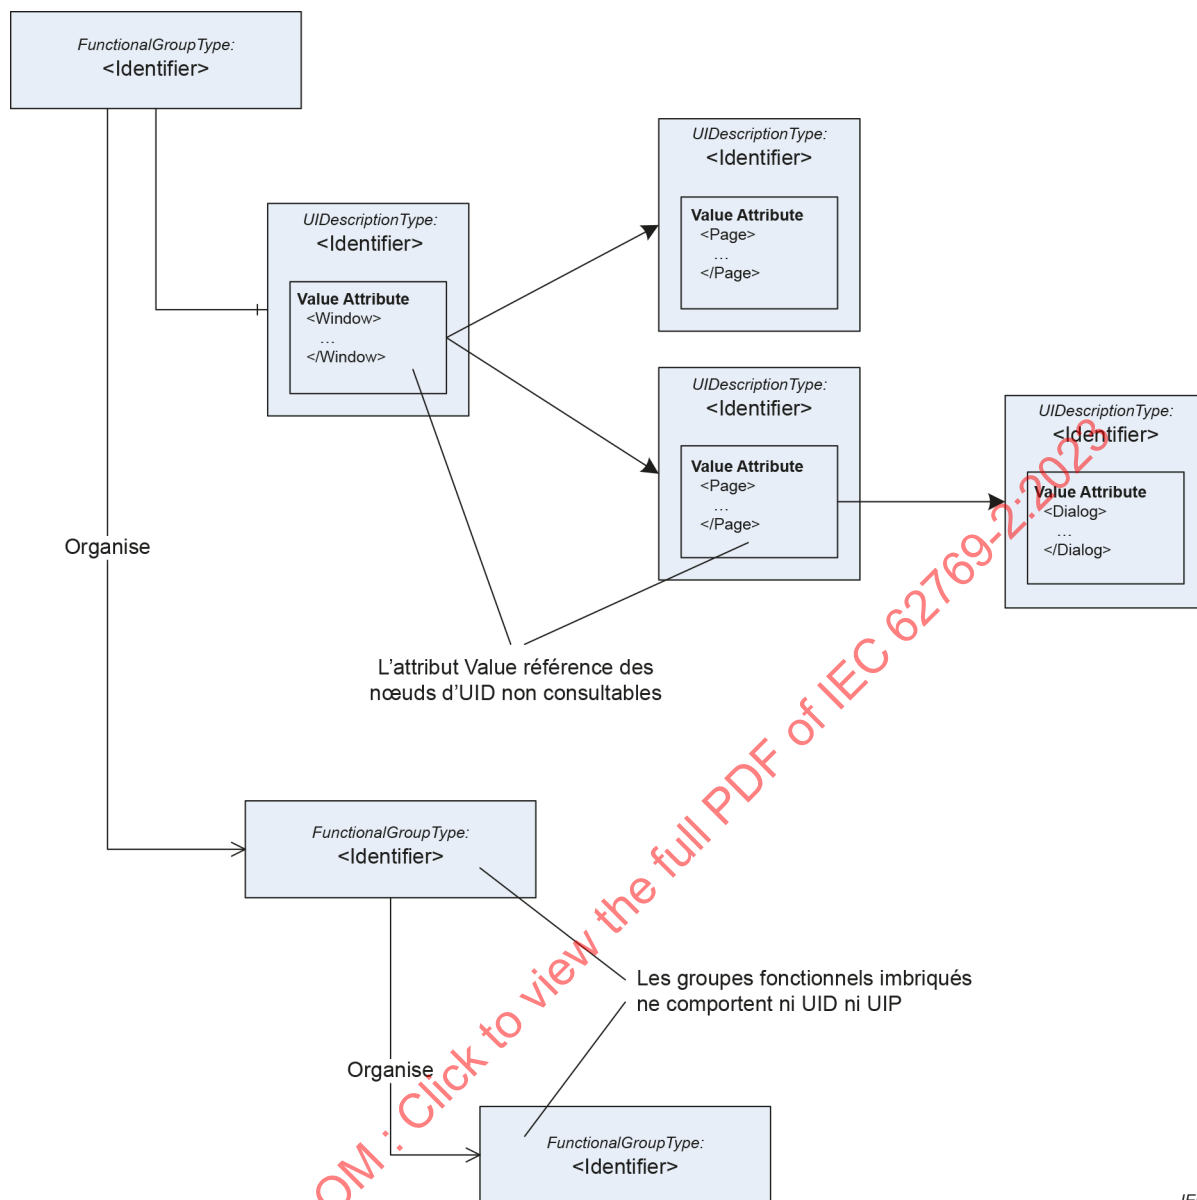


Figure 10 – Descriptions d'interface utilisateur

Le XML renvoyé du Serveur FDI® vers le Client FDI® contient des éléments relatifs à la structure de l'affichage et au contenu. Les éléments d'affichage définissent l'organisation, le positionnement et la structure visuels de l'interface utilisateur. Les éléments de contenu sont des blocs fonctionnels de base de l'interface utilisateur.

NOTE 3 Le XML inclut uniquement des éléments "valides". De nouveaux documents XML sont renvoyés lorsque la validité est modifiée.

Les éléments d'affichage sont les suivants:

- ColumnBreak
- Dialog
- EditDisplay
- Group
- Menu
- Page

- RowBreak
- Table
- Window

Les éléments de contenu sont les suivants:

- Action
- Chart
- Graph
- Grid
- Image
- Parameter
- Plugin
- Text

L'algorithme pour restituer ces éléments sur l'écran de l'ordinateur est spécifié dans l'IEC 61804-4.

NOTE 4 L'IEC 61804-3 et l'IEC 61804-4 ont une incidence importante sur la définition des UID.

8.2 Exécution de l'UID

La Figure 11 représente un exemple de la séquence d'étapes utilisée par un Client FDI® pour appeler et exécuter une Description d'Interface Utilisateur (UID). Cet exemple pose par hypothèse une condition préalable selon laquelle le Client FDI® a établi une session avec le Serveur FDI®, l'utilisateur a navigué vers un Appareil en naviguant ou en consultant le Modèle d'Information et le Client FDI® a présenté à l'utilisateur une liste de Groupes Fonctionnels. Cet exemple comprend une sous-UID référencée dans le XML de l'UID et qui contient du contenu supplémentaire. L'exemple définit la modification d'un Paramètre utilisé par le sous-UID afin de calculer le contenu supplémentaire.

NOTE 1 Le diagramme représente UIDWindow, UIDInterpreter et Device Browser Window (Fenêtre Navigation de l'Appareil) en tant que sous-systèmes du Client FDI®. Il représente également UIDExecution en tant que sous-système du Serveur FDI®. Ces représentations sont données uniquement à des fins explicatives.

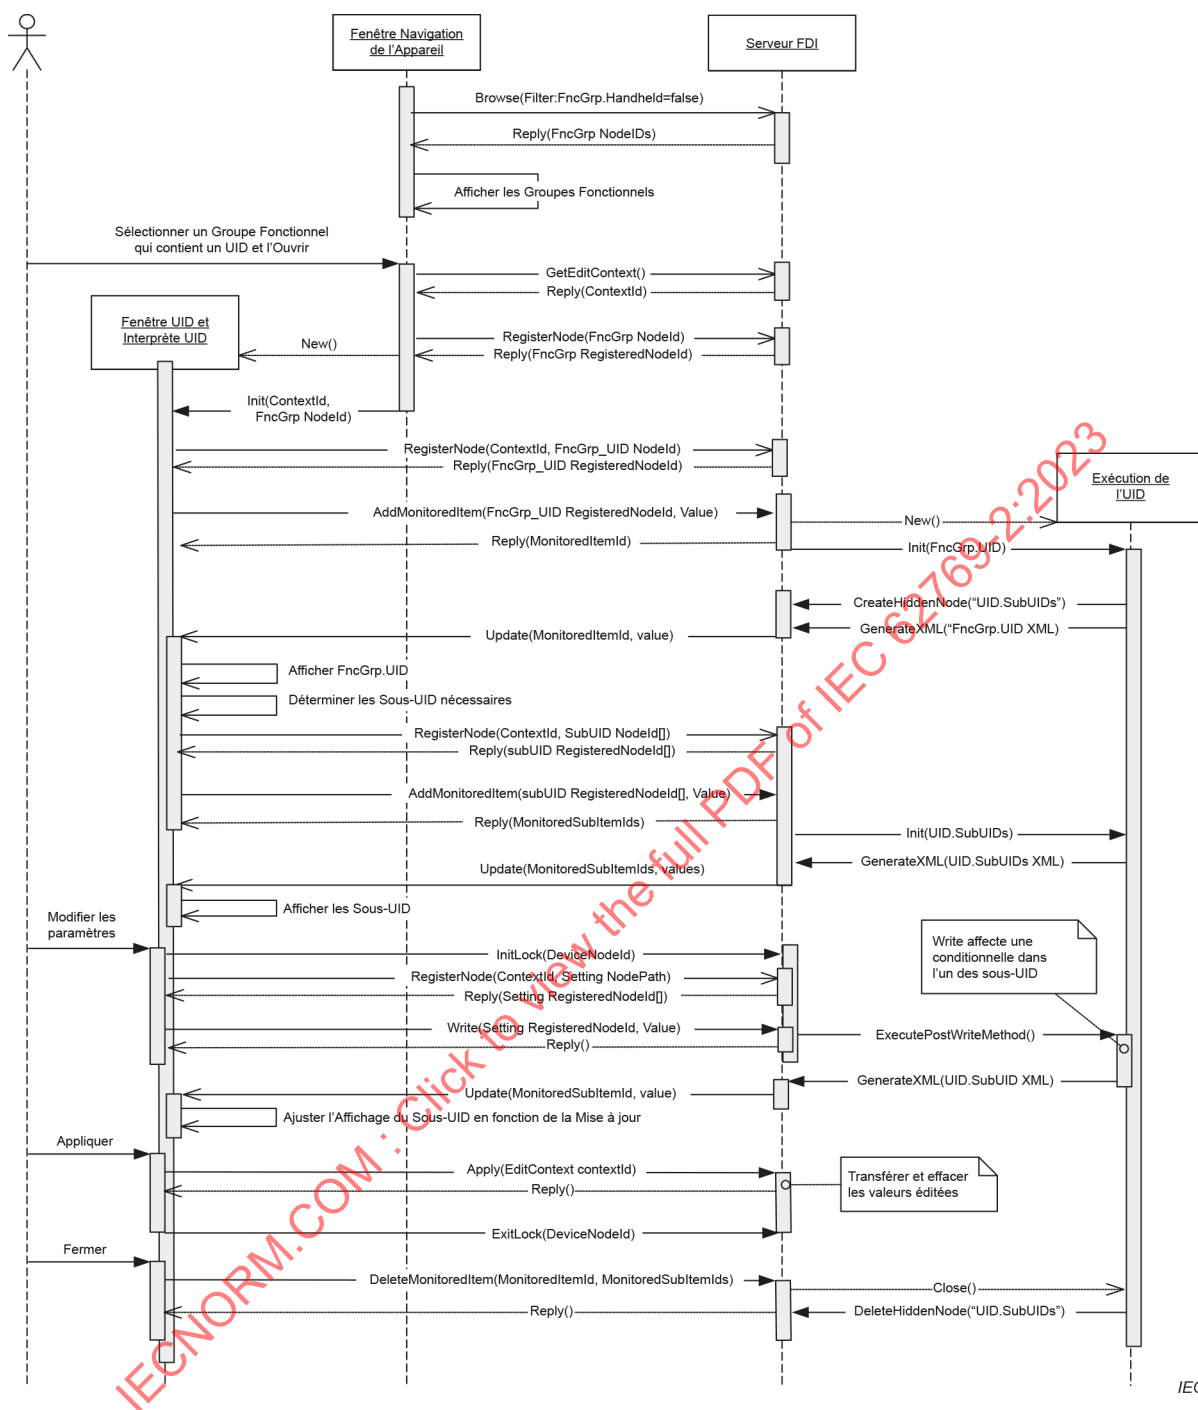


Figure 11 – Diagramme de séquences de la Description d'interface utilisateur

La séquence de la Figure 11 commence avec l'utilisateur qui sélectionne l'un des Groupes Fonctionnels pour l'ouvrir. La Fenêtre Navigation de l'Appareil (Device Browser Window) initialise l'ouverture de l'UID associée avec le FunctionalGroup sélectionné, par l'acquisition d'un EditContext et par la création d'une nouvelle Fenêtre UID et d'un interprète UID utilisé pour présenter l'UID à l'utilisateur. La Fenêtre UID nouvellement créée est initialisée en lui fournissant l'EditContext et le NodeId du Groupe Fonctionnel sélectionné dans EditContext. Pour récupérer ce NodeId, la Méthode RegisterNodesByRelativePath est appelée en transmettant le BrowsePath du FunctionalGroup et l'EditContext comme entrée.

L'élément Verrouillage est exigé pour le Service Write.

NOTE 2 L'exemple inclut donc les appels pour verrouiller (InitLock) et déverrouiller (ExitLock) l'Appareil.

La Fenêtre UID commence par établir un abonnement à la valeur de l'UID contenu dans le FunctionalGroup référencé en utilisant le service AddMonitoredItem OPC UA afin d'obtenir le contenu (c'est-à-dire la représentation XML) de l'UID. Le Serveur FDI® répond à la demande d'abonnement en créant un diagramme d'Exécution d'UID et en l'initialisant par la transmission d'un identifiant interne de l'UID sélectionnée. Le diagramme d'Exécution d'UID interprète la définition de l'UID, crée les Nœuds de sous-UID non consultables référencés dans le Modèle d'Information et génère la représentation XML de l'UID de niveau supérieur. La représentation XML générée est gérée dans le Modèle d'information pour prendre en charge l'abonnement de la Fenêtre UID. Les NodePath des sous-UID sont inclus dans le XML des UID parents. La méthode RegisterNodesByRelativePath permet de convertir les NodeSpecifiers en NodeIds. La Fenêtre UID peut utiliser ces NodeId afin de créer des abonnements ultérieurs. Le Serveur FDI® fournit le contenu de l'UID de niveau supérieur à laquelle s'est abonnée la Fenêtre UID.

La Fenêtre UID interprète le contenu XML de la valeur UID mise à jour fournie par l'abonnement et restitue l'interface utilisateur. Elle collecte également les références aux sous-UID et émet une deuxième demande de service AddMonitoredItem OPC UA pour inclure les sous-UID dans l'abonnement. Le Serveur FDI® répond au service AddMonitoredItem en initialisant les Nœuds de sous-UID résultants dans la génération des représentations XML du contenu de sous-UID. Le Serveur FDI® met à jour la Fenêtre UID avec la valeur générée de chacun des sous-UID inclus dans la demande AddMonitoredItem OPC UA.

NOTE 3 L'exemple utilise plusieurs sous-UID (mais ce nombre n'est pas spécifié). Par exemple, AddMonitoredItem(UID.SubUIDs.value) ajoute les Nœuds de tous les sous-UID à l'abonnement.

La Fenêtre UID répond aux mises à jour de l'abonnement en restituant les sous-UID dans l'interface utilisateur. En plus des sous-UID, les UID contiennent également les NodePath faisant référence aux paramètres et aux actions. RegisterNodesByRelativePath permet de traduire ces NodePath en NodeId et la Fenêtre UID utilise le service AddMonitoredItem pour s'abonner aux valeurs des paramètres. Le Serveur FDI® fournit les valeurs à la Fenêtre UID. L'UID est désormais entièrement affichée et préparée.

Lorsque l'utilisateur commence à modifier une valeur, la Fenêtre UID demande un verrou avec la Méthode InitLock.

Il existe différentes stratégies qui permettent d'obtenir un verrou. Au plus tard, il est nécessaire d'obtenir un verrou avant l'exécution des actions avant l'édition ou avant l'écriture de la valeur sur le Serveur FDI®.

Si une action avant l'édition est définie pour le paramètre modifié, la Fenêtre UID appelle cette action.

Lorsque l'utilisateur a fini de modifier la valeur, celle-ci est écrite sur l'EditContext avec le service Write. Si une action après l'édition est définie pour le paramètre modifié, la Fenêtre UID appelle cette action.

L'Exécution de l'UID détermine que la modification de la valeur résulte dans la modification d'une conditionnelle contenue dans une des sous-UID. La valeur XML d'une des sous-UID qui est modifiée est régénérée et le Modèle d'Information est mis à jour. Le Serveur FDI® réagit à la mise à jour du Modèle d'Information en notifiant la Fenêtre UID de la modification.

La Fenêtre UID traite la modification de la valeur de la sous-UID et effectue les ajustements nécessaires sur l'interface utilisateur afin de répercuter la modification.

L'utilisateur complète la séquence de l'exemple en cliquant sur un bouton "appliquer", qui indique à la Fenêtre UID de se fermer. La Fenêtre UID appelle la Méthode Apply pour ses EditContext et les modifications sont appliquées à l'appareil. Toutes les actions avant et après l'écriture sont exécutées. La Fenêtre UID supprime les abonnements en appelant le service DeleteMonitoredItem OPC UA.

Le Serveur FDI® traite l'appel DeleteMonitoredItem OPC UA par la suppression des éléments de l'abonnement. Ensuite, la Fenêtre UID appelle la Méthode Discard sur l'EditContext et le Serveur FDI® supprime les Nœuds de sous-UID non consultables et ferme l'Exécution de l'UID.

IECNORM.COM : Click to view the full PDF of IEC 62769-2:2023

Annexe A (normative)

Schéma XML

A.1 Généralités

Les définitions de schéma XML pour les UID et les Actions sont données ci-dessous. Les types sont énumérés dans l'ordre alphabétique. L'espace de nom "xs:" dans les éléments fait référence au Schéma XML W3C.

A.2 AbortRequestT

Ce type spécifie une demande envoyée depuis un Serveur FDI® vers un Client FDI®, lorsqu'une Action est abandonnée. Le Client FDI® peut informer l'utilisateur sur les raisons de l'abandon de l'Action. Après acquittement de l'utilisateur, le Client FDI® renvoie un ActionResponse au Serveur FDI®.

Le schéma XML pour un type AbortRequestT est le suivant:

```
<xs:complexType name="AbortRequestT">
  <xs:sequence>
    <xs:element name="Message" type="xs:string"/>
  </xs:sequence>
</xs:complexType>
```

Les éléments de type AbortRequestT sont décrits dans le Tableau A.1.

Tableau A.1 – Éléments d'AbortRequestT

Élément	Description
Message	Cet élément exigé spécifie la raison pour laquelle l'action a été abandonnée.

A.3 AccessT

Ce type spécifie si l'accès doit être EN LIGNE ou HORS-LIGNE.

Le schéma XML pour un type d'énumération AccessT est le suivant:

```
<xs:simpleType name="AccessT">
  <xs:restriction base="xs:string">
    <xs:enumeration value="ONLINE"/>
    <xs:enumeration value="OFFLINE"/>
  </xs:restriction>
</xs:simpleType>
```

Les valeurs d'énumération d'un type d'énumération AccessT sont décrites dans le Tableau A.2.

Tableau A.2 – Enumérations d'AccessT

Enumération	Description
ONLINE	L'accès doit être réalisé EN LIGNE.
OFFLINE	L'accès doit être réalisé HORS-LIGNE.

A.4 AcknowledgementRequestT

Ce type spécifie une demande envoyée depuis un Serveur FDI® vers un Client FDI® lorsque l'utilisateur a besoin d'acquitter une condition ou un état au sein d'une Action. Après acquittement de l'utilisateur, le Client FDI® renvoie un AcknowledgementResponse au Serveur FDI®. AcknowledgementRequest doit être utilisé uniquement pour acquitter des conditions de fonctionnement normal. AbortRequest doit être utilisé afin d'acquitter une condition qui aboutit à l'abandon de l'Action.

Le schéma XML pour un type AcknowledgementRequestT est le suivant:

```
<xs:complexType name="AcknowledgementRequestT">
  <xs:sequence>
    <xs:element name="Message" type="xs:string"/>
  </xs:sequence>
</xs:complexType>
```

Les éléments d'un type AcknowledgementRequestT sont décrits dans le Tableau A.3.

Tableau A.3 – Eléments d'AcknowledgementRequestT

Elément	Description
Message	Cet élément exigé spécifie la condition pour laquelle l'acquittement de l'utilisateur est demandé, sous la forme d'un message envoyé à l'utilisateur.

A.5 ActionListT

Ce type spécifie une liste des éléments Action.

Le schéma XML pour un type ActionListT est le suivant:

```
<xs:complexType name="ActionListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Action" type="clnt:ActionT"/>
  </xs:sequence>
</xs:complexType>
```

Les éléments d'un type ActionListT sont décrits dans le Tableau A.4.

Tableau A.4 – Eléments de GenericConnectionPointT

Elément	Description
Action	Elément de la liste.

A.6 AbortingNotificationT

Ce type est utilisé dans l'élément ActionRequest pour signaler au client que l'action a été abandonnée sur le serveur.

Le schéma XML pour un type AbortingNotificationT est le suivant:

```
<xs:complexType name="AbortingNotificationT"/>
```

A.7 ActionRequestT

Ce type spécifie une demande d'action qui provient du Serveur FDI®.

Le schéma XML pour un type ActionRequestT est le suivant:

```
<xs:complexType name="ActionRequestT">
  <xs:sequence>
    <xs:element name="EditContext" type="xs:string"/>
    <xs:choice>
      <xs:element name="AbortingNotification"
        type="clnt:AbortingNotificationT"/>
      <xs:element name="AcknowledgementRequest"
        type="clnt:AcknowledgementRequestT"/>
      <xs:element name="AbortRequest" type="clnt:AbortRequestT"/>
      <xs:element name="UIDRequest" type="clnt:UidRequestT"/>
      <xs:element name="SelectionRequest"
        type="clnt:SelectionRequestT"/>
      <xs:element name="InputRequest" type="clnt:InputRequestT"/>
      <xs:element name="ParameterInputRequest"
        type="clnt:ParameterInputRequestT"/>
      <xs:element name="InfoRequest" type="clnt:InfoRequestT"/>
      <xs:element name="DelayMessageRequest"
        type="clnt:DelayMessageRequestT"/>
    </xs:choice>
  </xs:sequence>
</xs:complexType>
```

Les éléments d'un type ActionRequestT sont décrits dans le Tableau A.5.

Tableau A.5 – Eléments d'ActionRequestT

Elément	Description
EditContext	Cet élément spécifie l'élément EditContext à utiliser lors de la modification de Variables pour cette Action.
AbortingNotification	Cet élément précise que l'action a été abandonnée sur le serveur. Pour assurer le bon déroulement du processus d'abandon, l'Interface Utilisateur ne doit pas permettre l'annulation d'autres demandes d'action.
AcknowledgementRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour que l'utilisateur acquitte une condition. Le Client FDI® ne répond pas au Serveur FDI® avant que l'utilisateur ait acquitté la condition.
AbortRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour informer l'utilisateur que l'Action va être abandonnée.
UIDRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour afficher une interface utilisateur complexe.
SelectionRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour que l'utilisateur choisisse différentes alternatives à partir d'une liste.
InputRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour que l'utilisateur puisse éditer des données.
ParameterInputRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour que l'utilisateur édite un paramètre.
InfoRequest	Cet élément facultatif spécifie une demande depuis un Serveur FDI® vers un Client FDI® pour qu'un message soit affiché pour l'utilisateur. Ce message n'exige pas d'acquittement de l'utilisateur et le Client FDI® répond immédiatement après avoir affiché le message.
DelayMessageRequest	Ce type spécifie une demande depuis un Serveur FDI® vers un Client FDI® lorsqu'un retard est demandé au cours d'une Action. Le Client FDI® informe l'utilisateur du motif et de la durée du retard. Le Client FDI® estime la durée du retard demandé et renvoie un élément DelayMessageResponse (Réponse à un Message de Retard) au Serveur FDI® après écoulement du délai alloué.

A.8 ActionResponseT

Ce type spécifie une réponse d'action vers le Serveur FDI®.

Le schéma XML pour un type ActionResponseT est le suivant:

```
<xs:complexType name="ActionResponseT">
  <xs:choice>
    <xs:element name="AbortingNotificationConfirmation"
      type="clnt:ResponseT"/>
    <xs:element name="AcknowledgementResponse" type="clnt:ResponseT"/>
    <xs:element name="AbortResponse" type="clnt:ResponseT"/>
    <xs:element name="UidResponse" type="clnt:UidResponseT"/>
    <xs:element name="SelectionResponse"
      type="clnt:SelectionResponseT"/>
    <xs:element name="InputResponse" type="clnt:InputResponseT"/>
    <xs:element name="ParameterInputResponse" type="clnt:ResponseT"/>
    <xs:element name="InfoResponse" type="clnt:ResponseT"/>
    <xs:element name="DelayMessageResponse" type="clnt:ResponseT"/>
  </xs:choice>
</xs:complexType>
```

Les éléments d'un type ActionResponseT sont décrits dans le Tableau A.6.

Tableau A.6 – Eléments d'ActionResponseT

Elément	Description
AbortingNotificationConfirmation	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande AbortingNotification d'un Serveur FDI®.
AcknowledgementResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande AcknowledgementRequest par le Serveur FDI®.
AbortResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande AbortRequest par le Serveur FDI®.
UidResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande UIDRequest par le Serveur FDI®.
SelectionResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande SelectionRequest par le Serveur FDI®.
InputResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande InputRequest par le Serveur FDI®.
ParameterInputResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande ParameterInputRequest d'un Serveur FDI®.
InfoResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande InfoRequest par le Serveur FDI®.
DelayMessageResponse	Cet élément facultatif spécifie la réponse d'un Client FDI® à une demande DelayMessageRequest par le Serveur FDI®.

A.9 ActionT

Ce type spécifie une Action, qui représente une séquence d'étapes qui exige la collaboration entre un Client FDI® et un Serveur FDI®.

Le schéma XML pour un type ActionT est le suivant:

```
<xs:complexType name="ActionT">
  <xs:complexContent>
    <xs:extension base="clnt:UiElementT">
      <xs:sequence>
        <xs:element name="Name" type="xs:string"/>
        <xs:element name="Access" type="clnt:AccessT" minOccurs="0"/>
        <xs:element name="Class" type="clnt:ActionClassT"
          minOccurs="0"/>
        <xs:element name="ListOfActionArguments"
          type="clnt:ListOfActionArgumentsT" minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

Les éléments d'un type ActionT sont décrits dans le Tableau A.7.

Tableau A.7 – Eléments d'ActionT

Elément	Description
Name	Cet élément exigé indique le nom de l'Action à laquelle la méthode InvokeAction d'un Nœud UID peut être appliquée dans un Serveur FDI®.
Access	Cet élément facultatif spécifie si l'action doit être réalisée EN LIGNE ou HORS-LIGNE.
Class	Cet élément facultatif spécifie l'attribut EDD CLASS de l'action.
ListOfActionArguments	Cet élément facultatif spécifie une liste d'arguments d'entrée qui peuvent être transmis à la méthode InvokeAction d'un Nœud UID.

A.10 AxisListT

Ce type spécifie la liste des éléments d'axe désignés d'un graphique ou d'un diagramme.

Le schéma XML pour un type AxisListT est le suivant:

```
<xs:complexType name="AxisListT">
  <xs:sequence minOccurs="0" maxOccurs="unbounded">
    <xs:element name="Axis" type="clnt:AxisT"/>
  </xs:sequence>
</xs:complexType>
```

Les éléments d'un type AxisListT sont décrits dans le Tableau A.8.

Tableau A.8 – Eléments d'AxisListT

Elément	Description
Axe	Elément d'AxisListT.

A.11 AxisT

Ce type spécifie un axe dans un graphique ou un diagramme.

Le schéma XML pour un type AxisT est le suivant:

```
<xs:complexType name="AxisT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="MaximumValue" type="clnt:VariantT"
          minOccurs="0"/>
        <xs:element name="MinimumValue" type="clnt:VariantT"
          minOccurs="0"/>
        <xs:element name="DisplayedRange" minOccurs="0">
          <xs:complexType>
            <xs:attribute name="NodePathViewMinimum"
              type="xs:string" use="required"/>
            <xs:attribute name="NodePathViewMaximum"
              type="xs:string" use="required"/>
          </xs:complexType>
        </xs:element>
        <xs:element name="Scaling" type="clnt:ScalingT"
          default="Linear" minOccurs="0"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

```

        <xs:element name="Unit" type="xs:string" minOccurs="0"/>
      </xs:sequence>
      <xs:attribute name="Name" type="xs:string" use="required"/>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>

```

Les attributs d'un type AxisT sont décrits dans le Tableau A.9.

Tableau A.9 – Attributs d'AxisT

Attribut	Description
Name	Nom unique de l'axe dans le contexte du Diagramme/Graphique dudit axe.

Les éléments d'un type AxisT sont décrits dans le Tableau A.10.

Tableau A.10 – Éléments d'AxisT

Élément	Description
MaximumValue	Cet élément exigé spécifie la valeur la plus grande située entre les limites de l'axe.
MinimumValue	Cet élément exigé spécifie la valeur la plus petite située entre les limites de l'axe.
DisplayedRange	Sn1p1t Sn1p1t
Scaling	Cet élément facultatif spécifie la manière dont il convient d'échelonner la valeur. La valeur par défaut est Linear (Linéaire).
Unit	Cet élément facultatif spécifie l'unité technique de l'axe.

A.12 BitEnumerationItemListT

Ce type spécifie le contenu d'une énumération de bits.

Le schéma XML pour un type BitEnumerationItemListT est le suivant:

```

<xs:complexType name="BitEnumerationItemListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="BitEnumerationItem"
      type="clnt:BitEnumerationItemT"/>
  </xs:sequence>
</xs:complexType>

```

Les éléments d'un type BitEnumerationItemListT sont décrits dans le Tableau A.11.

Tableau A.11 – Éléments de BitEnumerationItemListT

Élément	Description
BitEnumerationItem	Élément de l'énumération de bits.

A.13 BitEnumerationItemT

Ce type spécifie la signification d'un bit simple d'une valeur en mode point.

Le schéma XML pour un type BitEnumerationItemT est le suivant:

```
<xs:complexType name="BitEnumerationItemT">
  <xs:complexContent>
    <xs:extension base="clnt:LabelHelpT">
      <xs:sequence>
        <xs:element name="Value" type="xs:unsignedLong"/>
      </xs:sequence>
    </xs:extension>
  </xs:complexContent>
</xs:complexType>
```

Les éléments d'un type BitEnumerationItemT sont décrits dans le Tableau A.12.

Tableau A.12 – Eléments de BitEnumerationItemT

Elément	Description
Value	Cet élément exigé spécifie un bit sous la forme d'un masque binaire, c'est-à-dire que 0x1 spécifie le bit de poids faible, 0x2 spécifie le deuxième bit de poids faible, 0x4 spécifie le troisième bit de poids fort, et ainsi de suite.

A.14 ButtonListT

Ce type spécifie une liste des éléments Button (Bouton). La réponse UID contient l'index fondé sur 0 du bouton sélectionné.

Le schéma XML pour un type ButtonListT est le suivant:

```
<xs:complexType name="ButtonListT">
  <xs:sequence maxOccurs="unbounded">
    <xs:element name="Button" type="clnt:LabelT"/>
  </xs:sequence>
</xs:complexType>
```

Les éléments d'un type ButtonListT sont décrits dans le Tableau A.13.

Tableau A.13 – Eléments de ButtonListT

Elément	Description
Button	Elément de la liste de boutons.

A.15 ChartT

Ce type spécifie un graphique qui affiche les données d'un appareil. Les données sont lues à partir de l'appareil de manière périodique et continue. Il est affiché lors de l'arrivée de nouvelles données.